# **TPS65218EVM**



### **ABSTRACT**

This user's guide describes the characteristics, operation, and use of the TPS65218 evaluation module (EVM). The TPS65218EVM is a fully assembled platform for evaluating the performance of the TPS65218 power management device. This document includes schematic diagrams, a printed-circuit-board (PCB) layout, and bill of materials (BOM).

## **Table of Contents**

2 Requirements	2
2.1 Software	2
2.2 Host Computer	2
2.3 Power Supply	2
3 EVM Kit	3
4 Schematic	4
5 Terminal Block, Test Point, and Jumper Descriptions	5
6 Setup	
7 Software	8
7.1 Software Installation Instruction	8
7.2 Using the TPS65218 GUI	8
8 Bill of Materials	11
9 Layout	12
10 Revision History	
List of Figures	
Figure 3-1. TPS65218 EVM Kit	3
Figure 4-1. TPS65218 EVM Schematic	
Figure 6-1. TPS65218 EVM Setup	
Figure 7-1. GUI front Page	
Figure 7-2. GUI Device Introduction	9
Figure 7-3. GUI Register Map	9
Figure 7-4. GUI Register Controls	
Figure 9-1. Top Layer Silkscreen	12
Figure 9-2. Top Layer	12
Figure 9-3. Ground Plane	13
Figure 9-4. Mid Layer	13
Figure 9-5. Bottom Layer	
Figure 9-6. Bottom Layer Silkscreen	14
List of Tables	
Table 5-1. Terminal Block Descriptions	5
Table 5-2. Test Point Descriptions <sup>(1)</sup>	
Table 5-3. Jumper Descriptions	
Table 8-1. Bill of Materials	11
Trademarks	
Hauemarks	

Copyright © 2022 Texas Instruments Incorporated

Cortex® is a registered trademark of ARM.

All trademarks are the property of their respective owners.

**ISTRUMENTS** Introduction www.ti.com

### 1 Introduction

The TPS65218 is a highly-integrated power management solution for ARM Cortex® Microprocessors. Features of the TPS65218 include:

- 2 battery backup supplies
- 3 Buck converters
- 1 Buck-Boost converter
- USB load switch
- · General purpose LDO
- Low-voltage load switch
- High-voltage load switch

## 2 Requirements

### 2.1 Software

The EVM will power-up and operate without use of software. A GUI is supplied to provide a simple way to communicate to the device via I<sup>2</sup>C. The GUI can be downloaded from IPG-UI EVM GUI.

## 2.2 Host Computer

A computer with an available USB port is required to make use of the EVM software. The EVM software runs on the computer and communicates with the EVM via the USB2ANY interface.

# 2.3 Power Supply

A DC power supply capable of delivering up to 5 V and 3 A, and a coin cell battery or separate 3-V power supply for the backup supplies.

www.ti.com EVM Kit

# 3 EVM Kit

The EVM kit (Figure 3-1) contains the following items:

- TPS65218 evaluation board
- USB2ANY adapter
- · USB to USB micro cable
- 10-pin ribbon cable
- 30-pin ribbon cable



The 30-pin ribbon cable is not required for the TPS65218EVM.

Figure 3-1. TPS65218 EVM Kit

Schematic www.ti.com

# 4 Schematic

Figure 4-1 illustrates the schematic for this EVM.

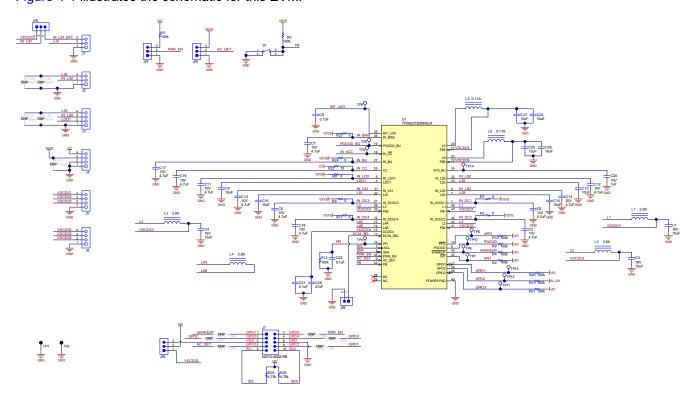


Figure 4-1. TPS65218 EVM Schematic



# 5 Terminal Block, Test Point, and Jumper Descriptions

# **Table 5-1. Terminal Block Descriptions**

Connector	Pin	Description	Note		
J1 GND		Ground	_		
	LS1	LS1 Output	_		
	EXT	External supply to LS1	Power Input (1.2 V – 3.3 V)		
J2	GND	Ground	_		
	IN_LS2	LS2 Input	Power Input (3.0 V – 5.5 V)		
	LS2	LS2 Output	_		
J3	GND	Ground	_		
	LDO1	LDO1 Output	Default 1.8 V		
	IN_LS3	LS3 Input	Power Input (1.8 V – 9.9 V)		
	LS3	LS3 Output	_		
J4	GND	Ground	_		
	GND	Ground	_		
	VSYS	DC Input	Power Input (2.7 V – 5.5 V)		
	CC	Coin Cell Battery Input	Power Input (2.2 V – 3.3 V)		
J5	GND	Ground	_		
	DC3	Buck 3 Output (DCDC3)	Default 1.2 V Output		
	DC2	Buck 2 Output (DCDC2)	Default 1.1 V Output		
	DC1	Buck 1 Output (DCDC1)	Default 1.1 V Output		
J6	GND	Ground	_		
	DC4	Buck-Boost Output (DCDC4)	Default 3.3 V Output		
	DC5	Battery Backup Supply Output (DCDC5)	1.0 V Output		
	DC6	Battery Backup Supply Output (DCDC6)	1.8 V Output		
J7	10-pin EVM connect	tor for USB2ANY cable (I <sup>2</sup> C communication)			

### Table 5-2. Test Point Descriptions(1)

Test Point	Description
GND	Ground
INT_LDO	Internal bias voltage
nWAKEUP	Wakeup output signal
nINT	Interrupt output
nPFO	Power-fail comparator output
GPO2	General purpose output 2 or DDR reset output
GPIO3	General purpose output 3 or warm reset input
PGOOD	Power good
GPIO1	General purpose output 1
SYS_BU	Battery back-up power path output
PFI	Power-fail comparator input
IN_nCC	Output indicating power source for battery backup supplies
PGOOD_BU	Power good for backup supplies

(1) Test points are not designed to carry current, they are intended for measuring voltage.

## **Table 5-3. Jumper Descriptions**

Table of the amport Decomptions							
Jumper	Description	Default Position					
JP1	Ties PWR_EN to VIO or GND	PWR_EN tied to VIO					
JP2	Ties DC34_SEL pin to ground. Remove and jump with resistor for alternate voltage selections.	DC34_SEL tied to GND					



**Table 5-3. Jumper Descriptions (continued)** 

Jumper	Description	Default Position
JP3	Selects LS1 input between DCDC3 output and external supply from J1	IN_LS1 tied to DC3
JP4	Ties VIO to either DCDC4 output or 3.3-V supply from USB2ANY adaptor (J9). VIO supplies the pull-up voltage for the device I/Os.	VIO tied to V3p3
JP5	Ties AC_DET pin to either VSYS or GND. Tying to GND causes the device to start upon VSYS application.	AC_DET tied to VSYS

www.ti.com Setup

## 6 Setup

Figure 6-1 displays an example setup for using the TPS65218 EVM.

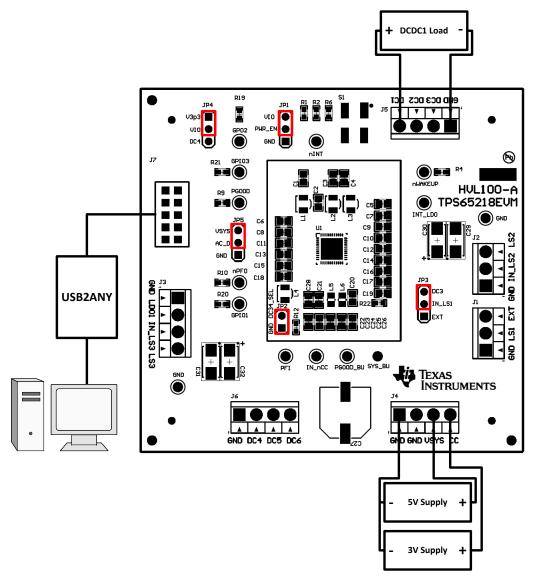


Figure 6-1. TPS65218 EVM Setup



### 7 Software

### 7.1 Software Installation Instruction

A GUI is supplied to provide a simple way to communicate to the device via I<sup>2</sup>C. The GUI can be downloaded from: IPG-UI EVM GUI

Information on the installation of the IPG-UI can be found in the IPG-UI User's Guide.

You will also need to download the BOOSTXL-TPS65218 IPG-UI Device Support File. After you finish setting up the IPG-UI software, run the installer associated with your operating system to add the TPS65218 device file to your IPG-UI device library.

## 7.2 Using the TPS65218 GUI

Detailed information regarding the usage of the IPG-UI can also be found in the *IPG-UI User's Guide*. A brief overview is provided here for reference.

The proper device must first be selected from the "Select Devices" drop-down menu.

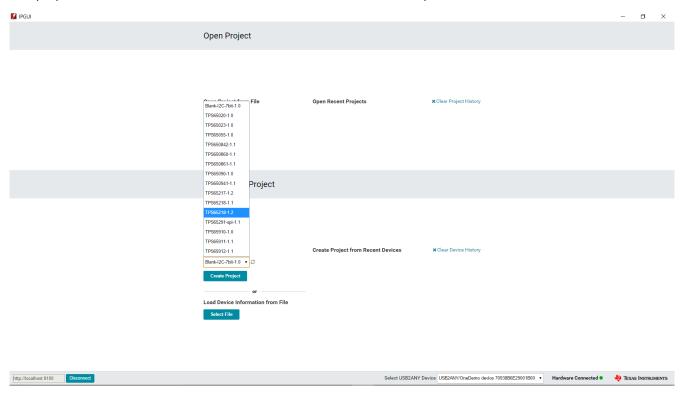


Figure 7-1. GUI front Page

www.ti.com Software

From there, the next screen is the device introduction page, which includes a brief overview as well as the functional block diagram for the device.

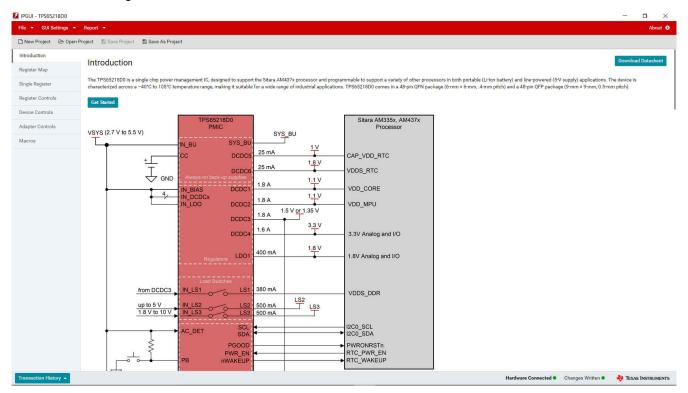


Figure 7-2. GUI Device Introduction

Finally, clicking on "Get Started" or on "Register Map" takes you to the I<sup>2</sup>C controls for the device sorted by register address.

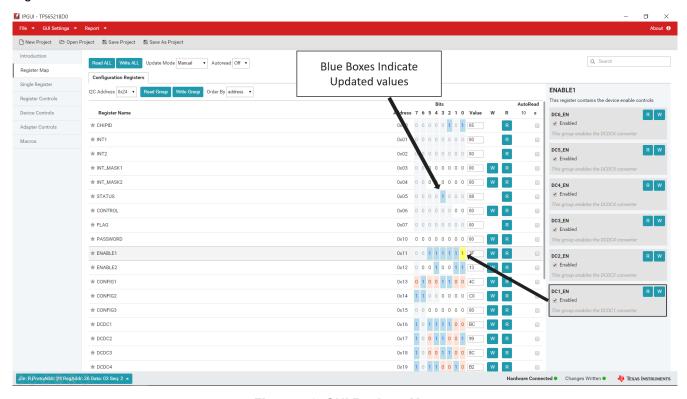


Figure 7-3. GUI Register Map



Software INSTRUMENTS
www.ti.com

Alternatively, the part can be controlled using the "Register Controls" tab to sort by functionality rather than by

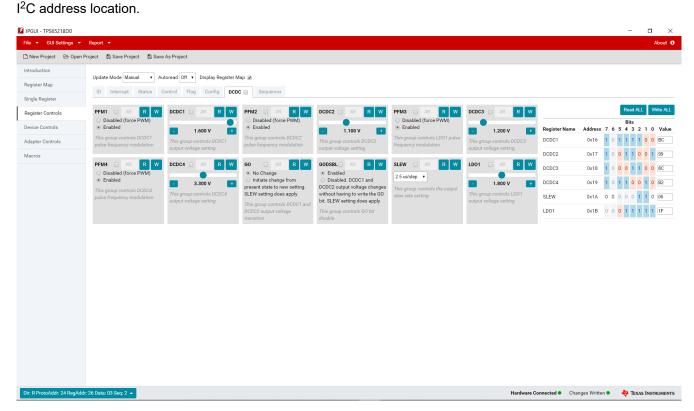


Figure 7-4. GUI Register Controls

With this information, it is possible to begin evaluating the TPS65218 device.

www.ti.com Bill of Materials

# 8 Bill of Materials

Table 8-1 lists the BOM for this EVM.

## Table 8-1. Bill of Materials

			IUN	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	on Materiais			
Designator	Description	Value	Voltage Rating	Dielectric	Footprint	Qty.	Manufacturer	Manufacturer PN
C1, C3, C4	Capacitor	10µ	16V	X5R	805	3	MuRata	GRM21BR61C106KE15L
C8	Capacitor	10μ	6.3 V	X7R	805	1	TDK	C2012X7R0J106K125AB
C2, C5–C7, C11, C12, C14, C17– C19	Capacitor	4.7µ	10V	X7R	805	10	TDK	C2012X7R1A475K125AC
C10, C16, C23– C26	Capacitor	10μ	10V	X7R	805	6	TDK	C2012X7R1A106K125AC
C9, C21, C22	Capacitor	100n	100V	X5R	805	3	TDK	C2012X5R2A104K125AA
C13	Capacitor	4.7µ	25V	X5R	805	1	TDK	C2012X5R1E475K125AB
C15	Capacitor	10µ	16V	X7R	805	1	Samsung	CL21B106KOQNNNE
C28	Capacitor	47µ	10V	X5R	805	1	TDK	C2012X5R1A476M125AC
C20	Capacitor	1μ	10V	X7R	805	1	TDK	C2012X7R1A105K
C27	Capacitor	470µ	25V		CAP_EEE Size G	0	Panasonic	EEE1EA471UAP
C29, C30, C31, C32	Capacitor	68µ	16V		6032	0	Kemet	B45197A3686+30
L1, L2, L3, L4	Inductor	1.5µ			IND_SPM3012	4	TDK	SPM3012T-1R5M
L5, L6	Inductor	10µ			805	2	TDK	MLZ2012N100LT
R1, R2, R4, R6, R9, R10, R12, R19, R20, R21	Resistor	100K			603	10	Vishay-Dale	CRCW0603100KFKEA
R3, R5, R7, R8, R11, R23, R24	Resistor	0			805	7	Vishay-Dale	CRCW08050000Z0EAHP
R13–R18	Resistor	1K			603	0	Vishay-Dale	CRCW06031K00FKEA
R22	Resistor	10			603	1	Vishay-Dale	CRCW060310R0JNEAHP
R25, R26	Resistor	4.75K			603	2	Vishay-Dale	CRCW06034K75FKEA
S1	Switch		32V		6.3x5.36x6.6 mm	1	C&K Components	KT11P2JM34LFS
U1	PMIC				RSL (S-PQFP-N48) 0.4 pitch	1	Texas Instruments	TPS65218D0

Layout www.ti.com

# 9 Layout

Figure 9-1 through Figure 9-6 illustrate the PCB layouts for the evaluation module.

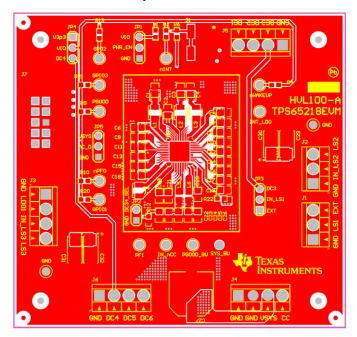


Figure 9-1. Top Layer Silkscreen

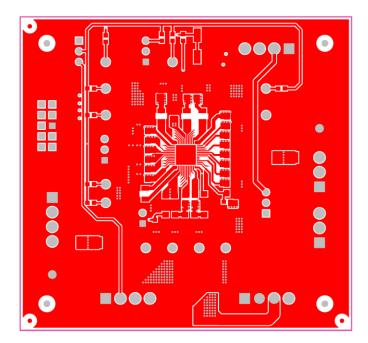


Figure 9-2. Top Layer

www.ti.com Layout

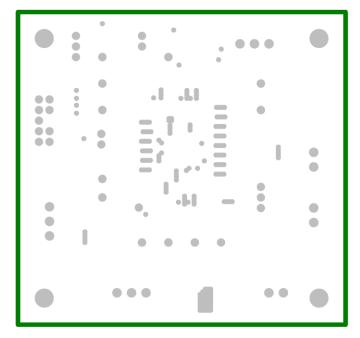


Figure 9-3. Ground Plane

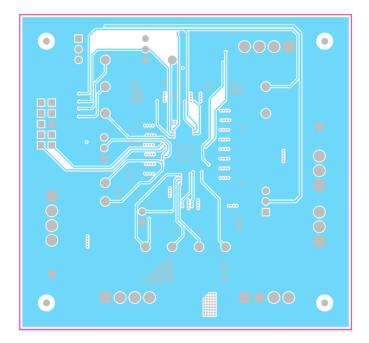


Figure 9-4. Mid Layer

Layout INSTRUMENTS
www.ti.com

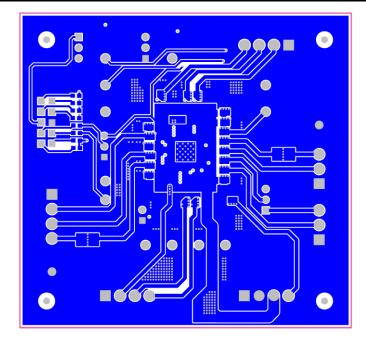


Figure 9-5. Bottom Layer

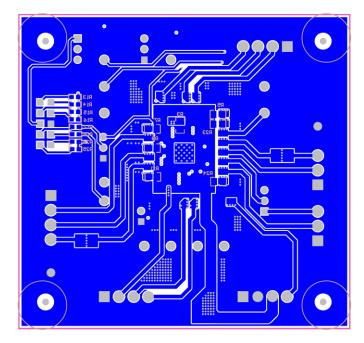


Figure 9-6. Bottom Layer Silkscreen

www.ti.com Revision History

# **10 Revision History**

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Revision A (August 2022) to Revision B (October 2022)				
Updated EVM Schematic	4			
Updated Bill of Materials	11			
Changes from Revision * (November 2014) to Revision A (August 2022)	Page			
• Updated the numbering format for tables, figures, and cross-references throughout the document	1			
Changed GUI description	2			
Updated link to software	<mark>2</mark>			
Changed links to GUI and supporting hardware				
Updated descriptions.	8			
Changed topic title	8			
Changed steps to use GUI	8			
Added new images	8			
Updated software links	8			

### STANDARD TERMS FOR EVALUATION MODULES

- Delivery: TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or
  documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance
  with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
  - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
  - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 Limited Warranty and Related Remedies/Disclaimers:
  - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
  - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after the defect has been detected.
  - 2.3 Tl's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. Tl's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by Tl and that are determined by Tl not to conform to such warranty. If Tl elects to repair or replace such EVM, Tl shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

# WARNING

Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.

User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.

NOTE:

EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGREDATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.

### 3 Regulatory Notices:

### 3.1 United States

3.1.1 Notice applicable to EVMs not FCC-Approved:

**FCC NOTICE:** This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

#### CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

### **Concerning EVMs Including Radio Transmitters:**

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## **Concerning EVMs Including Detachable Antennas:**

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types lated in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

### Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

### 3.3 Japan

- 3.3.1 Notice for EVMs delivered in Japan: Please see http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
  - https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html
- 3.3.2 Notice for Users of EVMs Considered "Radio Frequency Products" in Japan: EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

- 1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
- 3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above. User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。 技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの 措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用 いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。
- なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。 上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

- 3.3.3 Notice for EVMs for Power Line Communication: Please see http://www.tij.co.jp/lsds/ti\_ja/general/eStore/notice\_02.page 電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html
- 3.4 European Union
  - 3.4.1 For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- 4 EVM Use Restrictions and Warnings:
  - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
  - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
  - 4.3 Safety-Related Warnings and Restrictions:
    - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
    - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
  - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
- 5. Accuracy of Information: To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

### 6. Disclaimers:

- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
- 7. USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS. USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

- 8. Limitations on Damages and Liability:
  - 8.1 General Limitations. IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TIMORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.
  - 8.2 Specific Limitations. IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
- 9. Return Policy. Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
- 10. Governing Law: These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2023, Texas Instruments Incorporated

### IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale, TI's General Quality Guidelines, or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2025, Texas Instruments Incorporated

Last updated 10/2025