DRV8351 Evaluation Module



Description

The DRV8351 is a gate driver IC for three-phase motor drive applications and provides three high-accuracy trimmed and temperature compensated half-bridge drivers, each capable of driving high-side and low-side Ntype MOSFETs.

Along with the hardware of the DRV8351, the TMS320F280049C microcontroller-based board has reference software that sends necessary signals to the DRV8351 to spin a 3-phase Brushless-DC motor. GuiComposer software allows the user to program settings, enable the motor to spin, and monitor the system from fault conditions.

Get Started

- 1. Order the DRV8351EVM and TMS320F280049C
- 2. Read the DRV8351EVM user's guide.
- Download the comprehensive reference design files.
- Refer to the data sheet or E2E for questions and support.

Features

- 6 40V operation, 30A peak H-bridge output current
- Onboard CSAs for three-phase low-side current measurement
- Onboard buck for GVDD generation and device internal bootstrap diodes
- Supply LEDs, fault LEDs, and temperature sensor for user feedback
- C2000 (LAUNCHXL-F280049C) sensored trapezoidal firmware available

Applications

- E-bikes, e-scooters, e-mobility
- · Fans, pumps, and servo drives
- · Brushless-DC (BLDC) Motor Modules and PMSM
- · Cordless garden, power tools, lawnmowers
- · Cordless vacuum cleaners
- Drones, robotics, and RC toys
- Industrial and logistics robots



1 Evaluation Module Overview

1.1 Introduction

This document is designed to be used as a startup guide to the DRV8351EVM and LAUNCHXL-F280049C designs. This document is intended for the engineers involved in the design, implementation, and validation of DRV8351 and TMS320F280049C reference software.

The scope of this document is to provide the user with a guide to evaluate the DRV8351 device with a TMS320F280049C isolated board. This document covers the hardware connections required between boards and external motor and supplies. When the hardware connections are complete, the user is required to download the necessary tools and software to spin a motor.

The reference software is composed of GuiComposer software with sensored trapezoidal algorithm for BLDC motor control.

This document is provided with the DRV8351EVM customer evaluation module (EVM) as a supplement to the DRV8351 data sheet. This user's guide details the hardware implementation of the EVM.

1.2 Kit Contents

- DRV8351EVM
- · EVM Disclaimer Read Me

1.3 Specification

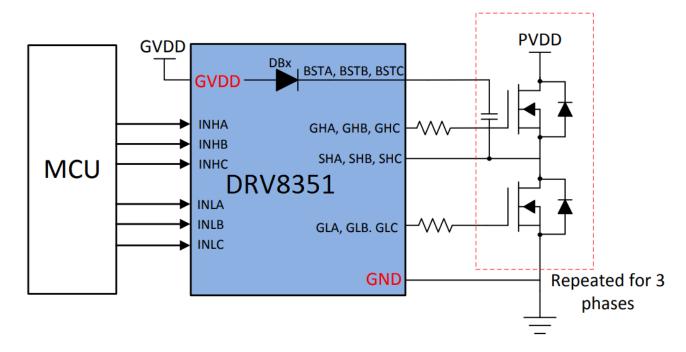


Figure 1-1. DRV8351 Device Block Diagram

1.4 Device Information

The DRV8351EVMs are designed to be evaluated only with the LAUNCHXL-F280049C MCU PCB which must be ordered separately. The $3.3V_{DC}$ power to the LAUNCHXL-F280049C is provided from the DRV8351EVM. To verify high voltage isolation between the DRV8351EVM and the LAUNCHXL-F280049C board, the three isolation jumpers must be removed as shown below.

Although the MCU PCB provides isolation of up to $3000V_{RMS}$ to the USB, the DRV8351EVM is considered an electrically live EVM and is not intended nor designed for isolation voltage testing. Voltages exceeding the standard EVM ratings as specified on the data sheet can cause personal injury, electrical shock hazard, damage the EVM, or a combination.



WARNING

Additionally, do not leave power connections to the EVM connected while not in operation.

WARNING



Hot surface. Contact can cause burns. Do not touch.

WARNING



High Voltage. Electric shock is possible when connecting board to live wire. The board must be handled with care by a professional.

For safety, use of isolated test equipment with overvoltage and overcurrent protection is highly recommended.

Hardware www.ti.com

2 Hardware

2.1 Hardware Connections Overview

The following section describes the EVM hardware and connections to the external supply, hall sensors, PC via USB, and motor.



Figure 2-1. EVM Board Overview

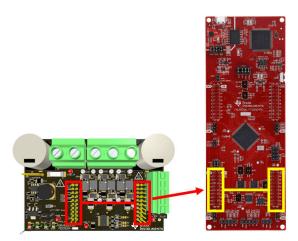


Figure 2-2. DRV8351EVM Connecting to LAUNCHXL-F280049C

The DRV8351EVM must plug into the lower LAUNCHXL-F280049C LaunchPad headers as shown below.

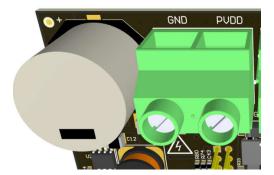


Figure 2-3. PVDD Input (J4)

www.ti.com Hardware

WARNING

To minimize the risk of potential shock hazard and personal injury, remove all power connections and interfaces to the DRV8351EVM when not in use.

The DRV8351EVM is designed for an input supply from $6V_{DC}$ to $40V_{DC}$ and up to 25A continuous drive current (software limited). The input connects to J4 with the noted polarity. PVDD_TP connects to the same node but must not be used for high current input. PVDD input is fused with a 30A fuse and the input connector is rated for 32A.

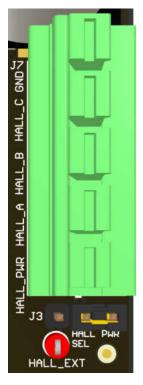


Figure 2-4. Hall Sensor Input and Power Connections (J7)

Hall sensors are connected to J7 including hall power and GND. The $3.3V_{DC}$ supply to the Hall sensors is supplied from the 3.3V LDO on the EVM. External hall power can be input through the HALL_EXT test point if a different supply or voltage level is desired. To use the included 3.3V LDO to power the halls, connect J3 on the right side to pins 1:2 as shown. To use HALL_EXT, connect J3 on the left side to pins 2:3. To insert or remove wires/terminals on J7, use a flat blade screwdriver to push down the respective tab on top of the J7 connector.



Figure 2-5. Motor Phase Connector (J5)

Hardware Www.ti.com

WARNING

Motor Phase connections must match the hall sensor connection sequence. For example, MOTA must match HALL_A, MOTB must match HALL_B, MOTC must match HALL_C. The phases must also be in sequential order; A, then B, then C.

If the motor phases do not match the hall sensors or the connections are made out of order, then the motor does not spin smoothly and current consumption increases.

The three phase inputs of the motor connect to MOTA/MOTB/MOTC through connector J5.

2.2 Faults, Indicators, and Jumper Settings

The DRV8351 implements bootstrap undervoltage, GVDD undervoltage, and thermal shutdown in case of overtemperature. See the DRV8351 data sheet for more information on DRV8351 fault support.

The DRV8351EVM implements overvoltage and undervoltage on the PVDD and GVDD supplies as well as gross over-current protection. Status LEDs for the 3.3V, PVDD, GVDD, and FAULT are included and shown below.

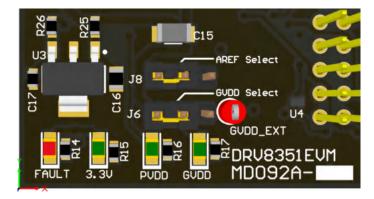


Figure 2-6. Status LEDs, AREF Select, and GVDD Select

The FAULT LED lights up if the EVM senses a fault due to the following conditions:

FAULT	Lower Limit	Upper Limit	Action Taken
PVDD	6V	100V	PWM Input forced to 0%.
GVDD	6V	20V	PWM Input forced to 0%.
Over-Current	-25A	25A	PWM Input forced to 0%.

The Faults can be reset in the GUI software using the CLEAR FAULTS button. More details on the GUI can be found in the Software section below.

The AREF Select jumper selects the offset for the Current Shunt Amplifiers on the EVM. The default position is to the left on pins 1:2 which configures the CSA for Bi-directional mode (offset 1.65V) allowing the CSA input to sense positive or negative current. Placing the jumper to the right on pins 2:3 configures the CSA for Unidirectional mode (offset 0V) which allows only positive currents to be measured. This does increase the measurement range of the CSA.

The GVDD Select jumper allows the user to use the built-in 12V Buck Regulator to generate GVDD or input externally through GVDD_EXT. The default position is to the left on pins 1:2, which configures the EVM for internal mode (GVDD from the buck regulator). Placing the jumper to the right on pins 2:3 configures the board for external GVDD mode (GVDD supplied into GVDD EXT test point).

www.ti.com Hardware

2.3 EVM Hardware Quick-Start

This section describes the steps to prepare the DRV8351EVM for first motor spin-up. This section assumes the default jumper positions mentioned above are used.



Figure 2-7. JP1/JP2/JP3 Removed

- 1. Make sure that the isolation jumpers JP1/JP2/JP3 on the LAUNCHXL-F280049C have been removed.
- 2. Plug the DRV8351EVM onto the lower position of the LAUNCHXL-F280049C board.
- 3. Connect motor phase connections to the respective MOTA/MOTB/MOTC inputs on J5, making sure to match A. B. and C.
- 4. Connect the hall sensor connections, hall power, and ground to J7. Make sure that Hall A, B, and C are in the correct order.
- 5. Connect the provided micro-USB cable to the LAUNCHXL-F280049C.
- 6. Connect PVDD and GND to connector J4. A low current limit of 300mA on the PVDD supply is recommended for first power-up to make sure the EVM is connected correctly. If there is no issue upon power-up, then the current limit can be raised to allow for current based on your motor specifications.
- 7. Start the GUI per the instructions below in the software section.

Software www.ti.com

3 Software

3.1 DRV8351 EVM GUI Software

This section details the features of the EVM GUI Software. The GUI is written in GUI Composer and is available on the development software gallery at dev.ti.com/gallery. Once logged into the TI system, if users cannot find the GUI, then users need to request access from a TI representative.

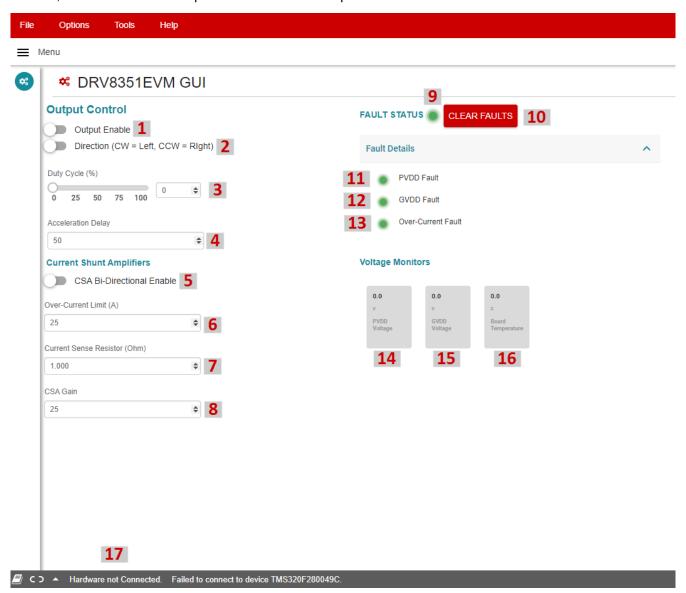


Figure 3-1. DRV8351EVM GUI Software

www.ti.com Software

The GUI connect to and program the C2000 MCU on the LAUNCHXL-F280049C board when launched, assuming the board is connected and powered.

The GUI includes the following indicators and controls.

Item #	Item Name	Item Description
1	Output enable	This enables or disables the Duty Cycle slider. When disabled, the Duty Cycle is automatically set to 0%.
2	Direction	This changes the direction the motor is spinning
3	Duty cycle %	This controls the Duty Cycle % input sent to the DRV8351. Note that the PWM frequency is fixed at 20kHz.
4	Acceleration delay	Number of processing cycles to skip in each update of the PWM and GUI controls. Increase this for slower PWM update rate or decrease for faster PWM update rate.
5	CSA bi-directional enable	Enabled by default, this controls the software offset for the CSA. This must match the selection of jumper J8.
6	Over-current limit	Software Over-Current limit for gross overcurrent detection and Fault.
7	Current sense resistor	Current sense resistor value populated on board, default is 0.003 ohms.
8	CSA gain	CSA gain resistor setting, hardware resistor, default 10V/V.
9	Fault status LED	Indicator for overall Fault status. Logical OR of all faults.
10	CLEAR FAULTS	Click this button to clear the Fault warning. If the fault persists, then this control does not disable or clear the faults.
11	PVDD fault LED	Indicates a PVDD fault has occurred, either overvoltage or undervoltage.
12	GVDD fault LED	Indicates a GVDD fault has occurred, either overvoltage or undervoltage.
13	Over-current fault LED	Indicates a gross Over-Current fault has occurred. Limit is set by control (5).
14	PVDD voltage indicator	PVDD voltage sensed by the MCU.
15	GVDD voltage indicator	GVDD voltage sensed by the MCU.
16	Board temperature	Temperature sensor on the bottom of the PCB located under the FETs.
17	Connection status and control	Displays if the GUI is connected to the hardware.

Once the hardware is connected, the FAULT Status and Voltage Monitors must match the EVM. If these do not match, then remove EVM power and recheck the setup.

To spin the motor:


- 1. Enable the PWM using the Output Enable toggle switch.
- 2. Use direction to toggle the direction the motor spins.
- 3. Use the Duty Cycle slider or input field to change the PWM Input Duty Cycle.
- 4. The motor now spins.


Hardware Design Files www.ti.com

4 Hardware Design Files


4.1 Schematics


This section illustrates the DRV8351EVM schematics.

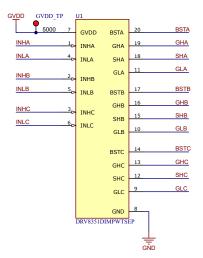


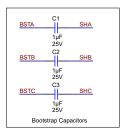




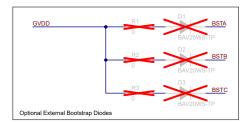

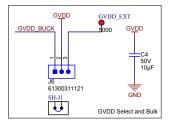


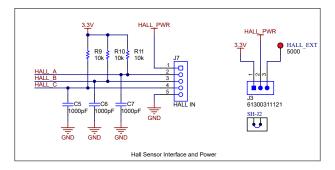



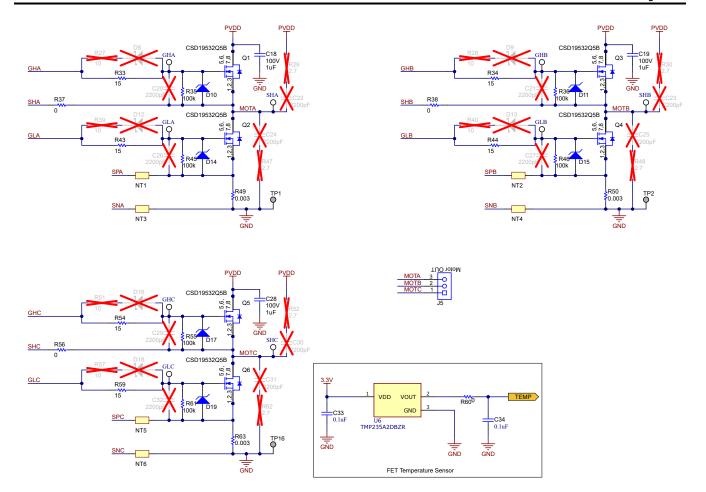



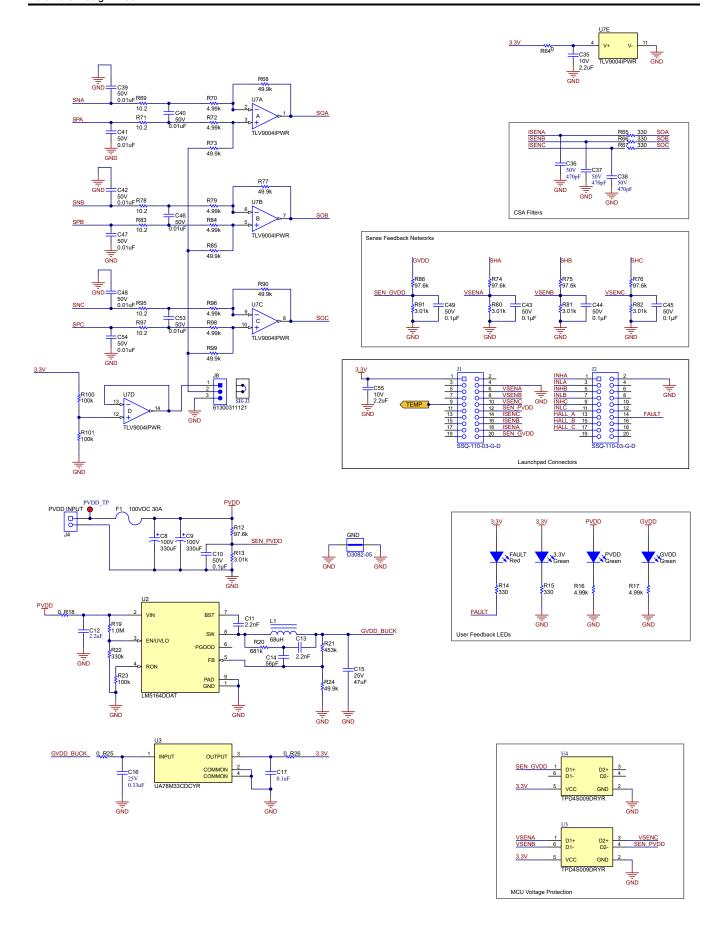

4.2 PCB Layouts

This sections illustrates the PCB layers of the DRV8351EVM.

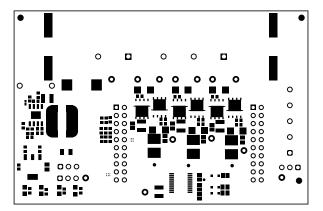


Figure 4-1. Top Solder

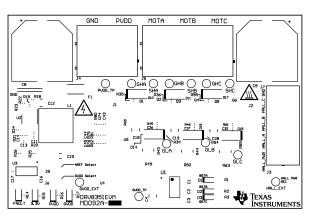


Figure 4-2. Top Overlay

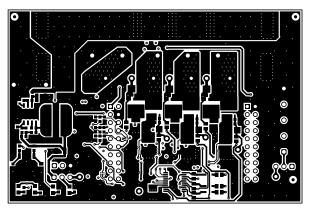


Figure 4-3. Top Layer

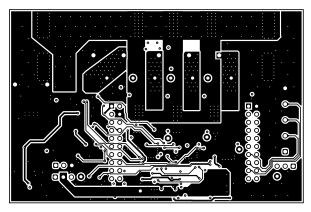


Figure 4-4. Layer 2

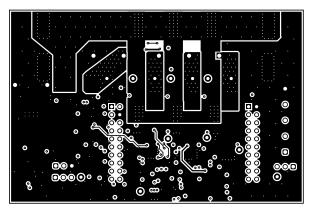


Figure 4-5. Layer 1

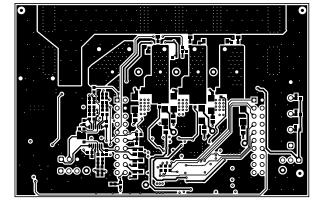


Figure 4-6. Bottom Layer

Hardware Design Files www.ti.com

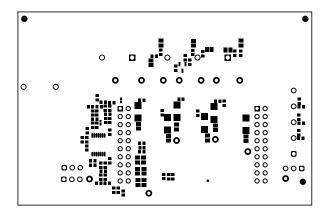


Figure 4-7. Bottom Solder

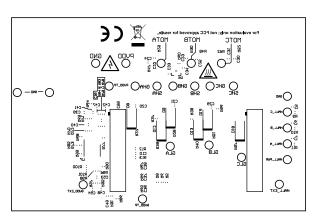


Figure 4-8. Bottom Overlay

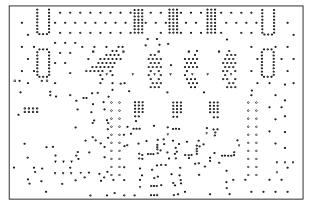


Figure 4-9. Drill Drawing

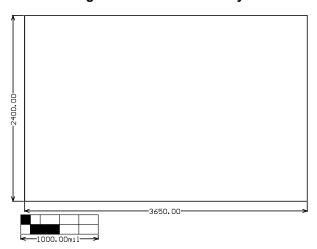


Figure 4-10. Board Dimensions

www.ti.com

4.3 Bill of Materials (BOM)

Table 4-1 lists the bill of materials for DRV8351EVM.

Table 4-1. Bill of Materials

Designator	Quantity	Value	Description	Part Number	Manufacturer	Package Reference	Alternate Manufacturer	Alternate Part Number
!PCB1	1		Printed Circuit Board	MD092	Any			
3.3V, GVDD, PVDD	3	Green	LED, Green, SMD	LTST-C171GKT	Lite-On	0805 LED		
C1, C2, C3	3	1uF	CAP, CERM, 1µF, 25V,+/- 10%, X7R, 0805	CL21B105KAFNNNE	Samsung Electro- Mechanics	0805		
C4	1	10uF	CAP, CERM, 10µF, 50V,+/- 10%, X7R, 1210	CL32B106KBJNNWE	Samsung Electro- Mechanics	1210		
C5, C6, C7	3	1000pF	CAP, CERM, 1000pF, 16V, +/- 10%, X7R, 0603	885012206034	Wurth Elektronik	0603		
C8, C9	2	330uF	CAP, AL, 330uF, 100V, +/- 20%, 0.153 ohm, AEC-Q200 Grade 2, SMD	EEV-FK2A331M	Panasonic	SMT Radial K16		
C10, C43, C44, C45, C49	5	0.1uF	CAP, CERM, 0.1µF, 50V,+/- 10%, X7R, AEC-Q200 Grade 1, 0603	C0603C104K5RACAUTO	Kemet	0603		
C11, C13	2	2200pF	CAP, CERM, 2200pF, 100V, +/- 10%, X7R, AEC-Q200 Grade 1, 0603	CGA3E2X7R2A222K080A A	TDK	0603		
C12	1	2.2uF	CAP, CERM, 2.2uF, 100V, +/- 10%, X7R, 1210	C1210C225K1RAC7800	Kemet	1210		
C14	1	56pF	CAP, CERM, 56pF, 100V, +/- 5%, C0G/NP0, 0603	GRM1885C2A560JA01D	MuRata	0603		
C15	1	47uF	CAP, CERM, 47uF, 25V, +/- 20%, X5R, 1206_190	C3216X5R1E476M160AC	TDK	1206_190		
C16	1	0.33uF	CAP, CERM, 0.33uF, 25V, +/- 10%, X5R, 0805	KGM21AR51E334KU	AVX	0805		
C17, C33, C34	3	0.1uF	CAP, CERM, 0.1uF, 16V, +/- 5%, X7R, 0603	C0603C104J4RAC7867	Kemet	0603		
C18, C19, C28	3	1uF	CAP, CERM, 1uF, 100V, +/- 10%, X7R, AEC-Q200 Grade 1, 1210	CGA6M2X7R2A105K200 AA	TDK	1210		
C35, C55	2	2.2uF	CAP, CERM, 2.2uF, 10V, +/- 10%, X5R, 0402	C1005X5R1A225K050BC	TDK	0402		
C36, C37, C38	3	470pF	CAP, CERM, 470pF, 50V, +/- 10%, X7R, 0805	C0805C471K5RAC7800	Kemet	0805		
C39, C40, C41, C42, C46, C47, C48, C53, C54	9	0.01uF	CAP, CERM, 0.01uF, 50V, +/- 10%, X7R, AEC-Q200 Grade 1, 0603	GCM188R71H103KA37D	MuRata	0603		



Table 4-1. Bill of Materials (continued)

Designator	Quantity	Value	Description	Part Number	Manufacturer	Package Reference	Alternate Manufacturer	Alternate Part Number
D10, D11, D14, D15, D17, D19	6	16V	Diode, Zener, 16V, 1W, SMA	SMAZ16-13-F	Diodes Inc.	SMA		
F1	1		Fuse, 30A, 250 VAC, 100 VDC, SMD	0463030.ER	Littelfuse	10.1x3.12mm		
FAULT	1	Red	LED, Red, SMD	LTST-C170KRKT	Lite-On	Red 0805 LED		
GHA, GHB, GHC, GLA, GLB, GLC, SHA, SHB, SHC	9		Test Point, Miniature, White, TH	5002	Keystone Electronics	White Miniature Test point		
GND	1		1mm Uninsulated Shorting Plug, 10.16mm spacing, TH	D3082-05	Harwin	Shorting Plug, 10.16mm spacing, TH		
GVDD_EXT, GVDD_TP, HALL_EXT, PVDD_TP	4		Test Point, Miniature, Red, TH	5000	Keystone Electronics	Red Miniature Test point		
J1, J2	2		Receptacle, 2.54mm, 10x2, Gold, TH	SSQ-110-03-G-D	Samtec	Receptacle, 2.54mm, 10x2, TH		
J3, J6, J8	3		Header, 2.54mm, 3x1, Gold, TH	61300311121	Wurth Elektronik	Header, 2.54mm, 3x1, TH		
J4	1		Terminal Block, 9.52mm, 2x1, R/A, TH	1902547	Phoenix Contact	Terminal Block, 2x1, Pitch 9.52mm		
J5	1		Terminal Block, 9.52mm, 3x1, R/A, TH	1904150	Phoenix Contact	Terminal Block, 3x1, Pitch 9.52mm		
J7	1		Terminal Block, 5mm, 5x1, R/A, TH	1792892	Phoenix Contact	Terminal Block, 5mm, 5x1, R/A, TH		
L1	1	68uH	Inductor, Drum Core, Ferrite, 68 uH, 1.1A, 0.22 ohm, SMD	SDR1006-680KL	Bourns	SDR1006		
Q1, Q2, Q3, Q4, Q5, Q6	6	100V	MOSFET, N-CH, 100V, 17A, DNK0008A (VSON-CLIP-8)	CSD19532Q5B	Texas Instruments	DNK0008A	None	
R9, R10, R11	3	10k	RES, 10 k, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW060310K0JNEA	Vishay-Dale	0603		
R12, R74, R75, R76, R86	5	97.6k	RES, 97.6 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW060397K6FKEA	Vishay-Dale	0603		
R13, R80, R81, R82, R91	5	3.01k	RES, 3.01 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW06033K01FKEA	Vishay-Dale	0603		
R14, R15	2	330	RES, 330, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW0603330RJNEA	Vishay-Dale	0603		

www.ti.com

Table 4-1. Bill of Materials (continued)

Designator	Quantity	Value	Description	Part Number	Manufacturer	Package Reference	Alternate Manufacturer	Alternate Part Number
R16, R17, R70, R72, R79, R84, R96, R98	8	4.99k	RES, 4.99 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW06034K99FKEA	Vishay-Dale	0603		
R18, R25, R26, R60, R64	5	0	RES, 0, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW06030000Z0EA	Vishay-Dale	0603		
R19	1	1.0Meg	RES, 1.0M, 5%, 0.1W, AEC-Q200 Grade 0, 0603	CRCW06031M00JNEA	Vishay-Dale	0603		
R20	1	681k	RES, 681 k, 1%, 0.1 W, 0603	RC0603FR-07681KL	Yageo	0603		
R21	1	453k	RES, 453 k, 1%, 0.1 W, 0603	RC0603FR-07453KL	Yageo	0603		
R22	1	330k	RES, 330 k, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW0603330KJNEA	Vishay-Dale	0603		
R23	1	100k	RES, 100 k, 1%, 0.063 W, AEC- Q200 Grade 0, 0402	CRCW0402100KFKED	Vishay-Dale	0402		
R24	1	49.9k	RES, 49.9 k, 1%, 0.1 W, 0603	RC0603FR-0749K9L	Yageo	0603		
R33, R34, R43, R44, R54, R59	6	15	RES, 15, 5%, 0.125 W, AEC-Q200 Grade 0, 0805	ERJ-6GEYJ150V	Panasonic	0805		
R35, R36, R45, R46, R55, R61, R100, R101	8	100k	RES, 100 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW0603100KFKEA	Vishay-Dale	0603		
R37, R38, R56	3	0	RES, 0, 0%, 0.25 W, AEC-Q200 Grade 0, 0603	RCS06030000Z0EA	Vishay-Dale	0603		
R49, R50, R63	3	0.003	RES, 0.003, 1%, 3 W, AEC-Q200 Grade 0, 2512	CRE2512-FZ-R003E-3	Bourns	2512		
R65, R66, R67	3	330	RES, 330, 1%, 0.125 W, 0805	CRCW0805330RFKEAC	Vishay-Dale	0805		
R68, R73, R77, R85, R90, R99	6	49.9k	RES, 49.9 k, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW060349K9FKEA	Vishay-Dale	0603		
R69, R71, R78, R83, R95, R97	6	10.2	RES, 10.2, 1%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW060310R2FKEA	Vishay-Dale	0603		
SH-J1, SH-J2, SH-J3	3	1x2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec	Shunt	3M	969102-0000-DA
U1	1		100V Three-Phase BLDC Gate Driver	DRV8351DIMPWTSEP	Texas Instruments	TSSOP20		
U2	1		100V Low IQ Synchronous Buck Regulator, DDA0008E (SOIC-8)	LM5164DDAT	Texas Instruments	DDA0008E	Texas Instruments	
U3	1		500mA, 25V, Linear Voltage Regulators, DCY0004A (SOT-223-4)	UA78M33CDCYR	Texas Instruments	DCY0004A	Texas Instruments	UA78M33CDCY
U4, U5	2		4-Channel ESD Solution for High-Speed Differential Interface, DRY0006A (USON-6)	TPD4S009DRYR	Texas Instruments	DRY0006A		



Table 4-1. Bill of Materials (continued)

	Table 4-1. Bill of Materials (continued)								
Designator	Quantity	Value	Description	Part Number	Manufacturer	Package Reference	Alternate Manufacturer	Alternate Part Number	
U6	1		Temperature Sensor Analog, Local approx40°C - 150°C 10mV/°C SOT-23-3	TMP235A2DBZR	Texas Instruments	SOT-23			
U7	1		4-Channel, 1MHz, RRIO, 1.8V to 5.5V Operational Amplifier for Cost-Optimized Systems, PW0014A (TSSOP-14)	TLV9004IPWR	Texas Instruments	PW0014A	Texas Instruments		
C20, C21, C26, C27, C29, C32	0	2200pF	CAP, CERM, 2200pF, 100V, +/- 10%, X7R, 0603	06031C222KAT2A	AVX	0603			
C22, C23, C24, C25, C30, C31	0	2200pF	CAP, CERM, 2200pF, 100V, +/- 10%, X7R, 0603	GRM188R72A222KA01D	MuRata	0603			
D1, D2, D3	0	150V	Diode, P-N, 150V, 0.2A, SOD-323	BAV20WS-TP	Micro Commercial Components	SOD-323			
D8, D9, D12, D13, D16, D18	0	40V	Diode, Schottky, 40V, 2A, SMA	SSA24-E3/61T	Vishay- Semiconductor	SMA			
FID1, FID2, FID3, FID4, FID5, FID6	0		Fiducial mark. There is nothing to buy or mount.	N/A	N/A	N/A			
R1, R2, R3	0	0	RES, 0, 5%, 0.333 W, AEC-Q200 Grade 0, 0805	CRCW08050000Z0EAHP	Vishay-Dale	0805			
R5, R6, R8	0	0	RES, 0, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW06030000Z0EA	Vishay-Dale	0603			
R27, R28, R39, R40, R51, R57	0	10	RES, 10, 5%, 0.125 W, AEC-Q200 Grade 0, 0805	ERJ-6GEYJ100V	Panasonic	0805			
R29, R30, R47, R48, R52, R62	0	2.7	RES, 2.7, 5%, 0.125 W, AEC-Q200 Grade 0, 0805	CRCW08052R70JNEA	Vishay-Dale	0805			

www.ti.com Additional Information

5 Additional Information

5.1 Trademarks

All trademarks are the property of their respective owners.

6 References

See these documents for additional reference:

- DRV8351 data sheet
- TMS320F280049C product page
- LAUNCHXL-F280049C product page

7 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

C	Changes from Revision * (June 2024) to Revision A (January 2025)						
•	Changed 100V capability to 40V	1					
•	Changed 100V capability to 40V	4					

STANDARD TERMS FOR EVALUATION MODULES

- Delivery: TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or
 documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance
 with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
- 2 Limited Warranty and Related Remedies/Disclaimers:
 - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after the defect has been detected.
 - 2.3 Tl's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. Tl's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by Tl and that are determined by Tl not to conform to such warranty. If Tl elects to repair or replace such EVM, Tl shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

WARNING

Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.

User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.

NOTE:

EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGREDATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.

3 Regulatory Notices:

3.1 United States

3.1.1 Notice applicable to EVMs not FCC-Approved:

FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types lated in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

3.3 Japan

- 3.3.1 Notice for EVMs delivered in Japan: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
 - https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html
- 3.3.2 Notice for Users of EVMs Considered "Radio Frequency Products" in Japan: EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

- 1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
- 3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above. User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。 技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの 措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用 いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。
- なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。 上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・イ

ンスツルメンツ株式会社

東京都新宿区西新宿6丁目24番1号

西新宿三井ビル

- 3.3.3 Notice for EVMs for Power Line Communication: Please see http://www.tij.co.jp/lsds/ti_ja/general/eStore/notice_02.page 電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html
- 3.4 European Union
 - 3.4.1 For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

- 4 EVM Use Restrictions and Warnings:
 - 4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.
 - 4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.
 - 4.3 Safety-Related Warnings and Restrictions:
 - 4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.
 - 4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.
 - 4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.
- 5. Accuracy of Information: To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. Disclaimers:

- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.
- 7. USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS. USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

- 8. Limitations on Damages and Liability:
 - 8.1 General Limitations. IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TIMORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.
 - 8.2 Specific Limitations. IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, , EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
- 9. Return Policy. Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
- 10. Governing Law: These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2023, Texas Instruments Incorporated

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale, TI's General Quality Guidelines, or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2025, Texas Instruments Incorporated

Last updated 10/2025