

```
*****
****
*
* Model Usage Notes:
*
* A. Features have been modelled
*   1. Output Voltage Setting
*   2. Internal Fixed Soft-Start and External Adjustable Soft-start
*   3. External REFIN for Output Voltage Tracking
*   4. Frequency and Operation Mode Selection
*   5. Low-side FET Zero-Crossing
*   6. Current Sense and Positive Overcurrent Protection(OCP)
*   7. Low-side FET Negative Current Limit
*   8. Power Good
*   9. Over Voltage Protection(OVP)
*  10. Under Voltage Protection(UVP)
*  11. Out-Of-Bounds(OOB) Operation
*  12. Output Voltage Discharge
*  13. UVLO Protection
*  14. BOOT functionality
*  15. Remote Sense
*
*
* B. Features have not been modelled
*   1. Operating Quiescent Current
*   2. Shutdown Current
*   3. Temperature dependent characteristic
*   4. Ground Pins have been tied to 0V internally and hence model does
*       not support Inverting topologies.
*
*
* C. Application Notes
*   1. To run the POP/AC analysis, you must run complete Startup
*       Transient simulation and then run the AC analysis.
*       Also you must choose "Use snapshot from previous transient
*       analysis" in POP Advanced options.
*
*****
****
```