



# SBS V1.1-COMPLIANT GAS GAUGE IC

# **FEATURES**

- Provides Accurate Measurement of Available Charge in NiCd, NiMH, Li-Ion, and Lead-Acid Batteries
- Supports SBS Smart Battery Data Specification v1.1
- Supports the 2-Wire SMBus v1.1 Interface with PEC or 1-Wire HDQ16
- Reports Individual Cell Voltages
- Monitors and Provides Control to Charge and Discharge FETs in Li-Ion Protection Circuit
- Provides 15-Bit Resolution for Voltage, Temperature, and Current Measurements
- Measures Charge Flow Using a V-to-F Converter with Offset of Less Than 16 μV After Calibration
- Consumes Less Than 0.5 mW Operating
- Drives a 4- or 5-Segment LED Display for Remaining Capacity Indication
- 28-Pin 150-mil SSOP

# **DESCRIPTION**

The bq2060 SBS-compliant gas gauge IC for battery pack or in-system installation maintains an accurate record of available charge in rechargeable batteries. The bq2060 monitors capacity and other critical battery parameters for NiCd, NiMH, Li-ion, and lead-acid chemistries. The bq2060 uses a V-to-F converter with automatic offset error correction for charge and discharge counting. For voltage, temperature, and current reporting, the bq2060 uses an A-to-D converter. The onboard ADC also monitors individual cell voltages in a Li-ion battery pack and allows the bq2060 to generate control signals that may be used with a pack supervisor to enhance pack safety.


The bq2060 supports the smart battery data (SBData) commands and charge-control functions. It communicates data using the system management bus (SMBus) 2-wire protocol or the Benchmarq 1-wire HDQ16 protocol. The data available include the battery's remaining capacity, temperature, voltage,

current, and remaining run-time predictions. The bq2060 provides LED drivers and a push-button input to depict remaining battery capacity from full to empty in 20% or 25% increments with a 4- or 5-segment display.

The bg2060 works with an external EEPROM. The EEPROM stores the configuration information for the bq2060, such as the battery's chemistry, self-discharge rate, rate compensation factors, measurement calibration, and design voltage and capacity. The bq2060 uses the programmable self-discharge rate and other compensation factors stored in the EEPROM to accurately adjust remaining capacity for use and standby conditions based on time, rate, and temperature. The bq2060 also automatically calibrates or learns the true battery capacity in the course of a discharge cycle from near full to near empty levels.

The REG output regulates the operating voltage for the bq2060 from the battery cell stack using an external JFET.

## PIN CONNECTIONS

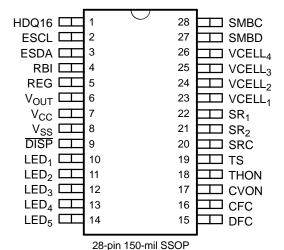



These devices have limited built-in ESD protection. The leads should be shorted together or the device placed in conductive foam during storage or handling to prevent electrostatic damage to the MOS gates.



Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet.



# **PIN DESCRIPTIONS**

TERM	INAL	
NAME	NO.	DESCRIPTION
HDQ16	1	Serial communication input/output. Open-drain bidirectional communications port
ESCL	2	Serial memory clock. Output to clock the data transfer between the bq2060 and the external nonvolatile configuration memory
ESDA	3	Serial memory data and address. Bidirectional pin used to transfer address and data to and from the bq2060 and the external nonvolatile configuration memory
RBI	4	Register backup input. Input that provides backup potential to the bq2060 registers during periods of low operating voltage. RBI accepts a storage capacitor or a battery input.
REG	5	Regulator output. Output to control an n-JFET for $V_{CC}$ regulation to the bq2060 from the battery potential
V <sub>OUT</sub>	6	Supply output. Output that supplies power to the external EEPROM configuration memory
V <sub>CC</sub>	7	Supply voltage input
V <sub>SS</sub>	8	Ground.
DISP	9	Display control input. Input that controls the LED drivers LED1-LED5
LED <sub>1</sub> -LED <sub>5</sub>	10,11,12, 13,14	LED display segment outputs. Outputs that each may drive an external LED
DFC	15	Discharge FET control output. Output to control the discharge FET in the Li-ion pack protection circuitry
CFC	16	Charge FET controll output. Output to control the charge FET in the Li-ion pack protection circuitry
CVON	17	Cell voltage divider controll output. Output control for external FETs to connect the cells to the external voltage dividers during cell voltage measurements
THON	18	Thermistor bias control output. Output control for external FETs to connect the thermistor bias resistor during a temperature measurement
TS	19	Thermistor voltage input. Input connection for a thermistor to monitor temperature
SRC	20	Current sense input. Input to monitor instantaneous current
SR <sub>1</sub> -SR <sub>2</sub>	21,22	Charge-flow sense resistor inputs. Input connections for a small value sense resistor to monitor the battery charge and discharge current flow
VCELL <sub>1</sub> - VCELL <sub>4</sub>	23,24,25,2 6	Single-cell voltage inputs. Inputs that monitor the series element cell voltages
SMBD	27	SMBus data. Open-drain bidirectional pin used to transfer address and data to and from the bq2060
SMBC	28	SMBus clock. Open-drain bidirectional pin used to clock the data transfer to and from the bq2060

# **ORDERING INFORMATION**

For the most current package and ordering information, see the Package Option Addendum at the end of this document, or see the TI Web site at www.ti.com.



# ABSOLUTE MAXIMUM RATINGS(1)

SYMBOL	PARAMETER		MAX	UNIT	NOTES
V <sub>CC</sub> -Supply voltage	Relative to V <sub>SS</sub>	-0.3	+6	V	
V <sub>IN</sub> -All other pins	Relative to V <sub>SS</sub>	-0.3	+6	V	
T <sub>OPR</sub>	Operating temperature	-20	+70	°C	Commercial
$T_J$	Junction temperature	-40	+125	°C	

<sup>(1)</sup> Permanent device damage may occur if **absolute maximum ratings** are exceeded. Functional operation should be limited to the Recommended DC Operating Conditions detailed in this data sheet.

# DC ELECTRICAL CHARACTERISTICS

( $V_{CC}$  = 2.7 V to 3.7 V,  $T_{OPR}$  = -20°C to 70°C, unless otherwise noted)

SYMBOL	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
V <sub>CC</sub>	Supply voltage		2.7	3.3	3.7	V
I <sub>CC</sub>	Operating current	V <sub>OUT</sub> inactive		180	235	μА
I <sub>SLP</sub>	Low-power storage mode current	1.5 V < V <sub>CC</sub> < 3.7 V		5	10	μА
I <sub>LVOUT</sub>	V <sub>OUT</sub> leakage current	V <sub>OUT</sub> inactive	- 0.2		0.2	μА
I <sub>VOUT</sub>	V <sub>OUT</sub> source current	V <sub>OUT</sub> active, V <sub>OUT</sub> = V <sub>CC</sub> - 0.6 V	- 5			mA
\ /	Output voltage low: LED <sub>1</sub> -LED <sub>5</sub> , CFC, DFC	I <sub>OLS</sub> = 5 mA			0.4	V
V <sub>OLS</sub>	Output voltage low: THON, CVON	I <sub>OLS</sub> = 5 mA			0.36	V
V <sub>IL</sub>	Input voltage low DISP		-0.3		0.8	V
V <sub>IH</sub>	Input voltage high DISP		2		V <sub>CC</sub> + 0.3	V
V <sub>OL</sub>	Output voltage low SMBC, SMBD, HDQ16, ESCL, ESDA	I <sub>OL</sub> = 1 mA			0.4	V
V <sub>ILS</sub>	Input voltage low SMBC, SMBD, HDQ16, ESCL, ESDA		- 0.3		0.8	V
V <sub>IHS</sub>	Input voltage high SMBC, SMBD, HDQ16, ESCL, ESDA		1.7		6	V
V <sub>AI</sub>	Input voltage range VCELL <sub>1-4</sub> , TS, SRC		V <sub>SS</sub> - 0.3		1.25	V
I <sub>RB</sub>	RBI data-retention input current	V <sub>RBI</sub> > 3 V, V <sub>CC</sub> < 2.0 V		10	50	nA
$V_{RBI}$	RBI data-retention voltage		1.3			V
Z <sub>AI1</sub>	Input impedance: SR1, SR2	0–1.25 V	10			МΩ
Z <sub>AI2</sub>	Input impedance: VCELL <sub>1-4</sub> , TS, SRC	0–1.25 V	5			$M\Omega$

# **VFC CHARACTERISTICS**

(V<sub>CC</sub> = 3.1 to 3.6 V,  $T_{OPR}$  =  $-0^{\circ}$ C to  $70^{\circ}$ C, Unless Otherwise Noted

SYMBOL	PARMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
$V_{SR}$	Input voltagerange, V <sub>SR2</sub> and V <sub>SR1</sub>	$V_{SR} = V_{SR2} - V_{SR1}$	- 0.25		+0.25	V
V <sub>SROS</sub>	V <sub>SR</sub> input offset	V <sub>SR2</sub> = V <sub>SR1</sub> , autocorrection disabled	-250	-50	250	μV
V <sub>SRCOS</sub>	Calibrated offset		-16		+16	μV
RM <sub>VCO</sub>	Supply voltage gain coefficient <sup>(1)</sup>	V <sub>CC</sub> = 3.3 V		0.8	1.2	%/V
		Slope for T <sub>OPR</sub> = −20°C to 70°C	- 0.09		+0.09	% /°C
DM	Tomporature gain acofficient(1)	Total deviation T <sub>OPR</sub> = −20°C to 70°C	-1.6%		0.1%	
RM <sub>TCO</sub>	M <sub>TCO</sub> Temperature gain coefficient <sup>(1)</sup>	Slope for $T_{OPR} = -0^{\circ}C$ to $50^{\circ}C$	-0.05		+0.05	% /°C
		Total deviation T <sub>OPR</sub> = −0°C to 50°C	-0.6%		0.1%	
INL	Integral nonlinearity error	$T_{OPR} = 0^{\circ}C - 50^{\circ}C$			0.21%	

<sup>(1)</sup>  $RM_{TCO}$  total deviation is from the nominal gain at 25°C.



# **REG CHARACTERISTICS**

 $(T_{OPR} = -20^{\circ}C \text{ to } 70^{\circ}C)$ 

SYMBOL	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
N/	Normal Mode: REG controlled output voltage	JFET: $R_{ds}$ (on) < 150 Ω		3.3	3.6	V
V <sub>RO</sub>	Sleep Mode: REG controlled output voltage	$V_{gs}(off) < -3 \text{ V at } 10  \mu\text{A}$			4.1	V
I <sub>REG</sub>	REG output current		1			μА

## **SMBus AC SPECIFICATIONS**

 $V_{CC}$  = 2.7 V to 3.7 V,  $T_{OPR}$  = -20°C to 70°C, unless otherwise noted

SYMBOL	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
f <sub>SMB</sub>	SMBus operating frequency	Slave mode, SMBC 50% duty cycle	10		100	kHz
f <sub>MAS</sub>	SMBus master clock frequency	Master mode, no clock low slave extend		51.2		kHz
t <sub>BUF</sub>	Bus free time between start and stop		4.7			μs
t <sub>HD:STA</sub>	Hold time after (repeated) start		4			μs
t <sub>SU:STA</sub>	Repeated start setup time		4.7			μs
t <sub>SU:STO</sub>	Stop setup time		4			μs
	Data hold time	Receive mode	0			ns
t <sub>HD:DAT</sub>	Data noid time	Transmit mode	300			ns
t <sub>SU:DAT</sub>	Data setup time		250			ns
t <sub>TIMEOUT</sub>	Error signal/detect	See (1)	25		35	ms
t <sub>LOW</sub>	Clock low period		4.7			μs
t <sub>HIGH</sub>	Clock high period	See (2)	4		50	μs
t <sub>LOW:SEXT</sub>	Cumulative clock low slave extend time	See (3)			25	ms
t <sub>LOW:MEXT</sub>	Cumulative clock low master extend time	See (4)			10	ms

- (1) The bq2060 times out when any clock low exceeds t<sub>TIMEOUT</sub>.
   (2) t<sub>HIGH Max</sub> is minimum bus idle time. SMBC = SMBD = 1 for t > 50 ms causes reset of any transaction involving bq2060 that is in
- t<sub>LOW:SEXT</sub> is the cumulative time a slave device is allowed to extend the clock cycles in one message from initial start to the stop. The bq2060 typically extends the clock only 20 ms as a slave in the read byte or write byte protocol.
- t<sub>LOW:MEXT</sub> is the cumulative time a master device is allowed to extend the clock cycles in one message from initial start to the stop. The bq2060 typically extends the clock only 20 ms as a master in the read byte or write byte protocol.

# **HDQ16 AC SPECIFICATIONS ()**

 $V_{CC}$  = 2.7 V to 3.7 V,  $T_{OPR}$  = -20°C to 70°C, unless otherwise noted

SYMBOL	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
t <sub>CYCH</sub>	Cycle time, host to bq2060 (write)		190			μs
t <sub>CYCB</sub>	Cycle time, bq2060 to host (read)		190	205	250	μs
t <sub>STRH</sub>	Start hold time, host to bq2060 (write)		5	-	-	ns
t <sub>STRB</sub>	Start hold time, host to bq2060 (read)		32	-	-	μs
t <sub>DSU</sub>	Data setup time		-	-	50	μs
t <sub>DSUB</sub>	Data setup time		-	-	50	μs
t <sub>DH</sub>	Data hold time		100	-	-	μs
t <sub>DV</sub>	Data valid time		80	-	-	μs
t <sub>SSU</sub>	Stop setup time		-	-	145	μs
t <sub>SSUB</sub>	Stop setup time		-	-	145	μs
t <sub>RSPS</sub>	Response time, bq2060 to host		190	-	320	μs
t <sub>l</sub>	Break time		190	-	-	μs
t <sub>BR</sub>	Break recovery time		40	-	-	μs



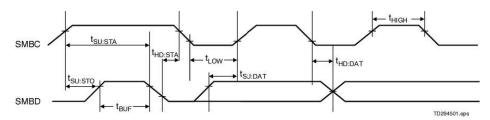


Figure 1. SMBus Timing Data




Figure 2. HDQ16 Break Timing




Figure 3. HDQ16 Host to bq2060

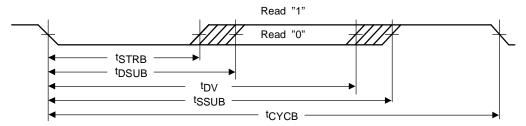


Figure 4. HDQ16 bq2060 to Host

# **FUNCTIONAL DESCRIPTION**

# **GENERAL OPERATION**

The bq2060 determines battery capacity by monitoring the amount of charge input to or removed from a rechargeable battery. In addition to measuring charge and discharge, the bq2060 measures battery voltage, temperature, and current, estimates battery self-discharge, and monitors the battery for low-voltage thresholds. The bq2060 measures charge and discharge activity by monitoring the voltage across a small-value series sense resistor between the battery's negative terminal and the negative terminal of the battery pack. The available battery charge is determined by monitoring this voltage and correcting the measurement for environmental and operating conditions.

Figure 5 shows a typical bq2060-based battery pack application. The circuit consists of the LED display, voltage and temperature measurement networks, EEPROM connections, a serial port, and the sense resistor. The EEPROM stores basic battery pack configuration information and measurement calibration values. The EEPROM must be programmed properly for bq2060 operation. Table 10 shows the EEPROM memory map and outlines the programmable functions available in the bq2060.



# **FUNCTIONAL DESCRIPTION (continued)**

The bq2060 accepts an NTC thermistor (Semitec 103AT) for temperature measurement. The bq2060 uses the thermistor temperature to monitor battery pack temperature, detect a battery full charge condition, and compensate for self-discharge and charge/discharge battery efficiencies.

## **MEASUREMENTS**

The bq2060 uses a fully differential, dynamically balanced voltage-to-frequency converter (VFC) for charge measurement and a sigma delta analog-to-digital converter (ADC) for battery voltage, current, and temperature measurement.

Voltage, current, and temperature measurements are made every 2 to 2.5 seconds, depending on the bq2060 operating mode. Maximum times occur with compensated EDV, mWh mode, and maximum allowable discharge rate. Any AtRate computations requested or scheduled (every 20 seconds) may add up to 0.5 second to the time interval.

# **Charge And Discharge Counting**

The VFC measures the charge and discharge flow of the battery by monitoring a small-value sense resistor between the SR<sub>1</sub> and SR<sub>2</sub> pins as shown in Figure 5. The VFC measures bipolar signals up to 250 mV. The bq2060 detects charge activity when  $V_{SR} = V_{SR2} - V_{SR1}$  is positive and discharge activity when  $V_{SR} = V_{SR2} - V_{SR1}$  is negative. The bq2060 continuously integrates the signal over time using an internal counter. The fundamental rate of the counter is 6.25  $\mu$ Vh.

## **Offset Calibration**

The bq2060 provides an auto-calibration feature to cancel the voltage offset error across  $SR_1$  and  $SR_2$  for maximum charge measurement accuracy. The calibration routine is initiated by issuing a command to ManufacturerAccess(). The bq2060 is capable of automatic offset calibration down to 6.25  $\mu$ V. Offset cancellation resolution is less than 1  $\mu$ V.

#### **Digital Filter**

The bq2060 does not measure charge or discharge counts below the digital filter threshold. The digital filter threshold is programmed in the EEPROM and should be set sufficiently high to prevent false signal detection with no charge or discharge flowing through the sense resistor.

#### Voltage

While monitoring  $SR_1$  and  $SR_2$  for charge and discharge currents, the bq2060 monitors the battery-pack potential and the individual cell voltages through the  $VCELL_1$ – $VCELL_4$  pins. The bq2060 measures the pack voltage and reports the result in the Voltage() register. The bq2060 can also measure the voltage of up to four series elements in a battery pack. The individual cell voltages are stored in the optional Manufacturer Function area.

The VCELL<sub>1</sub>–VCELL<sub>4</sub> inputs are divided down from the cells using precision resistors, as shown in Figure 5. The maximum input for VCELL<sub>1</sub>–VCELL<sub>4</sub> is 1.25 V with respect to VSS. The voltage dividers for the inputs must be set so that the voltages at the inputs do not exceed the 1.25 V limit under all operating conditions. Also, the divider ratios on VCELL<sub>1</sub>–VCELL<sub>2</sub> must be half of that of VCELL<sub>3</sub>–VCELL<sub>4</sub>. To reduce current consumption from the battery, the CVON output may used to connect the divider to the cells only during measurement period. CVON is high impedance for 250 ms (12.5% duty cycle) when the cells are measured, and driven low otherwise. See Table 1.

#### Current

The SRC input of the bq2060 measures battery charge and discharge current. The SRC ADC input converts the current signal from the series sense resistor and stores the result in Current(). The full-scale input range to SBC is limited to ±250 mV as shown in Table 2.



# **FUNCTIONAL DESCRIPTION (continued)**

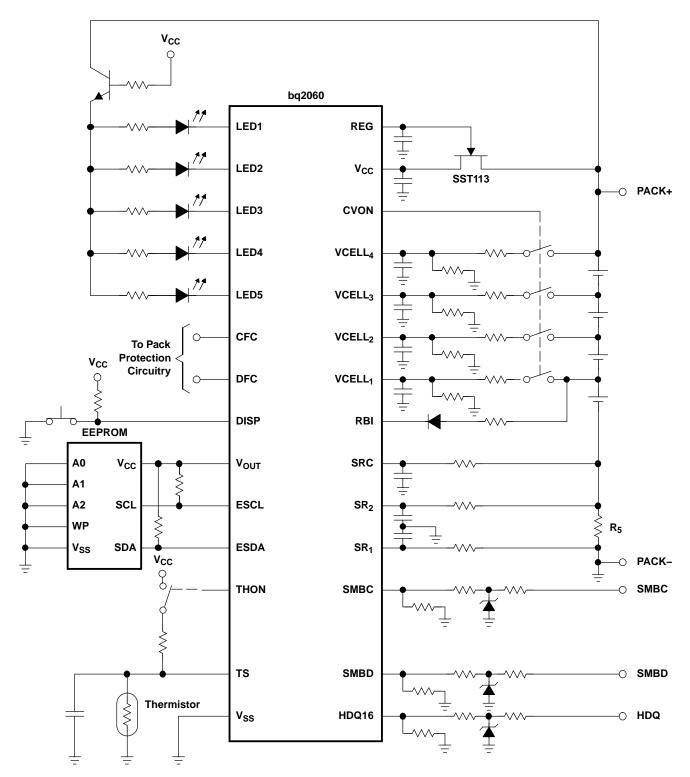


Figure 5. Battery Pack Application Diagram-LED Display and Series Cell Monitoring



Table 1. Example VCELL1-VCELL4 Divider and Input Range

VOLTAGE INPUT	VOLTAGE DIVISION RATIO	FULL-SCALE INPUT (V)
VCELL <sub>4</sub>	16	20
VCELL <sub>3</sub>	16	20
VCELL <sub>2</sub>	8	10
VCELL <sub>1</sub>	8	10

Table 2. SRC Input Range

SENSE RESISTOR ( $\Omega$ )	FULL-SCALE INPUT (A)
0.02	±12.5
0.03	±8.3
0.05	±5.0
0.10	±2.5

# **Temperature**

The TS input of the bq2060 with an NTC thermistor measures the battery temperature as shown in Figure 5. The bq2060 reports temperature in Temperature(). THON may be used to connect the bias source to the thermistor when the bq2060 samples the TS input. THON is high impedance for 60 ms when the temperature is measured, and driven low otherwise.

# **GAS GAUGE OPERATION**

#### General

The operational overview in Figure 6 illustrates the gas gauge operation of the bq2060. Table 3 describes the bq2060 registers.

The bq2060 accumulates a measure of charge and discharge currents and estimates self-discharge of the battery. The bq2060 compensates the charge current measurement for temperature and state-of-charge of the battery. The bq2060 also adjusts the self-discharge estimation based on temperature.

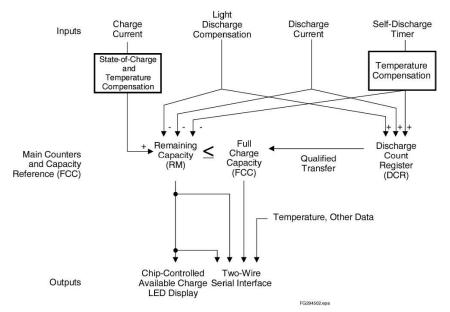


Figure 6. bg2060 Operational Overview



The main counter RemainingCapacity() (RM) represents the available capacity or energy in the battery at any given time. The bq2060 adjusts RM for charge, self-discharge, and leakage compensation factors. The information in the RM register is accessible through the communications ports and is also represented through the LED display.

The FullChargeCapacity() (FCC) register represents the last measured full discharge of the battery. It is used for the battery's full-charge reference for relative capacity indication. The bq2060 updates FCC when the battery undergoes a qualified discharge from nearly full to a low battery level. FCC is accessible through the serial communications ports.

The Discharge Count Register (DCR) is a non-accessible register that only tracks discharge of the battery. The bq2060 uses the DCR register to update the FCC register if the battery undergoes a qualified discharge from nearly full to a low battery level. In this way, the bq2060 learns the true discharge capacity of the battery under system-use conditions.

# Main Gas Gauge Registers

# RemainingCapacity() (RM)

RM represents the remaining capacity in the battery. The bq2060 computes RM in either mAh or 10 mWh depending on the selected mode.

On initialization, the bq2060 sets RM to 0. RM counts up during charge to a maximum value of FCC and down during discharge and self-discharge to 0. In addition to charge and self-discharge compensation, the bq2060 calibrates RM at three low-battery-voltage thresholds, EDV2, EDV1, and EDV0 and three programmable midrange thresholds VOC25, VOC50, and VOC75. This provides a voltage-based calibration to the RM counter.

## DesignCapacity() (DC)

The DC is the user-specified battery full capacity. It is calculated from Pack Capacity EE 0x3a–0x3b and is represented in mAh or 10 mWh. It also represents the full-battery reference for the absolute display mode.

# FullChargeCapacity() (FCC)

FCC is the last measured discharge capacity of the battery. It is represented in either mAh or 10 mWh depending on the selected mode. On initialization, the bq2060 sets FCC to the value stored in *Last Measured Discharge* EE 0x38–0x39. During subsequent discharges, the bq2060 updates FCC with the last measured discharge capacity of the battery. The last measured discharge of the battery is based on the value in the DCR register after a qualified discharge occurs. Once updated, the bq2060 writes the new FCC value to EEPROM in mAh to *Last Measured Discharge*. FCC represents the full-battery reference for the relative display mode and relative state of charge calculations.

# Discharge Count Register (DCR)

The DCR register counts up during discharge, independent of RM. DCR can continue to count even after RM has counted down to 0. Prior to RM = 0, discharge activity, light discharge estimation and self-discharge increment DCR. After RM = 0, only discharge activity increments DCR. The bq2060 initializes DCR to FCC – RM when RM is within twice the programmed value in *Near Full* EE 0x55. The DCR initial value of FCC – RM is reduced by FCC/128 if SC = 0 (bit 2 in Control Mode) and is not reduced if SC = 1. DCR stops counting when the battery voltage reaches the EDV2 threshold on discharge.

#### Capacity Learning (FCC Update) And Qualified Discharge

The bq2060 updates FCC with an amount based on the value in DCR if a qualified discharge occurs. The new value for FCC equals the DCR value plus the programmable nearly full- and low-battery levels, according to the following equation:

FCC(new) = DCR(final) =

DCR(initial) + measureddischarge to EDV2

(1)

where:

BatteryLow% = (value stored in EE 0x54) ÷ 2.56



A qualified discharge occurs if the battery discharges from RM ≥ FCC *-Near Full* \* 2 to the EDV2 voltage threshold with the following conditions:

- No valid charge activity occurs during the discharge period. A valid charge is defined as an input 10 mAh into the battery.
- No more than 256 mAh of self-discharge and/or light discharge estimation occurs during the discharge period.
- The temperature does not drop below 5°C during the discharge period.
- The battery voltage reaches the EDV2 threshold during the discharge period and the voltage was less than the EDV2 threshold minus 256 mV when bq2060 detected EDV2.
- No midrange voltage correction occurs during the discharge period.

FCC cannot be reduced by more than 256 mAh or increased by more than 512 mAh during any single update cycle. The bq2060 saves the new FCC value to the EEPROM within 4 s of being updated.

Table 3. bq2060 Register Functions

FUNCTION	COMMAN	D CODE	CMD ACCECC	LIMITO	
FUNCTION	SMBus	HDQ16	SMBus ACCESS	UNITS	
ManufacturerAccess	0x00	0x00	read/write	n/a	
RemainingCapacityAlarm	0x01	0x01	read/write	mAh, 10 mWh	
RemainingTimeAlarm	0x02	0x02	read/write	minutes	
BatteryMode	0x03	0x03	read/write	n/a	
AtRate	0x04	0x04	read/write	mAh, 10 mWh	
AtRateTimeToFull	0x05	0x05	read	minutes	
AtRateTimeToEmpty	0x06	0x06	read	minutes	
AtRateOK	0x07	0x07	read	Boolean	
Temperature	80x0	0x08	read	0.1°K	
Voltage	0x09	0x09	read	mV	
Current	0x0a	0x0a	read	mA	
AverageCurrent	0x0b	0x0b	read	mA	
MaxError	0X0c	0X0c	read	percent	
RelativeStateOfCharge	0x0d	0x0d	read	percent	
AbsoluteStateOfCharge	0x0e	0x0e	read	percent	
RemainingCapacity	0x0f	0x0f	read	mAh, 10 mWh	
FullChargeCapacity	0x10	0x10	read	mAh, 10 mWh	
RunTimeToEmpty	0x11	0x11	read	minutes	
AverageTimeToEmpty	0x12	0x12	read	minutes	
AverageTimeToFull	0x13	0x13	read	minutes	
ChargingCurrent	0x14	0x14	read	mA	
ChargingVoltage	0x15	0x15	read	mV	
Battery Status	0x16	0x16	read	n/a	
CycleCount	0x17	0x17	read	cycles	
DesignCapacity	0x18	0x18	read	mAh, 10 mWh	
DesignVoltage	0x19	0x19	read	mV	
SpecificationInfo	0x1a	0x1a	read	n/a	
ManufactureDate	0x1b	0x1b	read	n/a	
SerialNumber	0x1c	0x1c	read	Integer	
Reserved	0x1d-0x1f	0x1d-0x1f	-	-	
ManufacturerName	0x20	0x20-0x25	read	string	
DeviceName	0x21	0x28-0x2b	read	string	
DeviceChemistry	0x22	0x30-0x32	read	string	
ManufacturerData	0x23	0x38-0x3b	read	string	

m۷



VCELL1

FUNCTION	COMMAND	CODE	SMBus ACCESS	LIMITO	
FUNCTION	SMBus	HDQ16	SIMBUS ACCESS	UNITS	
Pack Status	0x2f (LSB)	0x2f (LSB)	read/write	n/a	
Pack Configuration	0x2f (MSB)	0x2f (MSB)	read/write	n/a	
VCELL4	0x3c	0x3c	read/write	mV	
VCELL3	0x3d	0x3d	read/write	mV	
VCELL2	0x3e	0x3e	read/write	mV	

0x3f

Table 3. bq2060 Register Functions (continued)

Table 4. State of Charge Based on Low Battery Voltage

read/write

THRESHOLD	STATE OF CHARGE IN RM
EDV0	0%
EDV1	3%
EDV2	Battery Low %

# End-of-Discharge Thresholds And Capacity Correction

0x3f

The bq2060 monitors the battery for three low-voltage thresholds, EDV0, EDV1, and EDV2. The EDV thresholds are programmed in *EDVF/EDV0* EE 0x72–0x73, *EMF/EDV1* EE 0x74–0x75, and *EDV C1/C0 Factor/ EDV2* EE 0x78–0x79. If the CEDV bit in Pack Configuration is set, automatic EDV compensation is enabled and the bq2060 computes the EDV0, EDV1, and EDV2 thresholds based on the values in EE 0x72–0x7d, 0x06, and the battery's current discharge rate, temperature, capacity, and cycle count. The bq2060 disables EDV detection if Current() exceeds the *Overload Current* threshold programmed in EE 0x46 - EE 0x47. The bq2060 resumes EDV threshold detection after Current() drops below the overload current threshold. Any EDV threshold detected is reset after a 10-mAh charge is applied.

The bg2060 uses the thresholds to apply voltage-based corrections to the RM register according to Table 4.

The bq2060 adjusts RM as it detects each threshold. If the voltage threshold is reached before the corresponding capacity on discharge, the bq2060 reduces RM to the appropriate amount as shown in Table 4. If RM reaches the capacity level before the voltage threshold is reached on discharge, the bq2060 prevents RM from decreasing until the battery voltage reaches the corresponding threshold.

#### Self-Discharge

The bq2060 estimates the self-discharge of the battery to maintain an accurate measure of the battery capacity during periods of inactivity. The algorithm for self-discharge estimation takes a programmed estimate for the expected self-discharge rate at 25°C stored in EEPROM and makes a fixed reduction to RM of an amount equal to RemainingCapacity()/256. The bq2060 makes the fixed reduction at a varying time interval that is adjusted to achieve the desired self-discharge rate. This method maintains a constant granularity of 0.39% for each self-discharge adjustment, which may be performed multiple times per day, instead of once per day with a potentially large reduction.

The self-discharge estimation rate for 25°C is doubled for each 10 degrees above 25°C or halved for each 10 degrees below 25°C. The following table shows the relation of the self-discharge estimation at a given temperature to the rate programmed for 25°C (Y% per day):

TEMPERATURE (C)	SELF-DISCHARGE RATE
Temp < 10	¼Y% per day
10 ≤ Temp <20	½Y% per day
20 ≤ Temp <30	Y% per day
30 ≤ Temp <40	2Y% per day
40 ≤ Temp <50	4Y% per day
50 ≤ Temp <60	8Y% per day
60 ≤ Temp <70	16Y% per day
70 ≤ Temp	32Y% per day



The interval at which RM is reduced is given by the following equation, where n is the appropriate factor of 2 n =  $\frac{1}{4}$ ,  $\frac{1}{2}$ , 1, 2, . . . ):

$$Self-DischargeUpdateTime = \frac{640 \times 13500}{256 \times n \times (Y\% \text{ per day})} \text{ seconds}$$
 (2)

The timer that keeps track of the self-discharge update time is halted whenever charge activity is detected. The timer is reset to zero if the bq2060 reaches the RemainingCapacity()=FullChargeCapacity() condition while charging.

**Example**: If  $T = 35^{\circ}C$  (n = 2) and programmed self-discharge rate Y is 2.5 (2.5% per day at 25°C), the bq2060 reduces RM by RM/256 (0.39%) every

$$\frac{640 \times 13500}{256 \times n \times (Y\% \text{ per day})} = 6750 \text{ seconds}$$
 (3)

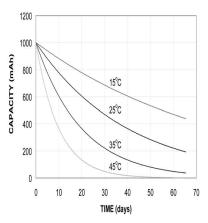


Figure 7. Self-Discharge at 2.5%/Day @25°C

This means that a 0.39% reduction of RM is made 12.8 times per day to achieve the desired 5% per day reduction at 35°C.

Figure 7 illustrates how the self-discharge estimate algorithm adjusts RemainingCapacity() versus temperature.

# **Light Discharge Or Suspend Current Compensation**

The bq2060 can be configured in two ways to compensate for small discharge currents that produce a signal below the digital filter. First, the bq2060 can decrement RM and DCR at a rate determined by the value stored in *Light Discharge Current* EE 0x2b when it detects no discharge activity and the SMBC and SMBD lines are high. *Light Discharge Current* has a range of 44 µA to 11.2 mA.

Alternatively, the bq2060 can be configured to disable the digital filter for discharge when the SMBC and SMBD lines are high. In this way, the digital filter does not mask the leakage current signal. The bq2060 is configured in this mode by setting the NDF bit in *Control Mode*.

# Midrange Capacity Corrections

The bq2060 applies midrange capacity corrections when the VCOR bit is set in *Pack Configuration*. The bq2060 adjusts RM to the associated percentage at three different voltage levels: VOC25, VOC50, and VOC75. The VOC values represent the open-circuit battery voltage which RM corresponds to the associated state of charge for each threshold.

THRESHOLD	ASSOCIATED STATE OF CHARGE
VOC25	25%
VOC50	50%
VOC75	75%



For the midrange corrections to occur, the temperature must be in the range of 19°C to 31°C inclusive and the Current() and AverageCurrent() must both be between –64 mA and 0. The bq2060 makes midrange corrections as shown in Table 5.

**Table 5. Midrange Corrections** 

	CONDITION	RESULT
	≥ VOC75 and RelativeStateOfCharge() ≤ 63%	RelativeStateOfCharge() set to 75%
	< VOC75 and RelativeStateOfCharge() ≥ 87%	RelativeStateOfCharge() set to 75%
\/altaga/\	≥ VOC50 and RelativeStateOfCharge() ≤ 38%	RelativeStateOfCharge() set to 50%
Voltage()	< VOC50 and RelativeStateOfCharge() ≥ 62%	RelativeStateOfCharge() set to 50%
	≥ VOC25 and RelativeStateOfCharge() ≤ 13%	RelativeStateOfCharge() set to 25%
	< VOC25 and RelativeStateOfCharge() ≥ 37%	RelativeStateOfCharge() set to 25%

# **Charge Control**

# Charging Voltage and Current Broadcasts

The bq2060 supports SBS charge control by broadcasting the ChargingCurrent() and ChargingVoltage() to the Smart Charger address. The bq2060 broadcasts the requests every 10 s. The bq2060 updates the values used the charging current and voltage broadcasts based on the battery's state of charge, voltage, and temperature. The fast-charge rate is programmed in *Fast-Charging Current* EE 0x1a - 0x1b while the charge voltage is programmed in *Charging Voltage* EE 0x0a-0x0b.

The bq2060 internal charge control is compatible with popular rechargeable chemistries. The primary charge-termination techniques include a change in temperature over a change in time  $(\Delta T/\Delta t)$  and current taper, for nickel-based and Li-ion chemistries, respectively. The bq2060 also provides pre-charge qualification and a number of safety charge suspensions based on current, voltage, temperature, and state of charge.

# Alarm Broadcasts to Smart Charger and Host

If any of the bits 8–15 in BatteryStatus() is set, the bq2060 broadcasts an AlarmWarning() message to the Host address. If any of the bits 12–15 in BatteryStatus() are set, the bq2060 also sends an AlarmWarning() message to the Smart Charger address. The bq2060 repeats the AlarmWarning() message every 10 s until the bits are cleared.

# Pre-Charge Qualification

The bq2060 sets ChargingCurrent() to the pre-charge rate as programmed in *Pre-Charge Current* EE 0x1e-0x1f under the following conditions:

- **Voltage**: The bq2060 requests the pre-charge charge rate when Voltage() drops below the EDV0 threshold (compensated or fixed EDVs). Once requested, a pre-charge rate remains until Voltage() increases above the EDVF threshold. The bq2060 also broadcasts the pre-charge value immediately after a device reset until Voltage() is above the EDVF threshold. This threshold is programmed in *EDVF/EDV0* EE 0x72-0x73.
- **Temperature**: The bq2060 requests the pre-charge rate when Temperature() is between 0°C and 5°C. Temperature() must rise above 5°C before the bq2060 requests the fast-charge rate.

# **Charge Suspension**

The bq2060 may temporarily suspend charge if it detects a charging fault. A charging fault includes the following conditions.

Overcurrent: An overcurrent condition exists when the bq2060 measures the charge current to be more than
the Overcurrent Margin above the ChargingCurrent(). Overcurrent Margin is programmed in EE 0x49. On
detecting an overcurrent condition, the bq2060 sets the ChargingCurrent() to zero and sets the
TERMINATE\_CHARGE\_ALARM bit in Battery Status(). The overcurrent condition and TERMINATE\_
CHARGE\_ALARM are cleared when the measured current drops below the ChargingCurrent plus the
Overcurrent Margin.



- Overvoltage: An overvoltage condition exists when the bq2060 measures the battery voltage to be more than the Overvoltage Margin above the ChargingVoltage() or a Li-ion cell voltage has exceeded the overvoltage limit programmed in Cell Under-/Overvoltage. Overvoltage Margin is programmed in EE 0x48 and Cell Under-/Overvoltage in EE 0x4a (least significant nibble). On detecting an overvoltage condition, the bq2060 sets the ChargingCurrent() to zero and sets the TERMINATE\_CHARGE\_ALARM bit in BatteryStatus(). The bq2060 clears the TERMINATE\_CHARGE\_ALARM bit when it detects that the battery is no longer being charged (DISCHARGING bit set in BatteryStatus()). The bq2060 continues to broadcast zero charging current until the overvoltage condition is cleared. The overvoltage condition is cleared when the measured battery voltage drops below the ChargingVoltage() plus the Overvoltage Margin or when the CVOV bit is reset.
- Over-Temperature: An over-temperature condition exists when Temperature() is greater than or equal to the Max T value programmed in EE 0x45 (most significant nibble). On detecting an over-temperature condition, the bq2060 sets the ChargingCurrent() to zero and sets the OVER\_TEMP\_ALARM and TERMINATE\_CHARGE\_ ALARM bit in BatteryStatus() and the CVOV bit in Pack Status. The over-temperature condition is cleared when Temperature() is equal to or below (Max T- 5°C).
- Overcharge: An overcharge condition exists if the battery is charged more than the *Maxmum Overcharge* value after RM = FCC. *Maximum Overcharge* is programmed in EE 0x2e–0x2f. On detecting an overcharge condition, the bq2060 sets the ChargingCurrent() to zero and sets the OVER\_CHARGED\_ALARM, TERMINATE\_CHARGE\_ ALARM, and FULLY\_CHARGED bits in BatteryStatus(). The bq2060 clears the OVER\_ CHARGED\_ALARM and TERMINATE\_CHARGE\_ ALARM when it detects that the battery is no longer being charged. The FULLY\_CHARGED bit remains set and the bq2060 continues to broadcast zero charging current until RelativeStateOfCharge() is less than *Fully Charged Clear*% programmed in EE 0x4c.The counter used to track overcharge capacity is reset with 2mAh of discharge.
- Under-Temperature: An under-temperature condition exists if Temperature() < 0°C. On detecting an under-temperature condition, the bq2060 sets ChargingCurrent() to zero. The bq2060 sets ChargingCurrent() to the appropriate pre-charge rate or fast-charge rate when Temperature() ≥ 0°C.</li>

# **Primary Charge Termination**

The bq2060 terminates charge if it detects a charge-termination condition. A charge-termination condition includes the following.

- ΔT/Δt: For ΔT/Δt, the bq2060 detects a change in temperature over many seconds. The ΔT/Δt setting is programmable in both the temperature step, DeltaT (1.6°C 4.6°C), and the time step, DeltaT Time (20 s-320 s). Typical settings for 1°C/minute include 2°C/120 s and 3°C/180 s. Longer times are required for increased slope resolution. The DeltaT value is programmed in EE 0x45 (least significant nibble) and the Delta T Time in EE 0x4e.
  - In addition to the  $\Delta T/\Delta t$  timer, a holdoff timer starts when the battery is being charged at more than 255 mA and the temperature is above 25°C. Until this timer expires,  $\Delta T/\Delta t$  detection is suspended. If Current() drops below 256 mA or Temperature() below 25°C, the hold-off timer resets and restarts only when the current and temperature conditions are met again. The holdoff timer is programmable (20 s–320 s) with *Holdoff Time* value in EE 0x4f.
- Current Taper: For current taper, ChargingVoltage() must be set to the pack voltage desired during the
  constant-voltage phase of charging. The bq2060 detects a current taper termination when the pack voltage is
  greater than the voltage determined by Current Taper Qual Voltage in EE 0x4f and the charging current is
  below a threshold determined by Current Taper Threshold in EE 0x4e, for at least 40 s. The bq2060 uses the
  VFC to measure current for current taper termination. The current polarity must remain positive as measured
  by the VFC during this time.

Once the bq2060 detects a primary charge termination, the bq2060 sets the TERMINATE\_CHARGE\_ALARM and FULLY\_CHARGED bits in BatteryStatus(), and sets the ChargingCurrent() to the maintenance charge rate as programmed in *Maintenance Charging Current* EE 0x1c-0x1d. On termination, the bq2060 also sets RM to a programmed percentage of FCC, provided that RelativeStateOfCharge() is below the desired percentage of FCC and the CSYNC bit in *Pack Configuration* EE 0x3f is set. If the CSYNC bit is not set and RelativeStateOfCharge() is less than the programmed percentage of FCC, the bq2060 clears the FULLY\_CHARGED bit in BatteryStatus(). The programmed percentage of FCC, *Fast Charge Termination* %, is set in EE 0x4b. The



bq2060 clears the FULLY\_CHARGED bit when RelativeStateOfCharge() is less than the programmed *Fully Charged Clear* %. The bq2060 broadcasts the fast-charge rate when the FULLY\_CHARGED bit is cleared and voltage and temperature permit. The bq2060 clears the TERMINATE\_CHARGE\_ALARM when it no longer detects that the battery is being charged or it no longer detects the termination condition. See Table 6 for a summary of BatteryStatus() alarm and status bit operation.

# **Display Port**

#### General

The display port drives a 4- or 5-LED, bar-graph display. The display is activated by a logic signal on the DISP input. The bq2060 can display RM in either a relative or absolute mode with each LED representing a percentage of the full-battery reference. In relative mode, the bq2060 uses FCC as the full-battery reference; in absolute mode, it uses DC.

The DMODE bit in *Pack Configuration* programs bq2060 for the absolute or relative display mode. The LED bit in *Control Mode* programs the 4-or 5-LED option. A 5th LED can be used with the 4-LED display option to show when the battery capacity is ≥ to 100%.

#### Activation

The display may be activated at any time by a high-to-low transition on the  $\overline{\text{DISP}}$  input. This is usually accomplished with a pullup resistor and a pushbutton switch. Detection of the transition activates the display and starts a 4-s display timer. The timer expires and turns off the display whether  $\overline{\text{DISP}}$  was brought low momentarily or held low indefinitely. Reactivation of the display requires that the  $\overline{\text{DISP}}$  input return to a logic-high state and then transition low again. The second high-to-low transition must occur after the display timer expires. The bq2060 requires the  $\overline{\text{DISP}}$  input to remain stable for a minimum of 250ms to detect the logic state.

If the EDV0 bit is set, the bq2060 disables the LED display. The display is also disabled during a VFC calibration and should be turned off before entering the low-power storage mode.

## **Display Modes**

In relative mode, each LED output represents 20% or 25% of the RelativeStateOfCharge() value. In absolute mode, each LED output represents 20% or 25% of the AbsoluteStateOfCharge() value. Table 7 shows the display operation.

In either mode, the bq2060 blinks the LED display if RemainingCapacity() is less than Remaining CapacityAlarm(). The display is disabled if EDV0 = 1.

# Secondary Protection for Li-Ion

Undervoltage and overvoltage thresholds may be programmed in the byte value *Cell Under/Over Voltage* EE 0x4a to set a secondary level of protection for Lithium ion cells. The bq2060 checks individual cell voltages for undervoltage and overvoltage conditions. The bq2060 displays the results in the Pack Status register and controls the state of the FET control outputs CFC and DFC. any cell voltage is less than the  $V_{UV}$  threshold, the bq2060 sets the CVUV bit in Pack Status and pulls the DFC pin to a logic low. If any cell voltage is greater than the  $V_{OV}$  threshold, the bq2060 sets the CVOV bit in Pack Status and pulls the CFC pin to a logic low.

#### Low-Power Storage Mode

The bq2060 enters low-power mode 5 to 8 s after receiving the Enable Low-Power command. In this mode the bq2060 consumes less than 10  $\mu$ A. A rising edge on SMBC, SMBD, or HDQ16 restores the bq2060 to the full operating mode. The bq2060 does not perform any gas gauge functions during low-power storage mode.

# **Device Reset**

The bq2060 can be reset with commands over the HDQ16 or SMBus. On reset, the bq2060 initializes its internal registers with the information contained in the configuration EEPROM. The following command sequence initiates a full bq2060 reset:

Write 0x4f to 0xff5a

Write 0x7d to 0x0000

Write 0x7d to 0x0080



# Table 6. Alarm and Status Bit Summary<sup>(1)</sup>

BATTERY STATE	CONDITIONS	CC() STATE AND BatteryStatus BITS SET	CC() = FAST OR PRE-CHARGE CURRENT AND/OR BITS CLEARED
Overcurrent	C() ≥ CC() + Overcurrent Margin	CC() = 0, TCA = 1	C() < CC() + Overcurrent Margin
	V() ≥ CV() + Overvoltage Margin	TCA = 1	DISCHARGING = 1
Overvoltage	VCELL1, 2, 3, or 4 > Cell Over Voltage	CC() = 0, $CVOV = 1$	V() < CV() + Overvoltage Margin Li-ion cell voltage ≤Cell Over Voltage
Over temperature	T() ≥ <i>Max T</i>	CC() = 0, OTA= 1, TCA = 1, CVOV = 1	T() ≤ <i>Max T</i> - 5°C or T() ≤ 43°C
	Capacity added after RM() = FCC()	CC() = 0, FC = 1	RSOC() < Fully Charged Cleared %
Overcharge	≥ Maximum Overcharge	OCA = 1, TCA = 1	DISCHARGING = 1
Under temperature	T() < 0°C	CC() = 0	$0^{\circ}C \le T() < 5^{\circ}C$ , $CC() = Pre-Charge Current$ $T() \ge 5^{\circ}C$ , $CC() = Fast-Charging Current$
Fast charge termination	ΔT/Δt or Current Taper	CC() = Maintenance Charging Current, FC = 1	RSOC() < Fully Charged Cleared %
		TCA = 1	DISCHARGING = 1 or termination condition is no longer valid.
Fully discharged	V() ≤ EDV2	FD = 1	RSOC() > 20%
	V() ≤ EDV0	TDA = 1	V() > EDV0
Overdischarged	VCELL1, 2, 3 or 4 < Cell Under Voltage	TDA = 1, CVUV = 1	VCELL1, 2, 3, or 4 ≥Cell Under Voltage
Low capacity	RM() < RCA()	RCA = 1	RM() ≥ RCA()
Low run-time	ATTE() < RTA()	RTA = 1	ATTE() ≥ RTA()

<sup>(1)</sup> C() = Current(), CV() = ChargingVoltage(), CC() = ChargingCurrent(), V() = Voltage(), T() = Temperature(), TCA = TERMINATE\_CHARGE\_ALARM, OTA = OVER\_TEMPERATURE\_ALARM, OCA = OVER\_CHARGED\_ALARM, TDA = TERMINATE\_DISCHARGE\_ALARM, FC = FULLY\_CHARGED, FD = FULLY\_DISCHARGED, RSOC() = RelativeStateOfCharge(). RM() = RemainingCapacity(), RCA = REMAINING\_CAPACITY\_ALARM, RTA = REMAINING\_TIME\_ALARM, ATTE() = AverageTimeToEmpty(), RTA() = RemainingTimeAlarm(), RCA() = RemainingCapacityAlarm(), FCC() = FullChargeCapacity.

Table 7. DISPLAY MODE (5 LED)

CONDITION	5 LED DISPLAY OPTION				
RELATIVE OR ABSOLUTE STATEOFCHARGE ()	LED1	LED2	LED3	LED4	LED5
EDV0 = 1	OFF	OFF	OFF	OFF	OFF
<20%	ON	OFF	OFF	OFF	OFF
≥20%, <40%	ON	ON	OFF	OFF	OFF
≥40%, <60%	ON	ON	ON	OFF	OFF
≥60%, <80%	ON	ON	ON	ON	OFF
≥80%	ON	ON	ON	ON	ON



# Table 8. DISPLAY MODE (4 LED)

CONDITION	4 LED DISPLAY OPTION			
RELATIVE OR ABSOLUTE STATEOFCHARGE()	LED1	LED2	LED3	LED4
EDV0 = 1	OFF	OFF	OFF	OFF
<25%	ON	OFF	OFF	OFF
≥25%, <50%	ON	ON	OFF	OFF
≥50%, <75%	ON	ON	ON	OFF
≥75%	ON	ON	ON	ON

#### Communication

The bq2060 includes two types of communication ports: SMBus and HDQ16. The SMBus interface is a 2-wire bidirectional protocol using the SMBC (clock) and SMBD (data) pins. The HDQ16 interface is a 1-wire bidirectional protocol using the HDQ16 pin. All three communication lines are isolated from  $V_{CC}$  and may be pulled up higher than  $V_{CC}$ . Also, the bq2060 does not pull these lines low if  $V_{CC}$  to the part is zero. HDQ16 should be pulled down with a 100-k $\Omega$  resistor if not used.

The communication ports allow a host controller, an SMBus-compatible device, or other processor to access the memory registers of the bq2060. In this way a system can efficiently monitor and manage the battery.

## **SMBus**

The SMBus interface is a command-based protocol processor acting as the bus master initiates communication to the bq2060 by generating a START condition. The START condition consists of a high-to-low transition of the SMBD line while the SMBC is high. The processor then sends the bq2060 device address of 0001011 (bits 7–1) plus a R/W bit (bit 0) followed by an SMBus command code. The R/W bit and the command code instruct the bq2060 to either store the forthcoming data to a register specified by the SMBus command code or output the data from the specified register. The processor completes the access with a STOP condition. A STOP condition consists of a low-to-high transition of the SMBD line while the SMBC is high. With the SMBus protocol, the most significant bit of a data byte is transmitted first.

In some instances, the bq2060 acts as the bus master. This occurs when the bq2060 broadcasts charging requirements and alarm conditions to device addresses 0x12 (SBS Smart Charger) and 0x10 (SBS Host Controller.)

#### SMBus Protocol

The bq2060 supports the following SMBus protocols:

- Read Word
- Write Word
- Read Block

A processor acting as the bus master uses the three protocols to communicate with the bq2060. The bq2060 acting as the bus master uses the WriteWord protocol.

The SMBD and SMBC pins are open drain and require external pullup resistors.

# SMBus Packet Error Checking

The bq2060 supports Packet Error Checking as a mechanism to confirm proper communication between it and another SMBus device. Packet Error Checking requires that both the transmitter and receiver calculate a Packet Error Code (PEC) for each communication message. The device that supplies the last byte in the communication message appends the PEC to the message. The receiver compares the transmitted PEC to its PEC result to determine if there is a communication error.

#### **PEC Protocol**

The bq2060 can receive or transmit data with or without PEC. Figure 8 shows the communication protocol for the Read Word, Write Word, and Read Block messages without PEC. Figure 9 includes PEC.



In the Write Word protocol, the bq2060 receives the PEC after the last byte of data from the host. If the host does not support PEC, the last byte of data is followed by a STOP condition. After receipt of the PEC, the bg2060 compares the value to its calculation. If the PEC is correct, the bg2060 responds with an ACKNOWLEDGE. If is not correct, the bg2060 responds with a NOT ACKNOWLEDGE and sets an error code.

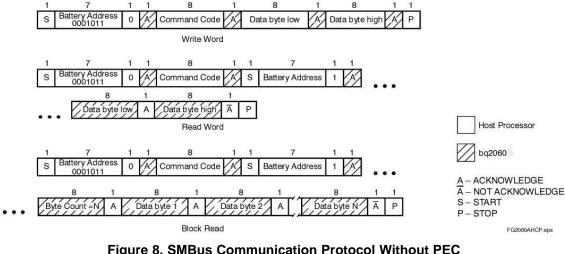


Figure 8. SMBus Communication Protocol Without PEC

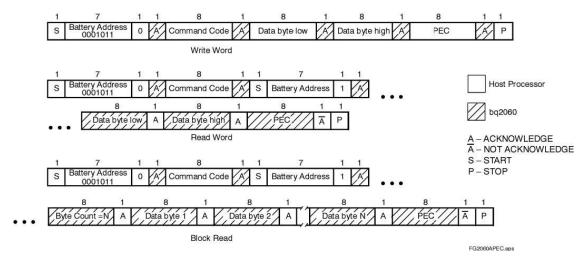


Figure 9. SMBus Communication Protocol With PEC

In the Read Word and Block Read, the host generates an ACKNOWLEDGE after the last byte of data is sent by the bq2060. The bq2060 then sends the PEC and the host acting as a master-receiver generates a NOT ACKNOWLEDGE and a STOP condition.

# **PEC Calculation**

The basis of the PEC calculation is an 8-bit cyclic redundancy check (CRC-8) based on the polynomial  $C(X) = X^8$ + X<sup>2</sup> + X<sup>1</sup> + 1. The PEC calculation includes all bytes in the transmission, including address, command, and data. The PEC calculation does not include ACKNOWLEDGE, NOT ACKNOWLEDGE, START, STOP, and repeated START bits.

For example, the host requests RemainingCapacity() from the bg2060. This includes the host following the Read Word protocol. The bg2060 calculates the PEC based on the following 5 bytes of data, assuming that the remaining capacity of the battery is 1001 mAh.

- Battery Address with  $R/\overline{W} = 0$ : 0x16
- Command Code for RemainingCapacity(): 0x0f



- Battery Address with R/W = 1: 0x17
- RemainingCapacity(): 0x03e9

For 0x160f17e903, the bq2060 transmits a PEC of 0xe8 to the host.

#### PEC Enable in Master Mode

PEC for master mode broadcasts to the charger, host, or both can be enabled/disabled with the combination the bits HPE and CPE in *Control Mode*.

#### SMBus On and Off State

The bq2060 detects whether the SMBus enters the Off state by monitoring the SMBC and SMBD lines. When both signals are continually low for at least 2.5 s, the bq2060 detects the Off state. When the SMBC and SMBD lines go high, the bq2060 detects the On state and can begin communication within 1 ms. One-M $\Omega$  pulldown resistors on SMBC and SMBD are recommended for reliable Off tate detection.

#### HDQ16

The HDQ16 interface is a command-based protocol. (See Figure 10.) A processor sends the command code to the bq2060. The 8-bit command code consists of two fields, the 7-bit HDQ16 command code (bits 0–6) and the 1-bit R/W field. The R/W field directs the bq2060 either to

- Store the next 16 bits of data to a specified register or
- Output 16 bits of data from the specified register

With HDQ16, the least significant bit of a data byte (command) or word (data) is transmitted first.

A bit transmission consists of three distinct sections. The first section starts the transmission by either the host or the bq2060 taking the HDQ16 pin to a logic-low state for a period  $t_{STRH;B}$ . The next section is the actual data transmission, where the data bit is valid by the time,  $t_{DSU;B}$  after the negative edge used to start communication. The data bit is held for a period  $t_{DH;DV}$  to allow the host processor or bq2060 to sample the data bit.

The final section is used to stop the transmission by returning the HDQ16 pin to a logic-high state by at least the time  $t_{SSU;B}$  after the negative edge used to start communication. The final logic-high state should be until a period  $t_{CYCH;B}$  to allow time to ensure that the bit transmission was stopped properly.

If a communication error occurs (e.g.,  $t_{CYCB} > 250\mu s$ ), the host sends the bq2060 a BREAK to reinitiate the serial interface. The bq2060 detects a BREAK when the HDQ16 pin is in a logic-low state for a time  $t_B$  or greater. The HDQ16 pin is then returned to its normal ready-high logic state for a time  $t_{BR}$ . The bq2060 is then ready to receive a command from the host processor.

The HDQ16 pin is open drain and requires an external pullup resistor.

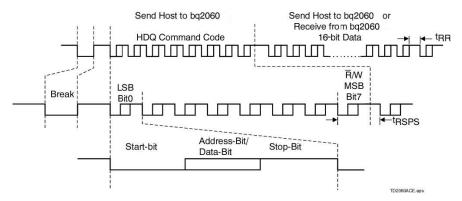


Figure 10. HDQ16 Communication Example

## **Command Codes**

The SMBus Command Codes are in (), the HDQ16 in [ ]. Temperature(), Voltage(), Current(), and AverageCurrent(), performance specifications are at regulated  $V_{CC}$  ( $V_{RO}$ ) and a temperature of 0°C–70°C.



ManufacturerAccess() (0x00); [0x00-0x01]

#### **DESCRIPTION**

This function provides writable command codes to control the bq2060 during normal operation and pack manufacture. These commands can be ignored if sent within one second after a device reset. The following list of commands are available.

**0x0618 ENABLE LOW-POWER STORAGE MODE:** Activates the low-power storage mode. The bq2060 enters the storage mode after a 5- to 8-s delay. The bq2060 accepts other commands to ManufacturerAccess() during the delay before entering low-power storage mode. The LEDs must be off before entering the low-power storage mode as the display state remains unchanged. During the delay following the low-power storage command, a VFC Calibration command may be issued.

The bq2060 clears the ManufacturerAccess() command within 900 ms of acknowledging the Enable Low-Power Storage command. The VFC Calibration command must be sent 900–1600 ms after SMBus acknowledgment of the Enable Low-Power Storage command. In this case, the bq2060 delays entering storage mode until the calibration process completes and the bq2060 stores the new calibration values in EEPROM.

**0x062b SEAL COMMAND:** Instructs the bq2060 to restrict access to those functions listed in Table 3.

#### NOTE:

The SEAL Command does not change the state of the SEAL bit in *Pack Configuration* in EEPROM. The bq2060 completes the seal function and clears ManufacturerAccess() within 900 ms of acknowledging the command.

- **0x064d CHARGE SYNCHRONIZATION:** Instructs the bq2060 to update RM to a percentage of FCC as defined in *Fast Charge Termination* %. The bq2060 updates RM and clears ManufacturerAccess() within 900 ms of acknowledging the command.
- **0x0653 ENABLE VFC CALIBRATION:** Instructs the unsealed bq2060 to begin VFC calibration. With this command, the bq2060 deselects the SR<sub>1</sub> and SR<sub>2</sub> inputs and calibrates for IC offset only. It is best to avoid charge or discharge currents through the sense resistor during this calibration process.
- **0x067e ALTERNATE VFC CALIBRATION:** Instructs the unsealed bq2060 to begin VFC calibration. With this command, the bq2060 does not deselect the SR<sub>1</sub> and SR<sub>2</sub> inputs and calibrates for IC and PCB offset. **During this procedure no charge or discharge currents occur.**

During VFC calibration, the bq2060 disables the LED display and accepts only the Stop VFC Calibration and the SEAL Command to ManufacturerAccess(). The bq2060 disregards all other commands. SMBus communication should be kept to a minimum during VFC calibration to reduce the noise level and allow a more accurate calibration.

Once started, the VFC calibration procedure completes automatically. When complete, the bq2060 saves the calibration values in EEPROM. The calibration normally takes about 8 to 10 minutes. The calibration time is inversely proportional to the bq2060 VFC (and PCB) offset error. The bq2060 caps the calibration time at one hour in the event of calibrating a zero-offset error. The VFC calibration can be done as the last step in a battery pack test procedure because the calibration can complete automatically after removal from a test setup.

The bq2060 clears ManufacturerAccess() within 900 ms and starts calibration within 3.2 s of acknowledging the command.

- **0X0660 STOP VFC CALIBRATION:** Instructs the bq2060 to abort a VFC calibration procedure. If aborted, the bq2060 disables offset correction. The bq2060 stops calibration within 20 ms of acknowledging the command.
- **0X0606 PROGRAM EEPROM:** Instructs the unsealed bq2060 to connect the SMBus to the EEPROM I<sup>2</sup>C bus. The bq2060 applies power to the EEPROM within 900 ms of acknowledging the command. After issuing the program EEPROM command, the bq2060 monitoring functions are disabled until the I<sup>2</sup>C bus is disconnected. The bq2060 disconnects the I<sup>2</sup>C bus when it detects that the Battery Address 0x16 is sent over the SMBus. The Battery Address 0x16 to disconnect the I<sup>2</sup>C bus should not be sent until 10 ms after the last write to the EEPROM.



**Example**: The following sequence of actions is an example of how to use the ManufacturerAccess() commands in an efficient manner to take a battery pack that has completed all testing and calibration except for VFC calibration and to make it ready for shipment in the SEALED state and in low-power storage mode:

- Complete testing and calibration with desired final values stored in EEPROM. This process includes setting
  the SEAL bit in *Pack Configuration*. Sending a reset command to the bq2060 during test ensures that RAM
  values correspond to the final EEPROM values
- 2. If the initial value of RemainingCapacity() must be non-zero, the desired value may be written to Command 0x26 with the pack unsealed. A reset sent after this step resets RM to zero.
- 3. Issue the Enable Low-Power Storage Mode command.
- 4. Within 900–1600 ms after sending the Enable Low-Power command, issue the Enable VFC Calibration command. This delays the low-power storage mode until after VFC calibration completion.
- 5. Issue the SEAL Command subsequent to the VFC Calibration command. The bq2060 must receive the SEAL Command before VFC calibration completes. The bq2060 resets the OCE bit in Pack Status when calibration begins and sets the bit when calibration successfully completes.

After VFC calibration completes automatically, the bq2060 saves the VFC offset cancellation values in EEPROM and enters the low-power storage mode in about 20 s. In addition, the bq2060 is sealed, allowing access as defined in Table 3 only.

#### **PURPOSE**

The ManufacturerAccess() function provides the system host access to bq2060 functions that are not defined by the SBD.

SMBUS PROTOCOL Read or Write Word

**INPUT/OUTPUT:** Word

RemainingCapacityAlarm() (0x01); [0x01]

## **DESCRIPTION**

Sets or gets the low-capacity threshold value. Whenever the RemainingCapacity() falls below the low-capacity value, the bq2060 sends AlarmWarning() messages the SMBus Host with the REMAINING\_CAPACITY\_ ALARM bit set. A low-capacity value of 0 disables this alarm. The bq2060 initially sets the low-capacity value to *Remaining Capacity Alarm* value programmed in EE 0x04 - 0x05. The low-capacity value remains unchanged until altered by the Remaining-CapacityAlarm() function. The low-capacity value may be expressed in either current (mA) or power (10 mWh) depending on the setting of the BatteryMode()'s CAPACITY\_ MODE bit.

# **PURPOSE**

The RemainingCapacityAlarm() function can be used by systems that know how much power they require to save their operating state. It enables those systems to more finely control the point at which they transition into suspend or hibernate state. The low-capacity value can read to verify the value in use by the bq2060's low capacity alarm.

SMBus PROTOCOL Read or Write Word

**INPUT/OUTPUT** Unsigned integer—value below which Low Capacity messages are sent.

BATTERY MODES			
	CAPACITY_MODE bit = 0	CAPACITY_MODE bit = 1	
Units	mAh @ C/5	10 mWh @ P/5	
Range	0-65,535 mAh	0-65,535 10 mWh	
Granularity	Not applicable		
Accuracy	See RemainingCapacity()		



## RemainingTimeAlarm() (0x02); [0x02]

#### **DESCRIPTION**

Sets or gets the remaining time alarm value. Whenever the AverageTimeToEmpty() falls below the remaining time value, the bq2060 sends AlarmWarning() messages to the SMBus Host with the REMAINING\_TIME\_ALARM bit set. A remaining time value of 0 effectively disables this alarm. The bq2060 initially sets the remaining time value to the Remaining Time Alarm value programmed in EE 0x02 - 0x03. The remaining time value remains unchanged until altered by the RemainingTimeAlarm() function.

#### **PURPOSE**

The RemainingTimeAlarm() function can be used by systems that want to adjust when the remaining time alarm warning is sent. The remaining time value can be read to verify the value in use by the bq2060' RemainingTimeAlarm().

#### SMBus PROTOCOL Read or Write Word

#### INPUT/OUTPUT:

Unsigned integer—the point below which remaining time messages are sent.

Units: minutes

Range: 0 to 65,535 minutes Granularity: Not applicable

Accuracy: see AverageTimeToEmpty()

BatteryMode() (0x03); [0x03]

**DESCRIPTION** This function selects the various battery operational modes and reports the battery's mode and requests.

Defined modes include

- Whether the battery's capacity information is specified in mAh or 10 mWh (CAPACITY\_MODE bit)
- Whether the ChargingCurrent() and ChargingVoltage() values are broadcast to the Smart Battery Charger when the bq2060 detects that the battery requires charging (CHARGER\_MODE bit)
- Whether all broadcasts to the Smart Battery Charger and Host are disabled

The defined request condition is the battery requesting conditioning cycle (RELEARN\_FLAG).

# **PURPOSE**

The CAPACITY\_MODE bit allows power management systems to best match their electrical characteristics with those reported by the battery. For example, a switching power supply represents a constant power load, whereas a linear supply is better represented by a constant current model. The CHARGER\_MODE bit allows a SMBus Host or Smart Battery Charger to override the Smart Battery's desired charging parameters disabling the bq2060's broadcasts. The RELEARN\_ FLAG bit allows the bq2060 to request a conditioning cycle.

# SMBus PROTOCOL Read or Write Word

#### INPUT/OUTPUT

Unsigned integer —bit mapped— see below.

Units: not applicable

Range: 0-1

Granularity: not applicable Accuracy: not applicable

The BatteryMode() word is divided into two halves, the most significant bit (bits 8–15) which is read/write and the least significant bit (bits 0–7) which is read only. The bg2060 forces bits 0–6 to zero and prohibits writes to bit 7.

Table 9 summarizes the meanings of the individual bits in the BatteryMode() word and specifies the default values, where applicable, are noted.



# Table 9. Battery Mode Bits and Values

BATTERY MODE() BITS	BITS USED	FORMAT	ALLOWABLE VALUES
INTERNAL_CHARGE_CONTR OLLER	0	Read only bit flag	
PRIMARY_BATTERY_SUPPO RT	1	Read only bit flag	
Reserved	2–6		
RELEARN_FLAG	7	Read only bit flag	0—Battery OK 1—Relearn cycle requested
CHARGE_CONTROLLER_ENA BLED	8	R/W bit flag	
PRIMARY_BATTERY	9	R/W bit flag	
Reserved	10–12		
ALARM_MODE	13	R/W bit flag	<ul><li>0—Enable alarm broadcast (default)</li><li>1—Disable alarm broadcast</li></ul>
CHARGER_MODE	14	R/W bit flag	0—Enable charging broadcast (default) 1—Disable charging broadcast
CAPACITY_MODE	15	R/W bit flag	0—Report in mA or mAh (default) 1—Report in 10mW or 10mWh

INTERNAL\_CHARGE\_CONTROLLER bit is not used by the bq2060.

**PRIMARY BATTERY SUPPORT** bit is not used by the bg2060.

**RELEARN\_FLAG** bit set indicates that the bq2060 is requesting a capacity relearn cycle for the battery. The bq2060 sets the RELEARN\_FLAG on a full reset and it detects 20 cycle counts without an FCC update. The bq2060 clears this flag after a learning cycle has been completed.

CHARGE\_CONTROLLER\_ENABLED bit is not used by the bq2060. The bq2060 forces this bit to zero.

PRIMARY BATTERY bit is not used by the bg2060. The bg2060 forces this bit to zero.

**ALARM\_MODE** bit is set to disable the bq2060's ability to master the SMBus and send AlarmWarning() messages to the SMBus Host and the Smart Battery Charger. When set, the bq2060 does *not* master the SMBus, and AlarmWarning() messages are *not* sent to the SMBus Host and the Smart Battery Charger **for a period of no more than 65 s and no less than 45 s**. When cleared (default), the Smart Battery sends the AlarmWarning() messages to the SMBus Host and the Smart Battery Charger any time an alarm condition is detected.

- The bq2060 polls the ALARM\_MODE bit at least every 150 ms. Whenever the ALARM\_MODE bit is set, the bq2060 resets the bit and starts or restarts a 55 s (nominal) timer. After the timer expires, the bq2060 automatically enables alarm broadcasts to ensure that the accidental deactivation of broadcasts does not persist. To prevent the bq2060 from becoming a master on the SMBus, an SMBus host must therefore continually set this bit at least once per 50s to keep the bq2060 from broadcasting alarms.
- The ALARM\_MODE bit defaults to a cleared state within 130 ms after the bq2060 detects the SMBus Off-State.
- The condition of the ALARM-MODE bit does NOT affect the operation or state of the CHARGER\_MODE bit which is used to prevent broadcasts ChargingCurrent() and ChargingVoltage() to the Smart Battery Charger.

**CHARGER\_MODE** bit enables or disables the bq2060's transmission of ChargingCurrent() and ChargingVoltage() messages to the Smart Battery Charger. When set, the bq2060 does NOT transmit ChargingCurrent() and ChargingVoltage() values to the Smart Battery Charger. When cleared, the bq2060 transmits the ChargingCurrent() and ChargingVoltage() values to the Smart Battery Charger. The CHARGER\_MODE bit defaults to a cleared state within 130 ms after the bq2060 detects the SMBus Off state.

**CAPACITY\_MODE** bit indicates if capacity information is reported in mA/mAh or 10 mW/10 mWh. When set, the bq2060 reports capacity information in 10mW/10mWh as appropriate. When cleared, the bq2060 reports capacity information in mA/mAh as appropriate. The CAPACITY\_MODE bit defaults to a cleared state within 130 ms after the bq2060 detects the SMBus Off state.

**NOTE 1:** The following functions are changed to accept or return values in mA/mAh or 10 mW/10 mWh depending on the CAPACITY MODE bit:



- RemainingCapacityAlarm()
- AtRate()
- RemainingCapacity()
- FullChargeCapacity()
- DesignCapacity()

**NOTE 2:** The following functions are calculated on the basis of capacity and may be calculated differently depending on the CAPACITY\_MODE bit:

- AtRateOK()
- AtRateTimeToEmpty()
- AtRateTimeToFull()
- RunTimeToEmpty()
- AverageTimeToEmpty()
- AverageTimeToFull()
- Remaining Time Alarm()
- BatteryStatus()

The bq2060 updates the non-AtRate related register values within 3 s of changing the state of the CAPACITY\_MODE bit. The AtRate() values is updated after the next AtRate value is written to the bq2060 (or after the next 20-s scheduled refresh calculation).

# AtRate() (0x04); [0x04]

## **DESCRIPTION**

The AtRate() function is the first half of a two-function call-set used to set the AtRate value used in calculations made by the AtRateTimeToFull(), AtRateTime-ToEmpty(), and AtRateOK() functions. The AtRate value may be expressed in either current (mA) or power (10 mWh) depending on the setting of the BatteryMode()'s CAPACITY\_MODE bit.

## **PURPOSE**

Because the AtRate() function is the first half of two-function call-set, it is followed by the second function of the call-set that calculates and returns a value based on the AtRate value and the battery's present state. A delay of up to 1.3 s is required after writing AtRate() before the bq2060 can acknowledge the requested AtRate function.

- When the AtRate() value is positive, the AtRate-TimeToFull() function returns the predicted time to full charge at the AtRate value of charge.
- When the AtRate() value is negative, the AtRateTimeToEmpty() function returns the predicted operating time
  at the AtRate value of discharge.
- When the AtRate() value is negative, the AtRateOK() function returns a Boolean value that predicts the battery's ability to supply the AtRate value of *additional* discharge energy (current or power) for 10 seconds.

The default value for AtRate() is zero. Writing AtRate() values over the HDQ16 serial port does *not* trigger a re-calculation of AtRateTimeToFull(), AtRateTimeToEmpty(), and AtRateOK() functions.

It is recommended that AtRate() requests should be limited to one request every 4 s.

#### SMBus PROTOCOL Read or Write Word

**INPUT/OUTPUT** Signed integer—charge or discharge; the AtRate() value is positive for charge, negative for discharge, and zero for neither (default).



	BATTERY MODE	S
	CAPACITY_MODE bit = 0	CAPACITY_MODE bit = 1
Units	mA	10 mW
Charge Range	1 to 32,767 mA	1 to 32,768 10 mW
Discharge Range	−1 to −32,768 mA	−1 to −32,768 10 mW
Granularity	1 Unit	
Accuracy	NA	

#### AtRateTimeToFull() (0x05);[0x05]

#### **DESCRIPTION**

Returns the predicted remaining time to fully charge the battery at the AtRate() value (mA).

## **PURPOSE**

The AtRateTimeToFull() function is part of two-function call-set used to determine the predicted remaining charge time at the AtRate value in mA. The bq2060 updates AtRateTimeToFull() within 1.3 s after the SMBus Host sets the AtRate value. If read before this delay, the command is No Acknowledged and the error code in BatteryStatus is set to *not ready*. The bq2060 automatically updates AtRateTimeToFull() based on the AtRate() value every 20 s.

#### SMBus PROTOCOL ReadWord

## **OUTPUT**

Unsigned integer—predicted time in minutes to fully charge the battery.

Units: minutes

Range: 0 to 65,534 min Granularity: 2 min or better Accuracy: ±MaxError() \*

FullChargeCapacity()/|AtRate()|

Invalid Data Indication: 65,535 indicates the battery is not being charged.

# AtRateTimeToEmpty() (0x06); [0x06]

#### **DESCRIPTION**

Returns the predicted remaining operating time if the battery is discharged at the AtRate() value.

## **PURPOSE**

The AtRateTimeToEmpty() function is part of a two-function call-set used to determine the remaining operating time at the AtRate()value. The bq2060 updates AtRateTimeToEmpty() within 1.3s after the SMBus Host sets the AtRate() value. If read before this delay, the command is No Acknowledged, and the error code in BatteryStatus is set to *not ready*. The bq2060 automatically updates AtRateTimeToEmpty() based on the AtRate() value every 20s.

## SMBus PROTOCOL ReadWord

#### **OUTPUT**

Unsigned integer—estimated operating time left.

Units: minutes

Granularity: 2 min or better Range: 0 to 65,534 min Accuracy: -0, +MaxError()

FullChargeCapacity/|AtRate()|

Invalid Data Indication: 65,535 indicates the battery is not being charged.



AtRateOK() (0x07); [0x07]

#### DESCRIPTION

Returns a Boolean value that indicates whether or not the battery can deliver the AtRate() value of additional energy for 10 seconds (Boolean). If the AtRate value is zero or positive, the AtRateOK() function ALWAYS returns true.

## **PURPOSE**

The AtRateOK() function is part of a two-function call-set used by power management systems to determine if the battery can safely supply enough energy for an additional load. The bq2060 updates AtRateOK() within 1.3 s after the SMBus Host sets the AtRate() value. If read before this delay, the command is No Acknowledged, and the error code in BatteryStatus is set to *not ready*. The bq2060 automatically updates AtRateOK() based on the At Rate() value every 20 s.

## SMBus PROTOCOL ReadWord

#### OUTPUT

Boolean—indicates if the battery can supply the additional energy requested.

Units: Boolean

Range: TRUE, FALSE Granularity: not applicable Accuracy: not applicable

Temperature() (0x08); [0x08]

#### DESCRIPTION

Returns the temperature (K) measured by the bq2060.

#### **PURPOSE**

The Temperature() function provides accurate cell temperatures for use by battery chargers and thermal management systems. A battery charger can use the temperature as a safety check. Thermal management systems may use the temperature because the battery is one of the largest thermal sources in a system.

#### SMBus PROTOCOL ReadWord

## **OUTPUT**

Unsigned integer—cell temperature in tenth-degree Kelvin increments.

Units: 0.1°K

Range: 0 to +6553.5°K {real range}

Granularity: 0.1°K

Accuracy: ±1.°K (from ideal 103AT thermistor performance, after calibration)

# Voltage() (0x09); [0x09]

**DESCRIPTION** Returns the cell-pack voltage (mV).

#### **PURPOSE**

The Voltage() function provides power management systems with an accurate battery terminal voltage. Power management systems can use this voltage, along with battery current information, to characterize devices they control. This ability helps enable intelligent, adaptive power management systems.

## SMBus PROTOCOL ReadWord

#### **OUTPUT:**

Unsigned integer—battery terminal voltage in mV.

Units: mV

Range: 0 to 20,000 mV Granularity: 1 mV



Accuracy: ±0.65% (after calibration)

## Current() (0x0a); [0x0a]

#### DESCRIPTION

Returns the current being supplied (or accepted) through the battery's terminals (mA).

## **PURPOSE**

The Current() function provides a snapshot for the power management system of the current flowing into or out of the battery. This information is of particular use in power-management systems because they can characterize individual devices and tune their operation to actual system power behavior.

## SMBus PROTOCOL ReadWord

## **OUTPUT**

Signed integer—charge/discharge rate in mA increments—positive for charge, negative for discharge.

Units: mA

Range: (±250 mV/RS) mA

Granularity: 0.038 mV/RS (integer value) Accuracy: ±1 mV/RS (after calibration)

# AverageCurrent() (0x0b); [0x0b]

#### **DESCRIPTION**

Returns a value that approximates a 1-minute rolling average of the current being supplied (or accepted) through the battery's terminals (mA). The AverageCurrent() function returns meaningful values during the battery's first minute of operation.

## **PURPOSE:**

The AverageCurrent() function provides the average current flowing into or out of the battery for the power management system.

# SMBus PROTOCOL ReadWord

## **OUTPUT**

Signed integer—charge/discharge rate in mA increments—positive for charge, negative for discharge.

Units: mA

Range: (± 250 mV/R<sub>S)</sub> mA

Granularity: 0.038 mV/R<sub>S</sub> (integer value) Accuracy: ±1m V/R<sub>S</sub> (after calibration)

# MaxError() (0x0c); [0x0c]

## DESCRIPTION

Returns the expected margin of error (%) in the state of charge calculation. For example, when MaxError() returns 10% and RelativeStateOfCharge() returns 50%, the Relative StateOfCharge() is more likely between 50% and 60%. The bq2060 sets MaxError() to 100% on a full reset. The bq2060 sets MaxError() to 2% on completion of a learning cycle, unless the bq2060 limits the learning cycle to the +512/–256 mAh maximum adjustment values. If the learning cycle is limited, the bq2060 sets MaxError() to 8% unless MaxError() was already below 8%. In this case MaxError() does not change. The bq2060 increments MaxError() by 1% after four increments of CycleCount() without a learning cycle.

If voltage-based corrections are applied to the coulomb counter, MaxError() is set to 25%.

## **PURPOSE**

The MaxError() function has real value in two ways: first, to give the user a confidence level about



the state of charge and second, to give the power management system information about how aggressive it should be, particularly as the battery nears the end of its life.

#### SMBus PROTOCOL ReadWord

## **OUTPUT**

Unsigned integer—percent uncertainty for selected information.

Units: %

Range: 2% to 100% Granularity: 1%

Accuracy: not applicable

# RelativeStateOfCharge() (0x0d); [0x0d]

## **DESCRIPTION**

Returns the predicted remaining battery capacity expressed as a percentage of FullChargeCapacity() (%).

## **PURPOSE**

The RelativeStateOfCharge() function is used to estimate the amount of charge remaining in the battery relative to the last learned capacity.

#### SMBus PROTOCOL ReadWord

#### **OUTPUT**

Unsigned integer—percent of remaining capacity.

Units: %

Granularity: 1% Range: 0 to 100%

Accuracy: -0, +MaxError()

# AbsoluteStateOfCharge()(0x0e); [0x0e]

#### **DESCRIPTION**

Returns the predicted remaining battery capacity expressed as a percentage of DesignCapacity() (%). Note that AbsoluteStateOfCharge() can return values greater than 100%.

# **PURPOSE**

The AbsoluteStateOfCharge() function is used to estimate the amount of charge remaining in the battery relative to the nominal or DesignCapacity().

## **SMBUS PROTOCOL** ReadWord

# **OUTPUT**

Unsigned integer—percent of remaining capacity.

Units: %

Range: 0% to 100+%

Granularity: 1%

Accuracy: -0, +MaxError()

## RemainingCapacity() (0x0f); [0x0f]

#### **DESCRIPTION**

Returns the predicted charge or energy remaining in the battery. The RemainingCapacity() value is expressed in either charge (mAh at a C/5 discharge rate) or energy 10 mWh at a P/5 discharge rate) depending on the setting of the BatteryMode()'s CAPACITY\_MODE bit.

## **PURPOSE**

The RemainingCapacity() function returns the battery's remaining capacity. This information is a



numeric indication of remaining charge or energy given by the Absolute or Relative StateOfCharge() functions and may be in a better form for use by power management systems.

#### SMBus PROTOCOL ReadWord

**OUTPUT** Unsigned integer—remaining charge in mAh or 10mWh.

	BATTERY MODES	5
	CAPACITY_MODE bit = 0	CAPACITY_MODE bit = 1
Units	mAh	10 mWh
Range	0 to 65,535 mAh	0 to 65,535 10 mWh
Granularity	mAh	10 mWh
Accuracy	-0, +MaxError() * FullChargeCapacity()	

#### FullChargeCapacity() (0x10); [0x10]

## **DESCRIPTION**

Returns the predicted pack capacity when it is fully charged. The FullChargeCapacity() value is expressed in either current (mAh at a C/5 discharge rate) or power 10 mWh at a P/5 discharge rate) depending on the setting of the BatteryMode()'s CAPACITY\_MODE bit.

## **PURPOSE**

The FullChargeCapacity() function provides the user with a means of understanding the tank size of their battery. This information, along with information about the original capacity of the battery, can be presented to the user as an indication of battery wear.

# SMBus PROTOCOL ReadWord

**OUTPUT** Unsigned integer—estimated full-charge capacity in mAh or 10mWh.

BATTERY MODES		
	CAPACITY_MODE bit = 0	CAPACITY_MODE bit = 1
Units	mAh	10 mWh
Range	0 to 65,535 mAh	0 to 65,535 10 mWh
Granularity	mAh	10 mWh
Accuracy	-0, +MaxError() * FullChargeCapacity()	

# RunTimeToEmpty() (0x11); [0x11]

## **DESCRIPTION**

Returns the predicted remaining battery life at the present rate of discharge (minutes). The RunTimeToEmpty() value is calculated based on either current or power depending on the setting of the BatteryMode()'s CAPACITY\_ MODE bit.

#### **PURPOSE**

The RunTimeToEmpty() provides the power management system with information about the relative gain or loss in remaining battery life in response to a change in power policy. This information is NOT the same as the AverageTimeToEmpty(), which is not suitable to determine the effects that result from a change in power policy.

## SMBus PROTOCOL ReadWord

#### **OUTPUT**

Unsigned integer—minutes of operation left.

Units: minutes

Range: 0 to 65,534 min Granularity: 2 min or better

Accuracy: -0, +MaxError() x FullChargeCapacity() / Current()



Invalid Data Indication: 65,535 indicates battery is not being discharged.

## AverageTimeToEmpty() (0x12); [0x12]

#### DESCRIPTION

Returns a 1-minute rolling average of the predicted remaining battery life (minutes). The AverageTimeToEmpty() value is calculated based on either current or power depending on the setting of the BatteryMode()'s CAPACITY\_MODE bit.

#### **PURPOSE**

The AverageTimeToEmpty() displays state-of-charge information in a more useful way. It averages the instantaneous estimations so that the remaining time does not appear to jump around.

## **SMBus PROTOCOL** ReadWord

## **OUTPUT**

Unsigned integer—minutes of operation left.

Units: minutes

Range: 0 to 65,534 min Granularity: 2 min or better

Accuracy: -0, +MaxError() x FullChargeCapacity() / AverageCurrent() Invalid Data Indication: 65,535 indicates battery is not being discharged.

## AverageTimeToFull() (0x13); [0x13]

## **DESCRIPTION**

Returns a 1-minute rolling average of the predicted remaining time until the battery reaches full charge (minutes).

#### **PURPOSE**

The AverageTimeToFull() function can be used by the SMBus Host's power management system to aid in its policy. It may also be used to find out how long the system must be left on to achieve full charge.

# SMBus PROTOCOL ReadWord

#### OUTPUT

Unsigned integer —remaining time in minutes.

Units: minutes

Range: 0 to 65,534 min Granularity: 2 min or better

Accuracy: MaxError() x FullChargeCapacity() / AverageCurrent()

Invalid Data Indication: 65,535 indicates the battery is not being charged.

# ChargingCurrent() (0x14); [0x14]

## **DESCRIPTION**

Returns the desired charging rate in mA.

# **PURPOSE**

The ChargingCurrent() function sets the maximum charge current of the battery. The ChargingCurrent() value should be used in combination with the ChargingVoltage() value to set the charger's operating point. Together, these functions permit the bq2060 to dynamically control the charging profile (current/ voltage) of the battery. The bq2060 can effectively turn off a charger by returning a value of 0 for this function. The charger may be operated as a constant-voltage source above its maximum regulated current range by returning a ChargingCurrent() value of 65,535.

## SMBus PROTOCOL ReadWord

# **OUTPUT**



Unsigned integer—maximum charger output current in mA.

Units: mA

Range: 0 to 65,535 mA Granularity: 1 mA

Accuracy: not applicable

Invalid Data Indication: 65,535 indicates that a charger should operate as a voltage source outside

its maximum regulated current range.

## ChargingVoltage() (0x15); [0x15]

#### **DESCRIPTION**

Returns the desired charging voltage in mV.

## **PURPOSE**

The ChargingVoltage() function sets the maximum charge voltage of the battery. The ChargingVoltage() value should be used in combination with the ChargingCurrent() value to set the charger's operating point. Together, these functions permit the bq2060 to dynamically control the charging profile (current/ voltage) of the battery. The charger may be operated as a constant-current source above its maximum regulated voltage range by returning a ChargingVoltage() value of 65,535.

## **SMBus PROTOCOL** WriteWord

#### **OUTPUT**

Unsigned integer—charger output voltage in mV.

Units: mA

Range: 0 to 65,535 mA Granularity: 1 mA Accuracy: not applicable

Invalid Data Indication: 65,535 indicates that a charger should operate as a current source outside

its maximum regulated current range.

# BatteryStatus()(0x16); [0x16]

# **DESCRIPTION**

Returns the bq2060's status word (flags). Some of the BatteryStatus() flags (REMAINING\_CAPACITY\_ ALARM and REMAINING\_TIME\_ALARM) are calculated based on either current or power depending on the setting of the BatteryMode()'s CAPACITY\_ MODE bit. This is important because use of the wrong calculation mode may result in an inaccurate alarm.

#### **PURPOSE**

The BatteryStatus() function is used by the power management system to get alarm and status bits, as well as error codes from the bq2060. This is basically the same information broadcast to both the SMBus Host and the Smart Battery Charger by the AlarmWarning() function except that the AlarmWarning() function sets the Error Code bits all high before sending the data.

## SMBus PROTOCOL ReadWord

# **OUTPUT:**

Unsigned integer—Status Register with alarm conditions bit mapped as follows:



ALARM BITS		
0x8000	OVER_CHARGED_ALARM	
0x4000	TERMINATE_CHARGE_ALARM	
0x2000	reserved	
0x1000	OVER_TEMP_ALARM	
0x0800	TERMINATE_DISCHARGE_ALARM	
0x0400	reserved	
0x0200	REMAINING_CAPACITY_ALARM	
0x0100	REMAINING_TIME_ALARM	
	STATUS BITS	
0x0080	INITIALIZED	
0x0040	DISCHARGING	
0x0020	FULLY_CHARGED	
0x0010	FULLY_DISCHARGED	
ERROR CODES		
0x0007	Unknown Error	
0x0006	BadSize	
0x0005	Overflow/Underflow	
0x0004	AccessDenied	
0x0003	UnsupportedCommand	
0x0002	ReservedCommand	
0x0001	Busy	
0x0000	OK	

#### Alarm Bits

**OVER\_CHARGED\_ALARM** bit is set whenever the bq2060 detects that the battery is being charged beyond the *Maximum Overcharge* limit. This bit is cleared when the bq2060 detects that the battery is no longer being charged (i.e., the bq2060 detects discharge activity or no activity for the digital filter timeout periods. The digital filter timeout period (seconds) equates to 10 times the value shared in *Digital Filter* EE0x52.)

**TERMINATE\_CHARGE\_ALARM** bit is set when the bq2060 detects that one or more of the battery's charging parameters are out of range (e.g., its voltage, current, or temperature is too high) or when the bq2060 detects a primary charge termination. This bit is cleared when the parameter falls back into the allowable range, the termination condition ceases, or when the bq2060 detects that the battery is no longer being charged.

**OVER\_TEMP\_ALARM** bit is set when the bq2060 detects that the internal battery temperature is greater than or equal to the MaxT limit. This bit is cleared when the internal temperature falls back into the acceptable range.

**TERMINATE\_DISCHARGE\_ALARM** bit is set when the bq2060 detects that Voltage() is less than EDV0 or when the CVUV bit in Pack Status is set indicating that a Li-ion cell voltage has dropped below the limit programmed in *Cell Under / Over Voltage*. The bit is cleared when Voltage() is greater than EDV0 or when the CVUV bit is cleared.

**REMAINING\_CAPACITY\_ALARM** bit is set when the bq2060 detects that RemainingCapacity() is less than that set by the RemainingCapacityAlarm() function. This bit is cleared when either the value set by the RemainingCapacityAlarm() function is lower than the RemainingCapacity() or when the RemainingCapacity() is increased by charging.

**REMAINING\_TIME\_ALARM** bit is set when the bq2060 detects that the estimated remaining time at the present discharge rate is less than that set by the RemainingTimeAlarm() function. This bit is cleared when either the value set by the RemainingTimeAlarm() function is lower than the AverageTimeToEmpty() or when the AverageTimeToEmpty() is increased by charging.

#### Status Bits

**INITIALIZED** bit is set when the bq2060 is has detected a valid load of EEPROM. It is cleared when the bq2060 detects an improper EEPROM load.



**DISCHARGING** bit is set when the bq2060 determines that the battery is not being charged. This bit is cleared when the bq2060 detects that the battery is being charged.

**FULLY\_CHARGED** bit is set when the bq2060 detects a primary charge termination or an overcharged condition. It is cleared when RelativeStateOfCharge() is less than or equal to the programmed *Fully Charged Clear* % in EE 0x4c.

**FULLY\_DISCHARGED** bit is set when Voltage() is less than the EDV2 threshold. This bit is cleared when the Relative StateOfCharge() is greater than or equal to 20%.

ERROR CODES	DESCRIPTION
OK	The bq2060 processed the function code without detecting any errors.
Busy	The bq2060 is unable to process the function code at this time.
Reserved	The bq2060 detected an attempt to read or write to a function code reserved by this version of the specification. The 2060 detected an attempt to access an unsupported optional manufacturer function code.
Unsupported	The bq2060 does not support this function code which is defined in this version of the specification.
AccessDenied	The bq2060 detected an attempt to write to a read-only function code.
Over/Underflow	The bq2060 detected a data overflow or underflow.
BadSize	The bq2060 detected an attempt to write to a function code with an incorrect data block.
UnknownError	The bq2060 detected an unidentifiable error.

# CycleCount()(0x17); [0x17]

## **DESCRIPTION**

Returns the number of cycles the battery has experienced. The mAh value of each count is determined by programming the *Cycle Count Threshold* value in EE 0x3c–0x3d. The bq2060 saves the cycle count value to *Cycle Count* EE 0x0e–0x0f after an update to CycleCount().

#### **PURPOSE**

The CycleCount() function provides a means to determine the battery's wear. It may be used to give advanced warning that the battery is nearing its end of life.

## SMBus PROTOCOL ReadWord

## **OUTPUT**

Unsigned integer—count of total charge removed from the battery over its life.

Units: cycle

Range: 0 to 65,534 cycles 65,535 indicates battery has experienced 65,535 or more cycles.

Granularity: 1 cycle Accuracy: absolute count

## DesignCapacity() (0x18); [0x18]

#### **DESCRIPTION**

Returns the theoretical or nominal capacity of a new pack. The DesignCapacity() value is expressed in either current (mAh at a C/5 discharge rate) or power, (10 mWh at a P/5 discharge rate) depending on the setting of the BatteryMode()'s CAPACITY\_MODE bit.

#### **PURPOSE**

The DesignCapacity() function is used by the SMBus Host's power management with FullChargeCapacity() to determine battery wear. The power management system may present this information to the user and also adjust its power policy as a result.

# SMBus PROTOCOL ReadWord

## **OUTPUT**

Unsigned integer—battery capacity in mAh or 10 mWh.



BATTERY MODES				
	CAPACITY_MODE bit = 0	CAPACITY_MODE bit = 1		
Units	mAh	10 mWh		
Range	0 to 65,535 mAh	0 to 65,535 10 mWh		
Granularity	Not applicable			
Accuracy	Not applicable			

DesignVoltage() (0x19); [0x19]

## **DESCRIPTION**

Returns the theoretical voltage of a new pack (mV). The bq2060 sets DesignVoltage() to the value programmed in *Design Voltage* EE 0x12–0x13.

#### **PURPOSE**

The DesignVoltage() function can be used to give additional information about a particular Smart Battery's expected terminal voltage.

#### SMBus PROTOCOL ReadWord

#### **OUTPUT**

Unsigned integer—the battery's designed terminal voltage in mV

Units: mV

Range: 0 to 65,535 mV Granularity: not applicable Accuracy: not applicable

## SpecificationInfo() (0x1a); [0x1a]

# **DESCRIPTION**

Returns the version number of the Smart Battery Specification that the battery pack supports, as well as voltage and current scaling information in a packed unsigned integer. Power scaling is the product of the voltage scaling times the current scaling. The SpecificationInfo is packed in the following fashion: (SpecID\_H \* 0x10 + SpecID\_L) + (VScale + IPScale \* 0x10) \* 0x100.

The bq2060 VScale (voltage scaling) and IPScale (current scaling) should always be set to zero. The bq2060 sets SpecificationInfo() to the value programmed Specification Information EE 0x14–0x15.

#### **PURPOSE**

The SpecificationInfo() function is used by the SMBus Host's power management system to determine what information the Smart Battery can provide.

# SMBus PROTOCOL ReadWord

#### **OUTPUT**

Unsigned integer—packed specification number and scaling information.

FIELD	BITS USED	FORMAT	ALLOWABLE VALUES
SpecID_L	03	4-bit binary value	0–15
SpecID_H	47	4-bit binary value	0–15
VScale	811	4-bit binary value	0 (multiplies voltage by 10^ VScale)
IPScale	1215	4-bit binary value	0 (multiplies current by 10 ^ IPScale)

#### ManufactureDate() (0x1b); [0x1b]

# **DESCRIPTION**

This function returns the date the cell pack was manufactured in a packed integer. The date is packed in the following fashion: (year-1980) \* 512 + month \* 32 + day. The bq2060 sets ManufactureDate() to the value programmed in *Manufacture Date* EE 0x16–0x17.



## **PURPOSE**

The ManufactureDate() provides the system with information that can be used to uniquely identify a particular battery pack when used with SerialNumber().

## SMBus PROTOCOL ReadWord

#### **OUTPUT**

Unsigned integer—packed date of manufacture.

FIELD	BITS USED	FORMAT	ALLOWABLE VALUES
Day	04	5-bit binary value	0-31 (corresponds to date)
Month	58	4-bit binary value	1–12 (corresponds to month number)
Year	915	7-bit binary value	0-127 (corresponds to year biased by 1980)

# SerialNumber() (0x1c); [0x1c]

#### **DESCRIPTION**

This function is used to return a serial number. This number, when combined with the ManufacturerName(), the DeviceName(), and the ManufactureDate(), uniquely identifies the battery (unsigned int). The bq2060 sets SerialNumber() to the value programmed in *Serial Number* EE 0x18–0x19.

#### **PURPOSE**

The SerialNumber() function can be used to identify a particular battery. This may be important in systems that are powered by multiple batteries where the system can log information about each battery that it encounters.

#### SMBus PROTOCOL ReadWord

**OUTPUT** Unsigned integer

ManufacturerName() (0x20); [0x20-0x25]

## **DESCRIPTION**

This function returns a character array containing the battery's manufacturer's name. For example, MyBattCo would identify the Smart Battery's manufacturer as MyBattCo. The bq2060 sets ManufacturerName() to the value programmed in *Manufacturer Name* EE 0x20–0x2a.

#### **PURPOSE**

The ManufacturerName() function returns the name of the Smart Battery's manufacturer. The manufacturer's name can be displayed by the SMBus Host's power management system display as both an identifier and as an advertisement for the manufacturer. The name is also useful as part of the information required to uniquely identify a battery.

## SMBus PROTOCOL Read Block

# **OUTPUT**

String—character string with maximum length of 11 characters (11+length byte).

#### DeviceName() (0x21); [0x28-0x2b]

#### DESCRIPTION

This function returns a character string that contains the battery's name. For example, DeviceName() of BQ2060 would indicate that the battery is a model BQ2060. The bq2060 sets DeviceName() to the value programmed in *Device Name* EE 0x30–0x37.

# **PURPOSE**

The DeviceName() function returns the battery's name for identification purposes.

# SMBus PROTOCOL Read Block

## **OUTPUT**

String—character string with maximum length of 7 characters (7+length byte).



DeviceChemistry() (0x22); [0x30-0x32]

#### DESCRIPTION

This function returns a character string that contains the battery's chemistry. For example, the DeviceChemistry() function returns *NiMH*, the battery pack would contain nickel metal hydride cells. The bq2060 sets DeviceChemistry() to the value programmed in *Device Chemistry* EE 0x40–0x44.

#### **PURPOSE**

The DeviceChemistry() function gives cell chemistry information for use by charging systems. The bq2060 does not use DeviceChemisty() values for internal charge control or fuel gauging.

#### **SMBus PROTOCOL** Read Block

#### **OUTPUT**

Output: String—character string with maximum length of 4 characters (4+length byte).

#### NOTE:

The following is a partial list of chemistries and their expected abbreviations. These abbreviations are *not* case sensitive.

Lead acid	PbAc
Lithium ion	LION
Nickel cadmium	NiCd
Nickel metal hydride	NiMH
Nickel zinc	NiZn
Rechargeable alkaline-manganese	RAM
Zinc air	ZnAr

ManufacturerData() (0x23); [0x38-0x3a]

# **DESCRIPTION**

This function allows access to the manufacturer data contained in the battery (data). The bq2060 stores seven critical operating parameters in this data area.

#### **PURPOSE**

The ManufacturerData() function may be used to access the manufacturer's data area. The data fields of this command reflect the programming of five critical EEPROM locations and can be used to facilitate evaluation bq2060 under various programming sets. The ManufacturerData() function returns the following information in order: *Control Mode, Digital Filter, Self-Discharge Rate, Battery Low %, Near Full*, and the pending EDV threshold voltage (low byte and high byte.)

# SMBus PROTOCOL Read Block

## Pack Status and Pack Configuration (0x2f); [0x2f]

# **DESCRIPTION**

This function returns the Pack Status and Pack Configuration registers. The Pack Status register contains number of status bits relating to bq2060 operation. The Pack Status register is the least significant byte of the word. The Pack Configuration register is the most significant byte of the word. The byte reflects how the bq2060 is configured as defined by the value programmed in *Pack Configuration* in EE 0x3f.

The Pack Status Register consists of the following bits:

b7	b6	b5	b4	b3	b2	b1	b0
OCE	EDV2	EINT	VDQ	COK	DOK	CVOK	CVUV



**OCE** 

The OCE bit indicates that offset cancellation is enabled. The bq2060 sets this bit after VFC offset calibration is complete.

Offset calibration is not enabledOffset calibration is enabled

EDV2

The EDV2 bit indicates that Voltage() is less than the EDV2 threshold.

0 Voltage() > EDV2 threshold (discharging)

1 Voltage() ≤ EDV2 threshold

**EINT** 

The EINT bit indicates that the VFC has detected a charge or discharge pulse.

No charge/discharge activity detectedCharge/discharge activity detected.

**VDQ** 

The VDQ bit indicates if the present discharge cycle is valid for an FCC update.

0 Discharge cycle is not valid1 Discharge cycle is valid

COK

The COK bit indicates the status of the CFC pin of the bq2060.

0 CFC pin is low1 CFC pin is high

**DOK** 

The DOK bit indicates the status of the DFC pin of the bg2060.

0 DFC pin is low1 DFC pin is high

CVOV

The CVOV bit indicates that a secondary Li-ion protection limit has been exceeded. It is set if any individual cell exceeds the programmed high voltage limit, if the pack voltage exceeds the overvoltage threshold, or if an over-temperature condition occurs. The bit is not latched and merely reflects the present overvoltage status.

No secondary protection limits exceededA secondary protection limit exceeded



#### **CVUV**

The CVUV bit indicates if any individual cell falls below the programmed low-voltage limit. The bit applies to lithium batteries only. The bit is not latched and merely reflects the present undervoltage status.

O All series cells are above the low-voltage limit

1 A series cell is below the low-voltage limit

VCELL4-VCELL1 (0x3c-0x3f); [0x3c-0x3f]

#### **DESCRIPTION**

These functions return the calculated voltages in mV at the VCELL₄ through VCELL₁ inputs.

#### **EEPROM**

#### **GENERAL**

The bq2060 accesses the external EEPROM during a full reset and when storing historical data. During an EEPROM access, the VOUT pin becomes active and the bq2060 uses the ESCL and ESDA pins to communicate with the EEPROM. The EEPROM stores basic configuration information for use by the bq2060. The EEPROM must be programmed correctly for proper bq2060 operation.

#### **MEMORY MAP**

Table 10 shows the memory map for the EEPROM. It also contains example data for a 10 series NiMH and a 3s3p Li-ion battery pack with a  $0.05-\Omega$  sense resistor.

**Table 10. EEPROM Memory Map** 

EEP	ROM	NAME <sup>(1)</sup>	CHEMISTRY	NIMH	DA	TA	Li-ion	D	ATA
ADDI	RESS			EXAMPLE	MSB	LSB	EXAMPLE	MSB	LSB
0x00	0x01	Check Byte 1	Li-ion, Nickel	15487	3c	<b>7</b> f	15487	3c	7f
0x02	0x03	Remaining Time Alarm	Li-ion, Nickel	10 minutes	00	0a	10 minutes	00	0a
0x04	0x05	Remaining Capacity Alarm	Li-ion, Nickel	350 mAh	01	5e	400 mAh	01	90
0x06		EDV A0 Impedance Age Factor	Li-ion, Nickel	0	-	00	0	-	00
0x07		Reserved	-	0	-	00	0	-	00
80x0	0x09	Reserved	-	0	00	00	0	00	00
0x0a	0x0b	Charging Voltage	Li-ion, Nickel	18000 mV	46	50	12600 mV	31	38
0x0c	0x0d	Reserved	-	128	00	80	128	00	80
0x0e	0x0f	Cycle Count	Li-ion, Nickel	0	00	00	0	00	00
0x10	0x11	Reserved	-	0	00	00	0	00	00
0x12	0x13	Design Voltage	Li-ion, Nickel	12000 mV	2e	e0	10800 mV	2a	30
0x14	0x15	Specification Information	Li-ion, Nickel	v1.1/PEC	00	31	v1.1/PEC	00	31
0x16	0x17	Manufacture Date	Li-ion, Nickel	2/25/99=9817	26	59	2/25/99=9817	26	59
0x18	0x19	Serial Number	Li-ion, Nickel	1	00	01	1	00	01
0x1a	0x1b	Fast-Charging Current	Li-ion, Nickel	4000mA	Of	a0	3000 mA	0b	b8
0x1c	0x1d	Maintenance Charging Current	Li-ion, Nickel	200mA	00	с8	0 mA	00	00
0x1e	0x1f	Pre-Charge Current	Li-ion, Nickel	800mA	03	20	100 mA	00	64
0x20		Manufacturer Name Length	Li-ion, Nickel	9	-	09	9	-	09
0x21		Character 1	Li-ion, Nickel	В	-	42	В	-	42
0x22		Character 2	Li-ion, Nickel	E	-	45	E	-	45
0x23		Character 3	Li-ion, Nickel	N	-	4E	N	-	4e

<sup>(1)</sup> Reserved locations must be set as shown. Locations marked with an \* are calibration values that can be for maximum accuracy. For these locations the table shows the appropriate default or initial setting.



# **EEPROM** (continued)

# Table 10. EEPROM Memory Map (continued)

EEPROM		NAME <sup>(1)</sup>	CHEMISTRY	NIMH	DA	TA	Li-ion	DATA	
ADDF	RESS			EXAMPLE	MSB	LSB	EXAMPLE	MSB	LSB
0x24		Character 4	Li-ion, Nickel	С	-	43	С	-	43
0x25		Character 5	Li-ion, Nickel	Н	-	48	Н	-	48
0x26		Character 6	Li-ion, Nickel	М	-	4d	М	-	4d
0x27		Character 7	Li-ion, Nickel	Α	-	41	Α	-	41
0x28		Character 8	Li-ion, Nickel	R	-	52	R	_	52
0x29		Character 9	Li-ion, Nickel	Q	-	51	Q	_	51
0x2a		Character 10	Li-ion, Nickel	0	-	00	0	_	00
0x2b		Light Discharge Current	Li-ion, Nickel	0	-	00	0	-	00
0x2c	0x2d	Reserved	-	0	00	00	0	00	00
0x2e	0x2f	Maximum Overcharge	Li-ion, Nickel	200 mAh	ff	38	256 mAh	ff	00
0x30		Device Name Length	Li-ion, Nickel	7	-	07	7	-	07
0x31		Character 1	Li-ion, Nickel	В	-	42	В	-	42
0x32		Character 2	Li-ion, Nickel	Q	-	51	Q	-	51
0x33		Character 3	Li-ion, Nickel	2	-	32	2	-	32
0x34		Character 4	Li-ion, Nickel	0	-	30	0	_	30
0x35		Character 5	Li-ion, Nickel	6	-	36	6	_	36
0x36		Character 6	Li-ion, Nickel	0	-	30	0	-	30
0x37		Character 7	Li-ion, Nickel	Α	-	41	Α	-	41
0x38	0x39	Last Measured Discharge	Li-ion, Nickel	4000 mAh	Of	a0	4050 mAh	Of	d2
0x3a	0x3b	Pack Capacity	Li-ion, Nickel	4000 mAh	Of	a0	4050 mAh	Of	d2
0x3c	0x3d	Cycle Count Threshold	Li-ion, Nickel	500 mAh	fe	0c	3240 mAh	f3	58
0x3e		Reserved	-	0	-	00	0	-	00
0x3f		Pack Configuration	Li-ion, Nickel	232	-	e8	246	-	f6
0x40		Device Chemistry Length	Li-ion, Nickel	4	-	04	4	-	04
0x41		Character 1	Li-ion, Nickel	N	-	4e	L	-	4c
0x42		Character 2	Li-ion, Nickel	I	-	49	I	-	49
0x43		Character 3	Li-ion, Nickel	M	-	4d	0	-	4f
0x44		Character 4	Li-ion, Nickel	Н	-	48	N	-	4e
0x45		MaxT DeltaT	Li-ion, Nickel	50C,3.0	-	с7	50C, 4.6	-	cf
0x46	0x47	Overload Current	Li-ion, Nickel	6000 mA	17	70	6000 mA	17	70
0x48		Overvoltage Margin	Li-ion, Nickel	0	-	00	800 mV	-	32
0x49		Overcurrent Margin	Li-ion, Nickel	512 mA	-	20	512 mA	-	20
0x4a		Reserved	Nickel	0	-	00	-	-	-
		Cell Under/Over Voltage	Li-ion	-	-	-	118	-	76
0x4b		Fast Charge Termination %	Li-ion, Nickel	96%	-	a0	100%	-	9c
0x4c		Fully Charged Clear %	Li-ion, Nickel	90%	-	a6	95%	-	a1
0x4d		Charge Efficiency	Li-ion, Nickel	97%	-	e1	100%	-	ff
0x4e		Current Taper Threshold	Li-ion	-	-	-	200 mA	-	12
		DeltaT Time	Nickel	180 s	-	07	-	-	-
0x4f		Holdoff Time	Nickel	240 s	-	04	-	-	-
		Current Taper Qual Voltage	Li-ion	-	-	-	128 mV	-	40
0x50		Manufacturers Data Length	Li-ion, Nickel	7	-	07	7	-	07
0x51		Control Mode	Li-ion, Nickel	4	-	04	4		04
0x52		Digital Filter	Li-ion, Nickel	50 μV	-	2d	50 μV	-	2d
0732									



# **EEPROM** (continued)

**Table 10. EEPROM Memory Map (continued)** 

EEP	ROM	NAME <sup>(1)</sup>	CHEMISTRY	NIMH	DA	TA	Li-ion	D.	ATA
ADD	RESS			EXAMPLE	MSB	LSB	EXAMPLE	MSB	LSB
0x54		Battery Low %	Li-ion, Nickel	7%	-	12	7%	-	12
0x55		Near Full	Li-ion, Nickel	200 mAh	-	64	200 mAh	-	64
0x56	0x57	Reserved	-	0	-	00	0	-	00
0x58	0x59	Reserved	-	0	-	00	0	-	00
0x5a	0x5b	Reserved	-	0	-	00	0	-	00
0x5c	0x5d	Reserved	-	0	00	00	0	00	00
0x5e	0x5f	VFC Offset*	Li-ion, Nickel	0	00	00	0	00	00
0x60		VFC Offset*	Li-ion, Nickel	0	-	00	0	-	00
0x61		Temperature Offset*	Li-ion, Nickel	0	-	00	0	-	00
0x62		ADC Offset*	Li-ion, Nickel	0	-	00	0	-	00
		Cell 2 Calibration Factor*	Li-ion	-	-	-	0	-	00
0x63		Efficiency Temperature Compensation	Nickel	0.25%	-	20	-	-	-
0.464		Cell 3 Calibration Factor*	Li-ion	-	-	-	0	-	00
0x64		Efficiency Drop Off Percentage	Nickel	96%	-	a0	-	-	-
0x65		Cell 4 Calibration Factor*	Li-ion	=	-	-	0	-	00
		Efficiency Reduction Rate	Nickel	1%	-	50	-	-	-
0x66	0x67	ADC Voltage Gain*	Li-ion, Nickel	16 : 1	4e	20	16 : 1	4e	20
0x68	0x69	ADC Sense Resistor Gain*	Li-ion, Nickel	0.05 Ω	30	d4	0.05 Ω	30	d4
0x6a	0x6b	VFC Sense Resistor Gain*	Li-ion, Nickel	0.05 Ω	20	00	0.05 Ω	20	00
0x6c	0x6d	VOC 25%	Li-ion, Nickel	11500 mV	d3	14	10550 mV	d6	ca
0x6e	0x6f	VOC 50%	Li-ion, Nickel	12500 mv	cf	2c	10750 mV	d6	02
0x70	0x71	VOC 75%	Li-ion, Nickel	13500 mV	cb	44	11200 mV	d4	40
0x72	0x73	EDVF/EDV0	Li-ion, Nickel	9500 mV	25	1c	10265 mV	28	19
0x74	0x75	EMF/ EDV1	Li-ion, Nickel	10000 mV	27	10	11550	2d	1e
0x76	0x77	EDV T0 Factor	Li-ion, Nickel	0	00	00	4475	11	7b
0x78	0x79	EDV C1/C0 Factor/EDV2	Li-ion, Nickel	10500 mV	29	04	C1 = 0 C0 = 235	00	eb
0x7a	0X7b	EDV R0 Factor	Li-ion, Nickel	0	00	00	5350	14	e6
0x7c	0x7d	EDV R1 Factor	Li-ion, Nickel	0	-	00	250	00	fa
0x7e	0x7f	Check Byte 2	Li-ion, Nickel	42330	a5	5a	42330	a5	5a

## **EEPROM PROGRAMMING**

The following sections describe the function of each EEPROM location and how the data is to be stored.

# **FUNDAMENTAL PARAMETERS**

## **Sense Resistor Value**

Two factors are used to scale the current-related measurements. The 16-bit *ADC Sense Resistor Gain* value in EE 0x68–0x69 scales Current() to mA. Adjusting *ADC Sense Resistor Gain* from its nominal value provides a method to calibrate the current readings for system errors and the sense resistor value (RS). The nominal value is set by



ADC Sense Resistor Gain = 
$$\frac{625}{(R_s)}$$
 (4)

The 16-bit VFC Sense Resistor Gain in EE 0x6a–0x6b scales each VFC interrupt to mAh. VFC Sense Resistor Gain is based on the resistance of the series sense resistor. The following formula computes a nominal or starting value for VFC Sense Resistor Gain from the sense resistor value.

VFC Sense Resistor Gain = 
$$\frac{409.6}{(R_s)}$$
 (5)

Sense resistor values are limited to the range of 0.00916  $\Omega$  to 0.100  $\Omega$ .

#### **Digital Filter**

The digital filter threshold, VDF (μV), is set by the value stored in *Digital Filter* EE 0x52.

Digital Filter = 
$$\frac{2250}{\text{VDF}}$$
 (6)

#### **CELL CHARACTERISTICS**

## **Battery Pack Capacity and Voltage**

Pack capacity in mAh units is stored in *Pack Capacity* EE 0x3a–0x3b. In mAh mode, the bq2060 copies *Pack Capacity* to DesignCapacity(). In mWh mode, the bq2060 multiplies *Pack Capacity* by *Design Voltage* EE 0x12–0x13 to calculate DesignCapacity() scaled to 10 mWh. *Design Voltage* is stored in mV.

The initial value for Last Measured Discharge in mAh is stored in EE 0x38–0x39. Last Measured Discharge is modified over the course of pack usage to reflect cell aging under the particular use conditions. The bq2060 updates Last Measured Discharge in mAh after a capacity learning cycle. The bq2060 uses the Last Measured Discharge value to calculate FullChargeCapacity() in mAh or 10mWh mode.

## **EDV Thresholds and Near-Full Percentage**

The bq2060 uses three pack voltage thresholds to provide voltage-based warnings of low battery capacity. The bq2060 uses the values stored in EEPROM for the EDV0, EDV1, and EDV2 values or calculates the three thresholds from a base value and the temperature, capacity, and rate adjustment factors stored in EEPROM. If EDV compensation is disabled then EDV0, EDV1, and EDV2 are stored directly in mV in EE 0x72–0x73, EE 0x74–0x75, and EE 0x78–0x79, respectively.

For capacity correction at EDV2, *Battery Low* % EE 0x54 can be set at a desired state-of-charge, STATEOFCHARGE%, in the range of 5% to 20%. Typical values for STATEOFCHARGE% are 7%–12% representing 7 –12% capacity.

Battery Low 
$$\% = STATEOFCHARGE\% \times 2.56$$
 (7)

The bq2060 updates FCC if a qualified discharge occurs from a near-full threshold to EDV2. The desired near-full threshold window, NFW (mAh), is programmed in *Near Full* in EE 0x55.

Near Full = 
$$\frac{NFW}{2}$$
 (8)

#### **EDV Discharge Rate and Temperature Compensation**

If EDV compensation is enabled, the bq2060 calculates battery voltage to determine EDV0, EDV1, and EDV2 thresholds as a function of battery capacity, temperature, and discharge load. The general equation for EDV0, EDV1, and EDV2 calculation is

$$EDV0,1,2 = EMF \times F_{BL} - |I_{LOAD}| \times R0 \times F_{TZ} \times F_{CY}$$
(9)

#### where

- EMF is a no-load battery voltage that is higher than the highest EDV threshold that is computed. EMF is programmed in mV in *EMF/EDV1* EE 0x74–0x75.
- ILOAD is the current discharge load.



F<sub>BL</sub> is the factor that adjusts the EDV voltage for battery capacity and temperature to match the no-load characteristics of the battery.

$$F_{BL} = f(C0, C + C1, T)$$

$$(10)$$

where

• C (0%, 3%, or *Battery Low* % for EDV0, EDV1, and EDV2, respectively) and C0 are the capacity-related EDV adjustment factors. C0 is programmed in the lower 11 bits of *EDV C0 Factor/EDV2* EE 0x78–79. The *Residual Capacity Factor* is stored in the upper bits of EE 0x78–0x79.

Residual Capacity Factor C1 = RESIDUAL% x 256

RESIDUAL % is the desired battery capacity remaining at EDV0 (RM = 0).

T is the current temperature in °K

R0 \* F<sub>TZ</sub> represents the resistance of the battery as a function of temperature and capacity.

$$F_{TZ} = f(R1, T0, T, C + C1)$$
 (11)

- R0 is the first order rate dependency factor stored in EDV R0 Factor EE 0x7a-0x7b.
- T is the current temperature; C is the battery capacity relating to EDV0, EDV1, and EDV2; and C1 is the desired residual battery capacity remaining at EDV0 (RM = 0).
- R1 adjusts the variation of impedance with battery capacity. R1 is programmed in EDV R1 Rate Factor EE 0x7c-0x7d.
- T0 adjusts the variation of impedance with battery temperature. T0 is programmed in EDV T0 Rate Factor EE 0x76-0x77.

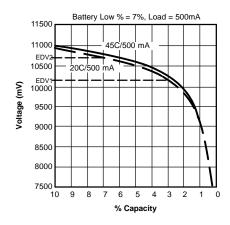


Figure 11. EDV Calculations vs. Capacity for Various Temperatures

 $F_{CY}$  is the factor that adjusts for changing cell impedance as the battery pack is cycled:

where

$$F_{CY} = f(A0, Cycle Count())$$
 (12)

• A0 is the EDV aging factor that is stored in EDV A0 Factor EE 0x06. It should be set to 0 for most applications.

Typical values for the EDV compensation factors for a Li-ion 3s3p 18650 pack are

EMF = 11550

T0 = 4475

C0 = 235

C1 = 0

R0 = 5350

R1 = 250

A0 = 0



The graphs in Figure 11 and Figure 12 show the calculated EDV0, EDV1, and EDV2 thresholds versus capacity using the typical compensation values for different temperatures and loads for a Li-ion 3s3p 18650 pack. The compensation values vary widely for different cell types and manufacturers and must be matched exactly to the unique characteristics for optimal performance.

### **Overload Current Threshold**

The Overload Current threshold is a 16-bit value stored in EE 0x46-0x47 in mA units.

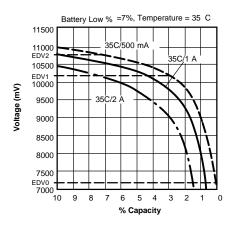


Figure 12. EDV Calculations vs. Capacity for Various Loads

## **Midrange Capacity Corrections**

Three voltage-based thresholds, *VOC25* EE 0x6c-0x6d, *VOC50* EE 0x6e-0x6f, and *VOC75* EE 0x70-0x71, are used to test the accuracy of the RM based on open-circuit pack voltages. These thresholds are stored in the EEPROM in 2s complement of voltage in mV. The values represent the open-circuit battery voltage at which the battery capacity should correspond to the associated state of charge for each threshold.

# **Self-Discharge Rate**

The nominal self-discharge rate, %PERDAY (% per day), is programmed in an 8-bit value Self-Discharge Rate EE 0x53 by the following relation:

Self – Discharge Rate = 
$$256 - \left(\frac{52.73}{\text{\%PERDAY}}\right)$$
 (13)

## **Light Load Current**

The amount of light load current in mA, ILEAK, used for compensation is stored in *Light Discharge Current* in EE 0x2b as follows:

$$Light Discharge Rate = \frac{ILEAK \times 1024}{45}$$
(14)

ILEAK is between 0.044 mA and 11.2 mA.

#### **Charge Efficiency**

The bq2060 uses four charge-efficiency factors to compensate for charge acceptance. These factors are coded in *Charge Efficiency, Efficiency Reduction Rate, Efficiency Drop Off Percentage,* and *Efficiency Temperature Compensation.* 

The bq2060 applies the efficiency factor, EFF%, when RelativeStateOfCharge() is less than the value coded in *Efficiency Drop Off Percentage* EE 0x64. When RelativeStateOfCharge() is greater than or equal to the value coded in *Efficiency Drop Off Percentage*, EFF% and ERR% determine the charge efficiency rate. ERR% defines the percent efficiency reduction per percentage point of RelativeStateOfCharge() over *Efficiency Drop Off Percentage*. EFF% is encoded in *High Charge Efficiency* EE 0x4d according to the following equation:



Charge Efficiency = 
$$10 \times (EFF\% - 74.5)$$
 (15)

where

 $74.5 \le EFF\% \le 100$ 

ERR% is encoded in Efficiency Reduction Rate EE 0x65 according to the following equation:

Efficiency Reduction Rate = 
$$\frac{ERR\%}{0.0125}$$
 (16)

where

• 0 ≤ ERR% ≤ 3.19

The Efficiency Drop Off Percentage is stored in 2s complement of percent.

The bq2060 also adjusts the efficiency factors for temperature. TEFF% defines the percent efficiency reduction per degree C over 25°C. TEFF% is encoded in *Efficiency Temperature Compensation* EE 0x63 according to the following equation

Efficiency Temperature Compensation =

$$\frac{\text{TEFF}\% \times 1.6}{0.0125}$$
 (17)

where

• 0 ≤ TEFF%≤ 1.99

The bq2060 applies all four charge-compensation factors when the CHEM bit in *Pack Configuration* is not set, denoting a nickel pack.

Effective Charge Efficiency Reduction (nickel only)

$$\% = ERR\%[RSOC - EDOP\%] + TEFF\%[Temperature - 25°C] + EFF\%$$
 (18)

where

• RSOC() ≤ EFF% and T≥ 25°C

If CHEM is set denoting a Li-ion pack, the bq2060 applies only the value coded in *High Charge Efficiency* and makes no other adjustments for charge acceptance.

### **CHARGE LIMITS AND TERMINATION TECHNIQUES**

#### **Charging Voltage**

The 16-bit value, *Charging Voltage* EE 0x0a-0x0b programs the ChargingVoltage() value broadcast to a Smart Charger. It is also sets the base value for determining overvoltage conditions during charging and voltage compliance during a constant-voltage charging methodology. It is stored in mV.

#### Overvoltage

The 8-bit value, *Overvoltage Margin* EE 0x48, sets the limit over ChargingVoltage() that is to be considered as an overvoltage charge-suspension condition. The voltage in mV above the ChargingVoltage(), VOVM, that should trigger a charge suspend is encoded in *Overvoltage Margin* as follows:

Overvoltage Margin = 
$$\frac{\text{VOVM}}{16}$$
 (19)

where

• VOVM is between 0 and 4080 mV.

#### **Charging Current**

ChargingCurrent() values are either broadcast to a Level 2 Smart Battery Charger or read from the bq2060 by a Level 3 Smart Battery Charger. The bq2060 sets the value of ChargingCurrent(), depending on the charge requirements and charge conditions of the pack.



When fast charge is allowed, the bq2060 sets ChargingCurrent() to the rate programmed in *Fast Charging Current* EE 0x1a-0x1b.

When fast charge terminates, the bq2060 sets ChargingCurrent() to zero and then to the *Maintenance Charging Current* EE 0x1c-0x1d when the termination condition ceases.

When Voltage() is less than EDV0, the bq2060 sets ChargingCurrent() to *Pre-charge Current* EE 0x1e-0x1f. Typically this rate is larger than the maintenance rate to charge a deeply depleted pack up to the point where it may be fast charged.

Fast Charging Current, Maintenance Charging Current, and Pre-Charge Current are stored in mA.

## **Charge Suspension**

During charge, the bq2060 compares the current to the ChargingCurrent() plus the value IOIM. If the pack is charged at a current above the ChargingCurrent() plus IOIM, the bq2060 sets ChargingCurrent() to zero to stop charging. IOIM is programmed in the EEPROM value, *Overcurrent Margin*, encoded as

Overcurrent Margin = 
$$\frac{IOIM}{16}$$
 (20)

Overcurrent Margin EE 0x49 may be used to program IOIM values of 0 to 4080 mA in 16-mA steps.

The desired temperature threshold for charge suspension, MAXTEMP, may be programmed between 45°C and 69°C in 1.6°C steps. *MaxT DeltaT* EE 0x45 (most significant nibble) is stored in a 4-bit value as shown:

$$MaxT = \left[\frac{69 - MAXTEMP}{1.6}\right] \tag{21}$$

The bq2060 suspends fast charge when fast charge continues past full by the amount programmed in *Maximum Overcharge* EE 0x2e-0x2f. *Maximum Overcharge* is programmed in 2s complement form of charge in mAh.

## FULLY\_CHARGED Bit Clear Threshold

The bq2060 clears the FULLY\_CHARGED bit in BatteryStatus() when RelativeStateOfCharge() reaches the value, *Fully Charged Clear* %EE 0x4c. *Fully Charged Clear* % is an 8-bit value and is stored as a 2s complement of percent.

#### **Fast Charge Termination Percentage**

The bq2060 sets RM to a percentage of FCC on charge termination if the CSYNC bit is set in the Pack Configuration register. The percentage of FCC is stored in *Fast Charge Termination* % in EE 0x4b. The value is stored in 2s complement of percent.

#### **Cycle Count Threshold**

Cycle Count Threshold 0x3c-0x3d sets the number of mAh that must be removed from the battery to increment CycleCount(). Cycle Count Threshold is a 16-bit value stored in 2s complement of charge in mAh.



### **∆T/ ∆t** Rate Programming

The  $\Delta T$  portion of the  $\Delta T/\Delta t$  rate is programmed in *DeltaT*, the low nibble of *MaxT DeltaT* EE 0x45 (least significant nibble). The  $\Delta t$  portion is programmed in *DeltaT Time* EE 0x4e.

$$\Delta T/\Delta t = \frac{[\text{DeltaT} \times 2 + 16]/10}{[320 - \text{DeltaT Time} \times 20]} \left[\frac{^{\circ}\text{C}}{^{\text{S}}}\right] \tag{22}$$

DeltaT	Δ (°C)	DeltaT_Time	t (s)	
0	1.6	00	320	
1	1.8	01	300	
2	2.0	02	280	
3	2.2	03	260	
4	2.4	04	240	
5	2.6	05	220	
6	2.8	06	200	
7	3.0	07	180	
8	3.2	08	160	
9	3.4	09	140	
а	3.6	0a	120	
b	3.8	0b	100	
С	4.0	0c	80	
d	4.2	0d	60	
е	4.4	0e	40	
f	4.6	Of	20	

#### **∆T/** ∆t Holdoff Timer Programming

The holdoff timer is programmed in the lower nibble of *Holdoff Time* EE 0x4f. The holdoff time is 320 s minus 20 times the *Holdoff Time* value.

Holdoff Time	Holdoff Time (s)	Holdoff Time	Holdoff Time (s)
00	320	08	160
01	300	09	140
02	280	0a	120
03	260	0b	100
04	240	0c	80
05	220	0d	60
06	200	0e	40
07	180	Of	20

#### **Current Taper Termination Characteristics**

Two factors in the EEPROM set the current taper termination for Li-ion battery packs. The two coded locations are *Current Taper Qual Voltage* EE 0x4f and *Current Taper Threshold* EE 0x4e. Current taper termination occurs during charging when the pack voltage is above the charging voltage minus CELLV (mV) and the charging current is below the threshold coded in *Current Taper Threshold* for at least 40 s.

Current Taper Qual Voltage 
$$=$$
  $\frac{CELLV}{2}$  (23)

Current TaperThreshhold = 
$$\frac{R_s \times i}{0.5625}$$
 (24)

where i = the desired current termination threshold in mA, and  $R_S = VFC$  sense resistor in ohms.



#### **PACK OPTIONS**

#### **Pack Configuration**

Pack Configuration EE 0x3f contains bit-programmable features.

b7	b6	b5	b4	b3	b2	b1	b0
DMODE	SEAL	CSYNC	CEDV	VCOR	CHEM	LCC1	LCC0

#### **DMODE**

The DMODE bit determines whether the LED outputs will indicate AbsoluteStateOfCharge() or RelativeStateOfCharge()

- 0 LEDs reflect AbsoluteStateOfCharge()
- 1 LEDs reflect RelativeStateOfCharge()

## **SEAL**

The SEAL bit determines the SMBus access state of the bg2060 on reset

- 0 SMBus commands (0x00–0xff) are accessible for both read and write.
- SMBus read access is limited to commands (0x05–0x1c) and (0x20–0x23). SMBus read/write access is limited to commands (0x00–0x04), (0x2f), and (0x3c–0x3f).

#### **CSYNC**

In usual operation of the bq2060, the CSYNC bit is set so that the coulomb counter is adjusted when a fast charge termination is detected. In some applications, especially those where an externally controlled charger is used, it may be desirable *not* to adjust the coulomb counter. In these cases the CSYNC bit should be cleared.

- The bg2060 does not alter RM at the time of a valid charge termination.
- 1 The bq2060 updates RM with a programmed percentage of FCC at a valid charge termination.

#### **CEDV**

The CEDV bit determines whether the bq2060 implements automatic EDV compensation to calculate the EDV0, EDV1, and EDV2 thresholds based on rate, temperature, and capacity. If reset, the bq2060 uses the fixed values programmed in EEPROM for EDV0, EDV1, and EDV2. If set the bq2060 calculates EDV0, EDV1, and EDV2.

- 0 EDV compensation disabled
- 1 EDV compensation enabled

## **VCOR**

The VCOR bit enables the midrange voltage correction algorithm. When set, the bq2060 compares the pack voltage to RM and may adjust RM according to the values programmed in VOC25, VOC50, and VOC75.

- 0 Midrange corrections disabled
- 1 Midrange corrections enabled

#### **CHEM**

The CHEM bit configures the bq2060 for nickel packs (NiCd or NiMH) or Li-ion packs. When set, the bq2060 employs the configuration parameters in EEPROM designated for Li-ion. When not set, the bq2060 employs the configuration parameters designated for nickel.



- The bq2060 uses nickel configuration parameters.
- 1 The bq2060 uses Li-ion configuration parameters

#### LCC0 and LCC1

The LCC0 and LCC1 bits configure the cell voltage inputs (VCELL<sub>1-4</sub>).

NO. OF SERIES CELLS	LCC1 LCC0	CELL VOLTAGE INPUTS
NA	00	VCELL <sub>4</sub> = Cell Stack
2	01	VCELL <sub>1</sub> = Cell 1
2	O1	VCELL <sub>2</sub> = Cell 2
		VCELL <sub>1</sub> = Cell 1
3	10	VCELL <sub>2</sub> = Cell 2
		VCELL <sub>3</sub> = Cell 3
		VCELL <sub>1</sub> = Cell 1
4	11	VCELL <sub>2</sub> = Cell 2
4	11	VCELL <sub>3</sub> = Cell 3
		VCELL <sub>4</sub> = Cell 4

For Li-ion packs with individual measurements, LCC0 and LCC1 define the number of series elements and their voltage measurement inputs. In each case (2, 3, or 4), the bq2060 uses the highest numbered cell voltage input to measure the pack voltage measurement as returned with Voltage(). For nickel chemistries or Li-ion without single-cell measurements, LCC0 and LCC1 must be set to 00. VCELL4 is the pack voltage input for this programming.

#### **Remaining Time and Capacity Alarms**

Remaining Time Alarm in EE 0x02-0x03 and Remaining Capacity Alarm in 0x04-0x05 set the alarm thresholds used in the SMBus command codes 0x01 and 0x02, respectively. Remaining Time Alarm is stored in minutes and Remaining Capacity Alarm in mAh.

#### Secondary Protection Limits for Li-ion

The cell undervoltage ( $V_{UV}$ ) and overvoltage ( $V_{OV}$ ) limits are programmed in *Cell Undervoltage/Overvoltage* EE 0x4a according to the equations:

Cell Undervoltage/Overvoltage (lower) = 
$$\frac{V_{OV} - 4096}{32}$$
 (25)

Cell Undervoltage/Overvoltage (upper) = 
$$\frac{V_{OV} - 2048}{64}$$
 (26)

CELL UNDER/ OVERVOLTAGE (UPPER NIBBLE)	V <sub>UV</sub> (mV)	CELL UNDER/ OVER VOLTAGE (LOWER NIBBLE)	V <sub>OV</sub> (mV)		
0	2048	0	4096		
1	2112	2112 1			
2	2176	2	4160		
3	2240	3	4192		
4	2304	4	4224		
5	2368	5	4256		
6	2432	6	4288		
7	2496	7	4320		
8	2560	8	4352		
9	2624	9	4384		
а	2688	а	4416		
b	2752	b	4448		



CELL UNDER/ OVERVOLTAGE (UPPER NIBBLE)	V <sub>UV</sub> (mV)	CELL UNDER/ OVER VOLTAGE (LOWER NIBBLE)	V <sub>OV</sub> (mV)
С	2816	С	4480
d	2880	d	4512
е	2944	е	4544
f	3008	f	4576

# **Cycle Count Initialization**

Cycle Count EE 0x0e-0x0f stores the initial value for the CycleCount() function. It should be programmed to 0x0000.

#### **Control Modes**

Control Mode EE 0x51 contains additional bit-programmable features.

b7	b6	b5	b4	b3	b2	b1	b0
NDF	_	HPE	CPE	LED	SC		SM

#### **NDF**

The NDF bit disables the digital filter during discharge if the SMBC and SMBD lines are high.

- O Digital filter enabled all the time
- Digital filter disabled if SMBC and SMBD are high

#### **HPE**

The HPE bit enables/disables PEC transmissions to the Smart Battery host for master mode alarm messages.

- 0 No PEC byte on alarm warning to host
- 1 PEC byte on alarm warning to host

#### **CPE**

The CPE bit enables/disables PEC transmissions to the Smart Battery Charger for master mode alarm messages.

- 0 No PEC byte on broadcasts to charger
- 1 PEC byte on broadcasts to charger

#### **LED**

The LED bit configures the bq2060 for 4- or 5-LED indication

- 0 Selects the 5-LED indication mode
- 1 Selects the 4-LED indication mode

## SC

The SC bit enables learning cycle optimization for a Smart Charger or independent charge

- 0 Learning cycle optimized for independent charger
- 1 Learning cycle optimized for Smart Charger



#### SM

The SM bit enables/disables master mode broadcasts by the bq2060

- 0 Broadcasts to host and charger enabled
- 1 Broadcasts to host and charger disabled

If the SM bit is set, modifications to bits in BatteryMode() does not re-enable broadcasts.

## **MEASUREMENT CALIBRATION**

#### **ADC**

To describe how the bq2060 calculates reported battery and individual cell voltages, the following abbreviations and designations are used:

 $VCELL_1-4 = voltages$  at the input pins of the bq2060

VCELL1-4 = reported cell voltages

Vnl-4 = voltages at the different series nodes in the battery

Voltage() = reported battery voltage

 $V_{sr}$  = voltage across the sense resistor

The reported voltages measurements, Voltage() and VCELL1–4, may be calibrated by adjusting five 8- or 16-bit registers in EEPROM: *ADC Offset* in EE0x62, *ADC Voltage Gain* in EE 0x66–0x67, *Cell 2 Calibration Factor* in EE 0x63, *Cell 3 Calibration Factor* in EE 0x64, and *Cell 4 Calibration Factor* in EE 0x65.

The bq2060 first computes the node voltages Vnl, Vn2, Vn3, and Vn4. The node voltages are inputs to the voltage dividers to the VCELL<sub>1</sub>through VCELL<sub>4</sub> input pins of the bq2060. The bq2060 computes node voltages to calculate the five reported voltages by the bq2060: Voltage(), VCELL1, VCELL2, VCELL3, and VCELL4.

An *ADC Voltage Gain* factor of 20,000 is the nominal value when using the recommended cell-voltage division ratios of 16:1 on the VCELL<sub>4</sub> and VCELL<sub>3</sub> inputs and 8:1 on the VCELL<sub>2</sub> and VCELL<sub>1</sub> inputs. The bq2060 subtracts the voltage across the sense resistor from the measurements so that the reported voltages reflect the cell-stack voltages only.

The bg2060 compute the node voltages as

$$Vn1 = \left[ \frac{VCELL \times 32768}{1250} + ADC \text{ Offset} \right] \times \left[ \frac{ADC \text{ Voltage Gain}}{65536} \right]$$
(27)

$$Vn2 = \left[\frac{VCELL \times 32768}{1250} + ADC \text{ Offset}\right] \times \left[\frac{ADC \text{ Voltage Gain} + 8 \times (Cell 2 \text{ CalibrationFactor})}{65536}\right]$$
(28)

$$Vn3 = \left[ \frac{VCELL \times 32768}{1250} + ADC Offset \right] \times$$

[ADC Voltage Gain + 8 × (Cell 3 CalibrationFactor)] × 
$$\left[\frac{2}{65536}\right]$$
 (29)

$$Vn4 = \left[ \frac{VCELL \times 32768}{1250} + ADC Offset \right] \times$$

[ADC Voltage Gain + 8 × (Cell 4 CalibrationFactor)] × 
$$\left[\frac{2}{65536}\right]$$
 (30)

**Note:** With LCC1-LCC0 = 00, *Cell 4 Calibration Factor* = 0.

ADC Offset adjusts the ADC reading for voltage and current measurements. ADC Offset is a signed 8-bit value that cancels offset present in the circuit with no potential or current flow. ADC Offset is typically set between -20 and 20.



The bq2060 uses the computed node voltages to calculate the reported voltages. It does not compute reported cell voltages greater than the selected number of nodes. If no individual cell voltages are to be measured, LCC1–LCC0 should be set to 00 and the top of the battery stack should be connected to a voltage divider to the VCELL<sub>4</sub> input.

The bq2060 computes the reported voltages as

```
\label{eq:Voltage} \begin{split} & \text{Voltage()} = \text{Vn4}(\text{LCC1-LCC0} = 11 \text{ or } 00) - \text{V}_{\text{sr}} \\ & \text{Voltage()} = \text{Vn3}(\text{LCC1-LCC0} = 10) - \text{V}_{\text{sr}} \\ & \text{Voltage()} = \text{Vn2} \text{ (LCC1-LCC0} = 01) - \text{V}_{\text{sr}} \\ & \text{VCELL4} = \text{Vn4- Vn3} \\ & \text{VCELL3} = \text{Vn3- Vn2} \\ & \text{VCELL2} = \text{Vn2- Vn1} \\ & \text{VCELL1} = \text{Vn1- V}_{\text{sr}} \end{split}
```

#### Current

The bq2060 scales Current() to mA units by the 16-bit value *ADC Sense Resistor Gain* in EE 0x68–0x69. Adjusting *ADC Sense Resistor Gain* from its nominal value provides a method to calibrate the current readings for variances in the ADC gain, internal voltage reference, and sense resistor value. The bq2060 calculates Current() by

Current =

The nominal value for ADC Sense Resistor Gain is given by Equation 4.

#### **VFC**

To calibrate the coulomb counting measurement for VFC gain errors and sense resistor tolerance, the value of VFC Sense Resistor Gain EE 0x6a-0x6b may be adjusted from its nominal value.

The nominal value of VFC Sense Resistor Gain is given by Equation 5.

The bq2060 VFC circuit can introduce a signal opposite in sign from that of the inherent device and circuit offset to cancel this error. The offset calibration routine is initiated with commands to ManufacturerAccess().

The bq2060 calculates the offset with the calibration routine and stores the calibration value using the least 21 bits of VFC Offset in EE 0x5e–0x60.

The least 20 bits store the offset calibration value (OCV). The sign of the offset calibration value is positive if the 21st bit is 0.

$$OCV = \frac{0.6 \text{ V}}{\text{VFC Offsets} - 0}$$
(32)

#### **Temperature**

The bq2060 uses *Temperature Offset* in EE 0x61 to calibrate the Temperature() function for offset. The required offset adjustment, TOFF (C), sets *Temperature Offset* according to the equation

Temperature Offset = TOFF 
$$\times$$
 10 (33)

where

 $-12.8 \le TOFF \le 12.7$ 

# **CONSTANTS AND STRING DATA**

#### **EEPROM Constants**

Check/Byte 1 EE 0x00-0x01 and Check Byte 2 EE 0x7e-0x7f must be programmed to 0x3c7f and 0xa55a, respectively.



#### **Specification Information**

Specification Information EE 0x14–0x15 stores the default value for the SpecificationInfo() function. It is stored in EEPROM in the same format as the data returned by the SpecificationInfo().

#### **Manufacture Date**

Manufacture Date EE 0x16-0x17 stores the default value for the ManufactureDate() function. It is stored in EEPROM in the same format as the data returned by the ManufactureDate().

#### **Serial Number**

Serial Number EE 0x18–0x19 stores the default value for the SerialNumber() function. It is stored in EEPROM in the same format as the data returned by the SerialNumber().

#### **Manufacturer Name Data**

Manufacturer Name Length EE 0x20 stores the length of the desired string that is returned by the ManufacturerName() function. Locations EE 0x21-0x2a store the characters for ManufacturerName() in ASCII code.

#### **Device Name Data**

Device Name Length EE 0x30 stores the length of the desired string that is returned by the DeviceName() function. Locations EE 0x31-0x37 store the characters for DeviceName() in ASCII code.

#### **Device Chemistry Data**

Device Chemistry Length EE 0x40 stores the length of the desired string that is returned by the DeviceChemistry() function. Locations EE 0x41–0x44 store the characters for DeviceChemistry() in ASCII code.

### **Manufacturers Data Length**

Manufacturers Data Length EE 0x50 stores the length of the desired number of bytes that is returned by the ManufacturersData() function. It should be set to 7.

www.ti.com

11-Nov-2025

#### PACKAGING INFORMATION

Orderable part number	Status	Material type	Package   Pins	Package qty   Carrier	<b>RoHS</b> (3)	Lead finish/ Ball material	MSL rating/ Peak reflow	Op temp (°C)	Part marking (6)
BQ2060SS-E207-EP	Active	Production	SSOP (DBQ)   28	40   TUBE	Yes	NIPDAU	Level-2-260C-1 YEAR	0 to 70	2060SS E207
BQ2060SS-E207-EP.B	Active	Production	SSOP (DBQ)   28	40   TUBE	Yes	NIPDAU	Level-2-260C-1 YEAR	0 to 70	2060SS E207
BQ2060SS-E207TR-EP	Active	Production	SSOP (DBQ)   28	2500   LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	0 to 70	2060SS E207
BQ2060SS-E207TR-EP.B	Active	Production	SSOP (DBQ)   28	2500   LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	0 to 70	2060SS E207
BQ2060SS-E411	Active	Production	SSOP (DBQ)   28	40   TUBE	Yes	NIPDAU	Level-2-260C-1 YEAR	-	2060SS E411
BQ2060SS-E411.B	Active	Production	SSOP (DBQ)   28	40   TUBE	Yes	NIPDAU	Level-2-260C-1 YEAR	0 to 70	2060SS E411
BQ2060SS-E411TR	Active	Production	SSOP (DBQ)   28	2500   LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	-	2060SS E411
BQ2060SS-E411TR.B	Active	Production	SSOP (DBQ)   28	2500   LARGE T&R	Yes	NIPDAU	Level-2-260C-1 YEAR	0 to 70	2060SS E411

<sup>(1)</sup> Status: For more details on status, see our product life cycle.

<sup>(2)</sup> Material type: When designated, preproduction parts are prototypes/experimental devices, and are not yet approved or released for full production. Testing and final process, including without limitation quality assurance, reliability performance testing, and/or process qualification, may not yet be complete, and this item is subject to further changes or possible discontinuation. If available for ordering, purchases will be subject to an additional waiver at checkout, and are intended for early internal evaluation purposes only. These items are sold without warranties of any kind.

<sup>(3)</sup> RoHS values: Yes, No, RoHS Exempt. See the TI RoHS Statement for additional information and value definition.

<sup>(4)</sup> Lead finish/Ball material: Parts may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

<sup>(5)</sup> MSL rating/Peak reflow: The moisture sensitivity level ratings and peak solder (reflow) temperatures. In the event that a part has multiple moisture sensitivity ratings, only the lowest level per JEDEC standards is shown. Refer to the shipping label for the actual reflow temperature that will be used to mount the part to the printed circuit board.

<sup>(6)</sup> Part marking: There may be an additional marking, which relates to the logo, the lot trace code information, or the environmental category of the part.



# **PACKAGE OPTION ADDENDUM**

www.ti.com 11-Nov-2025

Multiple part markings will be inside parentheses. Only one part marking contained in parentheses and separated by a "~" will appear on a part. If a line is indented then it is a continuation of the previous line and the two combined represent the entire part marking for that device.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

# **PACKAGE MATERIALS INFORMATION**

www.ti.com 23-May-2025

# TAPE AND REEL INFORMATION





A0	Dimension designed to accommodate the component width
В0	Dimension designed to accommodate the component length
K0	Dimension designed to accommodate the component thickness
W	Overall width of the carrier tape
P1	Pitch between successive cavity centers

## QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



#### \*All dimensions are nominal

Device	Package Type	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
BQ2060SS-E207TR-EP	SSOP	DBQ	28	2500	330.0	16.4	6.5	10.3	2.1	8.0	16.0	Q1
BQ2060SS-E411TR	SSOP	DBQ	28	2500	330.0	16.4	6.5	10.3	2.1	8.0	16.0	Q1



www.ti.com 23-May-2025




## \*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
BQ2060SS-E207TR-EP	SSOP	DBQ	28	2500	350.0	350.0	43.0
BQ2060SS-E411TR	SSOP	DBQ	28	2500	350.0	350.0	43.0

# **PACKAGE MATERIALS INFORMATION**

www.ti.com 23-May-2025

# **TUBE**

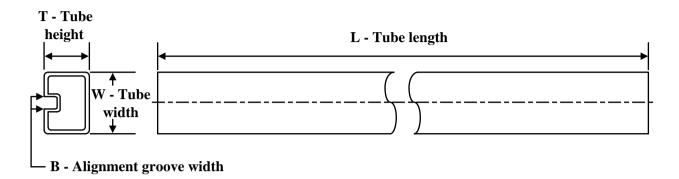


\*All dimensions are nominal

Device	Package Name	Package Type	Pins	SPQ	L (mm)	W (mm)	T (µm)	B (mm)
BQ2060SS-E207-EP	DBQ	SSOP	28	40	505.46	6.76	3810	4
BQ2060SS-E207-EP.B	DBQ	SSOP	28	40	505.46	6.76	3810	4

DBQ (R-PDSO-G28)

# PLASTIC SMALL-OUTLINE PACKAGE

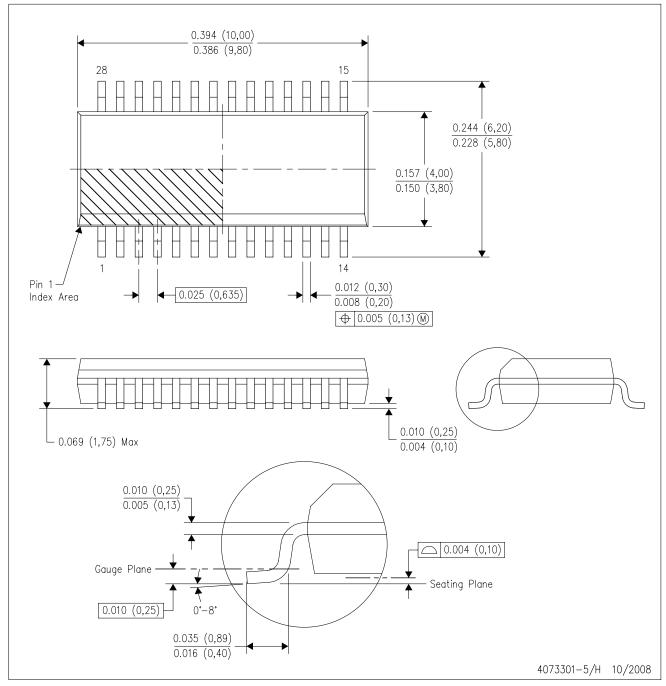

NOTES:

- A. All linear dimensions are in inches (millimeters).
- B. This drawing is subject to change without notice.
- C. Body dimensions do not include mold flash or protrusion not to exceed 0.006 (0,15) per side.
- D. Falls within JEDEC MO-137 variation AF.



## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you fully indemnify TI and its representatives against any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale, TI's General Quality Guidelines, or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products. Unless TI explicitly designates a product as custom or customer-specified, TI products are standard, catalog, general purpose devices.

TI objects to and rejects any additional or different terms you may propose.

Copyright © 2025, Texas Instruments Incorporated

Last updated 10/2025